



ErisTerminal® SIP Deskset

VSP735

User Guide



Congratulations

on your purchase of this VTech product. Before using this product, please read **Important Safety Information** on page 4 of this manual. Please thoroughly read this user's manual for all the feature operations and troubleshooting information necessary to install and operate your product. You can also visit our website at **businessphones.vtech.com** or call **1 (888) 370-2006**.

Please note the serial number of your product, which can be found on the back of the deskset. Save your sales receipt and original packaging in case it is necessary to return your telephone for warranty service.

Important Safety Information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. This product should be installed by a qualified technician.
2. This product should only be connected to the host equipment and never directly to the network such as Public Switch Telephone Network (PSTN) or Plain Old Telephone Services (POTS).
3. Read and understand all instructions.
4. Follow all warnings and instructions marked on the product.
5. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
6. Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
7. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
8. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied at the premises, consult your dealer or local power company.
10. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
11. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
12. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose

you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.

13. Do not overload wall outlets and extension cords.
14. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled onto the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - E. If the product has been dropped and the telephone base and/or handset has been damaged.
 - F. If the product exhibits a distinct change in performance.
15. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
16. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
17. Only put the handset of your telephone next to your ear when it is in normal talk mode.
18. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
19. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
20. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
21. In wall mounting position, make sure to mount the telephone base on the wall by aligning the eyelets with the mounting studs of the wall plate. Then slide

the telephone base down on both mounting studs until it locks into place. Refer to the full instructions in **Deskset Installation** in this user guide.

22. CAUTION: Keep small metallic objects such as pins and staples away from the handset receiver.

SAVE THESE INSTRUCTIONS

Eris Terminal SIP Deskset

VSP735

User Guide

Table of Contents

Important Safety Information

Important safety instructions..... 4

Introduction

Deskset features..... 9

Quick Reference Guide

Front panel features 10

Dial pad and audio keys 11

Rear panel connection ports..... 11

Programmable keys..... 12

Deskset Installation

Overview..... 13

Network requirements 13

Location 14

Connecting the phone 15

Installing the phone 16

To mount the phone on the wall..... 17

Wall mount to tabletop installation... 19

Using the Phone

Idle screen 20

Idle mode screen icons..... 20

Active call screen icons 20

Programmable feature key lights..... 21

Using the menu 21

Main menu items 22

Making calls..... 22

Answering calls..... 24

Putting a call on hold 25

Managing calls with FLASH..... 26

Forwarding calls 27

Transferring calls 29

Making a conference call..... 32

Setting up a Network Conference.... 33

Retrieving messages..... 34

Using a shared line..... 35

Call monitoring..... 35

Putting a shared-line call on hold 35

“Barging in” 36

Busy lamp field 37

Paging 38

Automatic Call Distribution 39

Phone Features

Using the Features menu 40

Navigating menus..... 40

Using the Call menu 41

Using the local directory 46

Blacklist 49

Call history..... 49

Speed Dial..... 53

Entering speed dial numbers..... 53

Cordless Headset

| | |
|--|----|
| Registering an optional cordless headset..... | 54 |
| Deregistering a cordless headset.... | 55 |
| Deregistering the cordless headset without the deskset..... | 55 |
| Cordless accessory registration and deregistration time-out..... | 55 |

Cordless Handset

| | |
|---|----|
| Registering an optional cordless handset..... | 56 |
| Deregistering the cordless handset. | 57 |

Status

| | |
|------------------------------------|----|
| Finding the firmware version | 58 |
|------------------------------------|----|

Configuring the Phone

| | |
|-----------------------------------|----|
| Using the User Settings menu..... | 59 |
| Preferences | 60 |
| Setting the language..... | 60 |
| Setting the date and time..... | 61 |
| Display..... | 62 |
| Audio | 63 |
| Configuring the programmable keys | 66 |

WebUI

| | |
|-------------------------|----|
| Using the WebUI | 67 |
| Status | 69 |
| Call Settings | 70 |
| User Preferences..... | 72 |
| Programmable Keys | 74 |
| Directory | 77 |
| Speed Dial | 80 |

Troubleshooting

| | |
|---------------------|----|
| General issues..... | 81 |
|---------------------|----|

Specifications

| | |
|--|----|
| Electrical and environmental specifications..... | 82 |
|--|----|

Soft Keys

| | |
|-------------------------|----|
| Index of soft keys..... | 83 |
|-------------------------|----|

Special Characters

| | |
|-----------------------------------|----|
| Entering special characters | 84 |
|-----------------------------------|----|

Maintenance

| | |
|-------------------------------------|----|
| Taking care of your telephone | 85 |
|-------------------------------------|----|

GPL License Information

| | |
|------------------------|----|
| GPL code requests..... | 86 |
|------------------------|----|

Introduction

This user's manual contains detailed instructions for using your VSP735 deskset. Please read this user's manual before using your telephone.

Deskset features

The VTech VSP735 deskset is full-featured SIP endpoint business phone designed to work with popular hosted IP PBX services and on-premise SIP PBXs. Once you have ordered and configured your PBX service, the deskset enables you to make and receive calls as you would with any other business phone. The deskset provides calling features such as hold, transfer, conferencing, speakerphone, quick-dial numbers and one-touch voicemail access.

There are two ports, known as the Ethernet port and PC port, at the back of the deskset. The Ethernet port allows the VSP735 deskset to connect to the hosted IP PBX via a router. The PC port is for another device such as a personal computer to connect to the local area network through the deskset.

The VSP735 deskset supports paging and call transfers between system extensions and can connect you and two other parties on the same conference call.

The telephone also has 16 dual-function programmable keys. You or your system administrator can program these keys for functions such as quick dial, redial, Do Not Disturb, call forwarding, message retrieval, and call parking.

The keys can also be programmed to monitor other desksets in the system. You can press the key for a monitored extension to answer a call at your own deskset. The programmable keys have two-color LEDs to indicate call activity. For more information about the programmable keys, see page 11.

The VSP735 IP Phone features include:

- Large backlit Liquid Crystal Display
- Speakerphone, Hold and Mute
- Up to 5 lines
- Up to 6 active calls
- 3-way conferencing
- 16 dual-function programmable keys
- Message Waiting alert LED
- Dual GigE Ethernet ports
- Power over Ethernet enabled
- DECT cordless headset and corded headset support
- 200-entry local directory

Quick Reference Guide

Front panel features

MESSAGE WAITING indicator

Illuminates when you have a new voice message.

Programmable keys

Can be programmed to perform various functions or access various features.

For example:

- Press to access a line to make a call.
- Press to dial a monitored extension or a quick-dial number.
- Press to turn a feature such as Do Not Disturb on and off.

Key label card

To write labels, remove the plastic cover (secured by tabs top, bottom and sides).

Corded headset input (on side)

LOWER

Press to access the second level (alternate function) of a programmable key.



SPEAKER

Press to turn the speakerphone on or off.

MIC

SCREEN


Displays call information, soft key labels, and deskset menus.

SOFT KEYS

Perform different actions depending on the on-screen labels.

NAVIGATION KEY

While in menus, press ▼ or ▲ to scroll through the menu, highlight items or change settings. While entering names, numbers or other text, press ◀ or ▶ to move the cursor left or right.

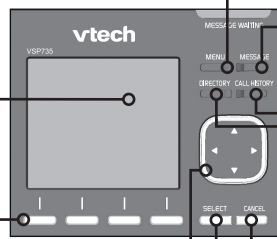

MENU

Press to display the deskset menu.

MESSAGE

Press to select a mailbox.

CALL HISTORY

Press to access Call History.

DIRECTORY

Press to select a Directory.

CANCEL

While in a menu, press to cancel an operation and exit the menu.

SELECT

Press to select a menu item.

Quick Reference Guide

Dial pad and audio keys

Dial pad

Use to dial numbers and enter text. For a list of special characters you can enter with the dial pad, see page 84.

MUTE

During a call, press to prevent your voice from being heard.

VOLUME

- During a call, press to adjust the listening volume.
- During message playback, press to adjust the playback volume.
- When the phone is idle, press to adjust the ringer volume.



HEADSET

When a headset is connected to the deskset, press to make, answer, or hang up a call.

FLASH

During a call, press to answer an incoming call when you receive a call waiting alert.

HOLD

Press to put a call on hold.

DND

Press to turn Do Not Disturb on or off.

TRANSFER

Press to transfer a call to an extension.

CONFERENCE


Press to add another extension or outside line to an existing call.

REDIAL

Press to view list of dialed calls.

SPEAKER


Press to turn the speakerphone on or off.

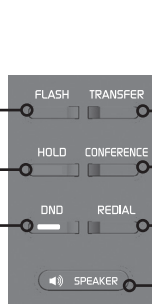

Rear panel connection ports

Ethernet/LAN port

Power adapter jack

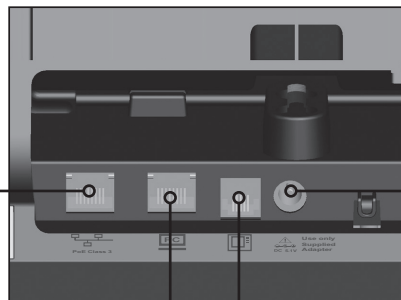

PC port

Reserved for future use

Do not connect to other equipment.

Quick Reference Guide

Programmable keys

The table below lists the default settings for the programmable keys. The key assignments on your phone may be different. Some keys may be programmed as Quick Dial keys, for example. Ask your system administrator about your phone's programmable key configuration.

| Key Number | Setting |
|------------|------------------|
| 1 | Line 1* |
| 2 | Line 1 |
| 3 | Line 1 |
| 4 | Directory |
| 5 | Call History |
| 6 | Redial |
| 7 | Messages |
| 8 | Do Not Disturb |
| 9 | Call Forward All |
| 10 | None |
| 11 | None |
| 12 | None |
| 13–32 | None |

* Your system administrator can assign more than one key to a line. For example, you might be able to activate Line 1 with keys 1 and 2, and Line 2 with keys 3 and 4. Consult your administrator regarding your phone's configuration.

Other possible programmable key settings

- Quick Dial
- BLF—Busy lamp field keys let you monitor other phones. The key LED indicates call status. See “Programmable feature key lights” on page 21.
- ACD—If you are subscribed to this feature, pressing the Automatic Call Distribution (ACD) key displays the ACD state menu.
- Call Forward Busy or Call Forward No Answer
- Page—If enabled, press the Page key to call one or more phones.
- Multicast Page—This feature allows you to call up to ten paging zones.
- Park Call—Dials the access code to park your current call.
- Retrieve Parked Call—Dials the access code to retrieve a parked call.
- In Call DTMF—Dials a string of numbers while you are on a call.
- Call Return—Dials the number of the last missed call.
- Group Call Pickup—Dials the Group Call Pickup code, allowing you to answer a call ringing at another extension.
- Direct Call Pickup—Dials the Direct Call Pickup code, allowing you to answer a call ringing at a specific extension. After pressing the key, you may need to enter the extension number manually.

Deskset Installation

Overview

This section assumes that your network infrastructure is established and that your IP PBX service has been ordered and configured for your location.

Install the phone close to a router or network switch. You can power the phone using the supplied power adapter or Power over Ethernet (PoE—Class 3). If you are not using PoE, install the phone near a power outlet not controlled by a wall switch. The phone can be placed on a flat surface or vertically mounted on the wall.

For customer service or product information, visit our website at **businessphones.vtech.com** or call **1 (888) 370-2006**.

Network requirements

A switched network topology is recommended for your LAN. The office LAN infrastructure should use Cat.-5/Cat.-5e cable.

The LAN connections to the deskset(s) should all be wired. However, wireless connections to other devices (such as laptops) in your office will not impede performance.

All desksets must reside on a single subnet. A Dynamic Host Configuration Protocol (DHCP) server is recommended and must be on the same subnet as the desksets so that IP addresses can be auto-assigned. In most cases, your network router will have a DHCP server. By default, the deskset has DHCP enabled for automatic IP address assignment.

Note: Some DHCP servers have default settings that limit the number of network IP addresses assigned to devices on the network. You should log in to your server to confirm that the IP range is sufficient.

If no DHCP server is present, you can assign static IPs to desksets. You can assign a static IP address using the deskset menus. From the deskset Main Menu, go to **Admin settings > Network setting > Set static IP**. See the Administrator and Provisioning Guide for more information. If you do not have a DHCP server or do not manually assign static IPs, you will not be able to access the WebUI and/or enable automatic time updates from an NTP server.


A DNS server is recommended to resolve the path to the Internet and to a server for firmware and configuration updates. If necessary, the system administrator can also download upgrade files and use the WebUI to update the deskset firmware and/or configuration settings manually.

Deskset Installation

Location


Avoid placing the deskset too close to:

- Communication devices such as television sets, DVD players, or other cordless telephones
- Excessive heat sources
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting
- Excessive dust sources such as a workshop or garage
- Excessive moisture
- Extremely low temperature
- Mechanical vibration or shock such as on top of a washing machine or work bench

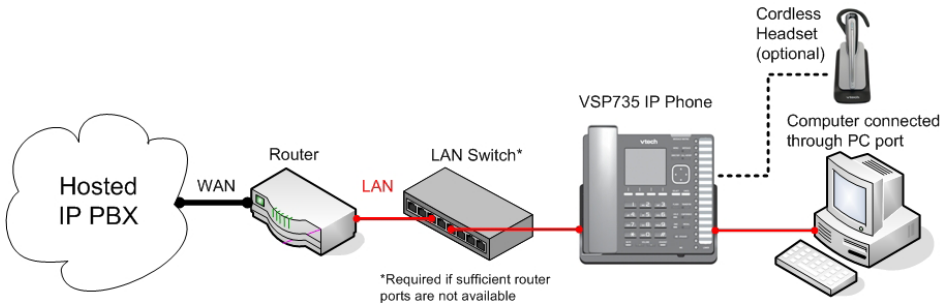

Deskset Installation

Connecting the phone

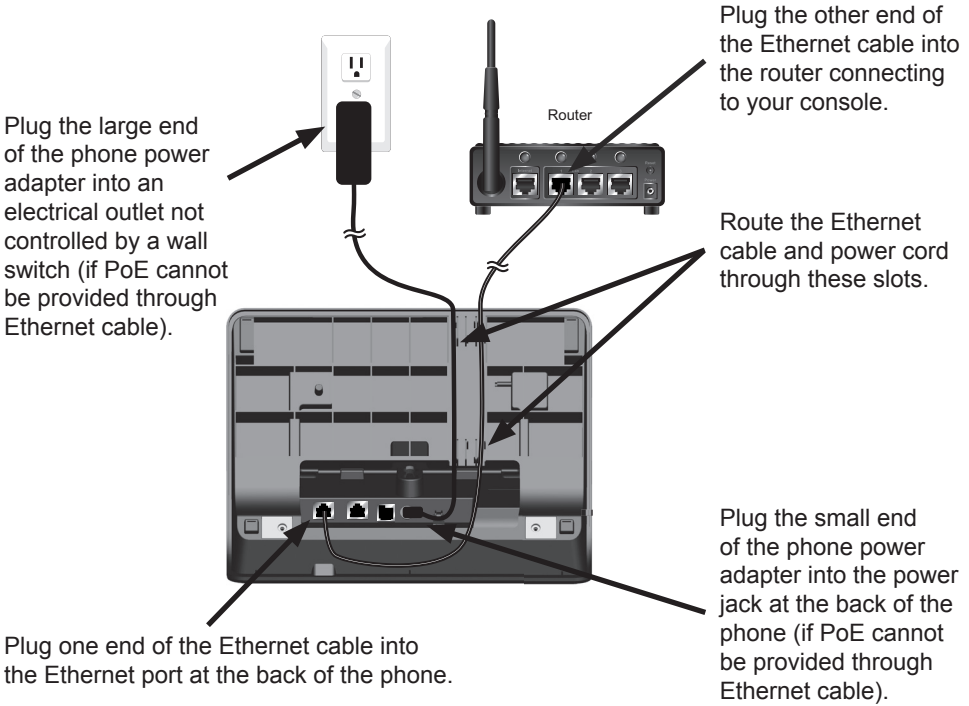

IMPORTANT INFORMATION

1. Use only a compatible VTech power adapter.
To order a replacement power adapter, visit our website at **businessphones.vtech.com**, or call **1 (888) 370-2006**.
2. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Deskset Installation

Installing the phone



Make sure you plug in the Ethernet cable before powering up the phone.

1. Lift the kickstand and flip it back. Let it rest at its maximum angle.



2. Snap the stand onto the two snap points on the deskset base.
3. Plug the end of the coiled handset cord into the jack on the left side of the telephone.

 


4. Lift the deskset base to the desired angle. There are three pairs of grooves designed to hold the phone at different angles for optimum visibility.
5. Snap the kickstand into the desired grooves until it locks into place.



Deskset Installation

Installing the phone (continued)


6. Plug one end of the Ethernet cable into the Ethernet port on the rear of the deskset (marked by ) , and plug the other end of the cable into your network router or switch.

If the deskset is not using power from a PoE-capable network router or switch:

- a. Connect the supplied power adapter to the deskset power jack.
- b. Plug the power adapter into an electrical outlet that is not controlled by a wall switch.

If there is a networked computer and no extra Ethernet wall ports near the phone, then the phone and PC can share the same network connection.


To share a network connection with a PC:

1. Plug a Cat.-5 Ethernet cable into the PC port on the phone (marked by ) .
2. Plug the other end of the Cat.-5 Ethernet cable into your computer's Ethernet port.

 - If a PC is connected to your network through a phone, any phone resets and power or network interruptions will disrupt the PC's connection to the network.


To mount the phone on the wall


1. Prepare the wall-mount screws. The deskset will fit onto wall-mount screws with centers $3 \frac{1}{4}$ inches (8.2 cm) or 4 inches (10.2 cm) apart. Most standard wall plates have screw centers $3 \frac{1}{4}$ inches (8.2 cm) apart.
2. If the deskset stand is attached, detach the stand.
 - a. Lift the phone front panel to release the kickstand from the grooves.
 - b. Snap the stand off the two snap points on the deskset base.
3. Put the corded handset aside. Use a coin to rotate the handset tab 180 degrees. The protruding edge holds the corded handset when the phone is mounted on the wall.

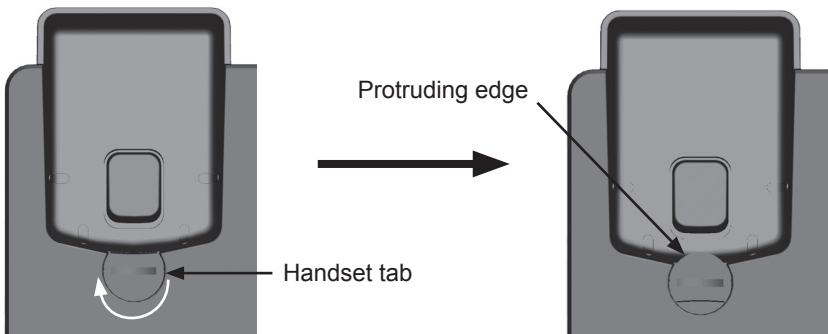

Deskset Installation

 To mount the phone on the wall (continued)

4. Plug one end of the Ethernet cable into the Ethernet port on the rear of the deskset (marked by ) .
5. If the deskset is not using power from a PoE-capable network router or switch, connect a power adapter to the deskset power jack.
6. Align the upper wall mounting hole on the back of the phone with the upper tab of the standard wall plate. Make sure the lower wall mounting hole on the mounting bracket also aligns with the lower tab of the standard wall plate. Push the phone down until it clicks securely in place.

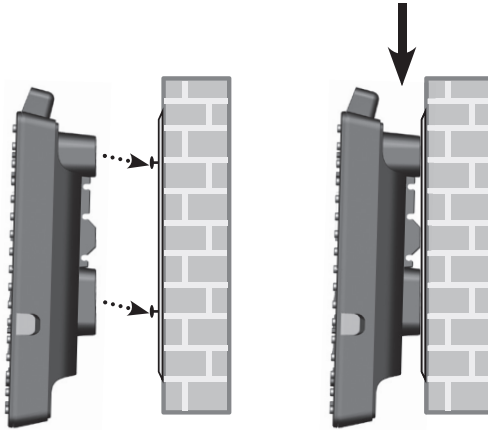


7. Bundle the Ethernet cable and power adapter cord neatly with twist ties.
8. Plug the Ethernet cable into the router your console is connected to and the power adapter into an electrical outlet not controlled by a wall switch if you are not using PoE.

Deskset Installation

Wall mount to tabletop installation

To change the phone from the wall mount position to tabletop position, follow the steps below.

1. If the Ethernet cable and power adapter cord are bundled, untie them first.
2. Push the phone up to remove it from wall. Unplug the Ethernet cable from the router and the power adapter from the power outlet.
3. See “Installing the phone” section above.

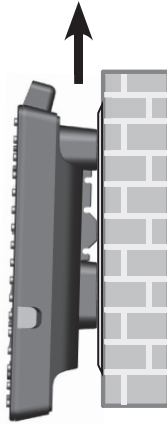


Using the Phone

Idle screen

The Idle screen appears after the phone is connected and configured for your SIP PBX service. The Idle screen indicates that you have no active or held calls.

From the Idle screen, you can press:

- **Line** to select another line. When you make a call, the phone will use this line. See “Making calls” on page 22.
Note: **Line** appears only if more than one SIP account is registered to your phone.
- **CallFwd** to configure Call Forward settings.
- **Directory** to view the directories. See “Using the local directory” on page 46.
- **Settings** to view the User settings menu. See “Configuring the Phone” on page 59.

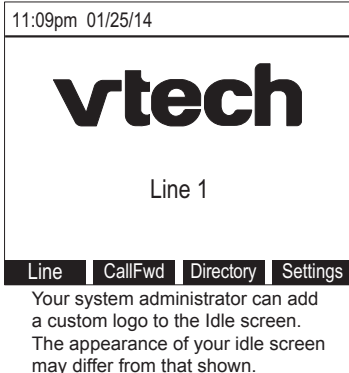

Idle mode screen icons

In idle mode, the following screen icons indicate your phone's current settings.

| Icon | Status |
|------|--|
| | Call Forward All is on. See “To set Call forward:” on page 42. |
| | The ringer is off. |
| | Do Not Disturb is on. See “To set Do Not Disturb:” on page 42. |
| | The Ethernet cable is unplugged or the network is down. |

Active call screen icons

During a call, the following screen icons indicate the call's status.

| Icon | Status |
|------------|---|
| | Audio is coming through a headset after the HEADSET key was pressed. |
| | The call is being handled by the Cordless Handset (optional accessory). |
| | The speakerphone is active. |
| 1/2 | Call counter—more than one call is active. |
| | More than one call is active. Press ▼ or ▲ to view another call. |

Using the Phone


Programmable feature key lights

The programmable feature key lights indicate call status and other information.

| Key | Light Activity | Description |
|-----------------------------|-------------------------|---|
| Line | Flashing ORANGE | Line is unregistered |
| | Solid GREEN | On a call or dialing |
| | Quickly flashing GREEN | Ringing incoming call |
| | Slowly flashing GREEN | Held call |
| | Steady ORANGE | Cordless Handset in use |
| Shared line key | Steady ORANGE | The shared line is on a call |
| | Slowly flashing ORANGE | The shared line is on hold |
| Do not disturb | Off | DND is off |
| | Steady ORANGE | DND is on |
| Call forward | Off | Call forward All is off |
| | Steady ORANGE | Call forward All is on |
| Busy lamp field | Off | Monitored phone is idle |
| | Steady ORANGE | Monitored phone is on a call or has a held call |
| | Quickly flashing ORANGE | The monitored phone is ringing |
| | Flashing ORANGE | Registration error. |
| Automatic Call Distribution | Quickly flashing GREEN | ACD agent "wrap up" state |
| | Steady GREEN | ACD agent ready state |
| | Slowly flashing GREEN | ACD agent unavailable state |
| | Steady ORANGE | ACD logged on |
| | Slowly flashing ORANGE | ACD logged off |
| Quickly flashing ORANGE | ACD subscription error | |

Using the menu

1. Press **MENU** to show the main menu.
2. Press ▼ or ▲ to highlight menu items.
3. Press **SELECT** to select a highlighted menu item. **Note:** You can also press a dial pad key for a numbered item. For example, after pressing **MENU**, you can press **3** on the dial pad to view the User settings menu.
4. Press **SELECT** or an appropriate soft key to save changes.

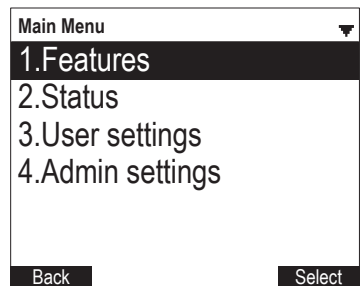

Using the Phone

5. Press **CANCEL** to cancel an operation, exit the menu display or return to the idle screen.

Main menu items


1. Features (see page 40)
2. Status (see page 58)
3. User Settings (see page 59)
4. Admin Settings (available only to your system administrator)

Making calls

You can make a call at any time by choosing an off-hook method (such as lifting the handset, pressing a Line key, or pressing **HEADSET** or **SPEAKER**), and then dialing a number. When the phone is in idle mode or has calls on hold, you can make a call by pre-dialing a phone number and then going off hook.


To go off hook and make a call:

1. To use the default line, lift the handset, press **HEADSET**, or press **SPEAKER**. To use a specific line, press a Line key. You hear a dial tone.
2. Use the key pad to enter the desired phone number.

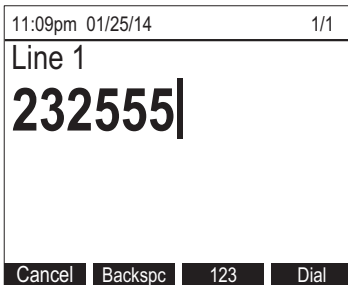

Note that the dialing screen soft keys are programmable and may differ from what is shown here.

- Press **Backspc** if you enter an incorrect digit.
 - Press **123** to change from entering digits to entering letters (if you need to enter a domain name as part of the number).
3. Press **Dial**, or, if the phone accepts the number as valid, it dials the number after a short delay.

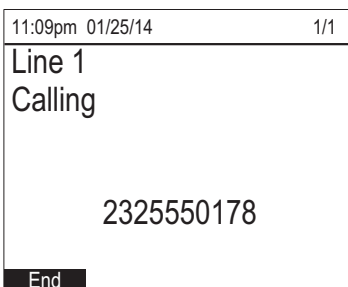


If Hotline is enabled, then the phone will automatically dial a pre-programmed number after going off hook.

Using the phone

Making calls (continued)


To make a call by pre-dialing:

1. Use the key pad to enter the desired phone number.

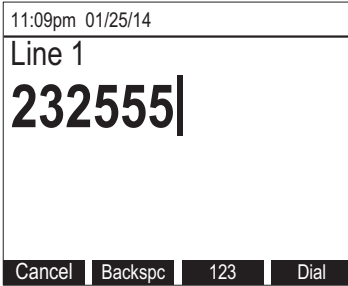

- Press **Backspc** if you enter an incorrect digit.
 - Press **123** to change from entering digits to entering letters (if you need to enter a domain name as part of the number).
2. Dial the number by:
 - Pressing **Dial**. The phone will use the preferred audio mode (speaker or headset) until you lift the handset.
 - Lifting the handset.
 - Pressing the desired Line key.
 - Pressing **SPEAKER** or **HEADSET**.

When the call is answered, the active call screen appears.

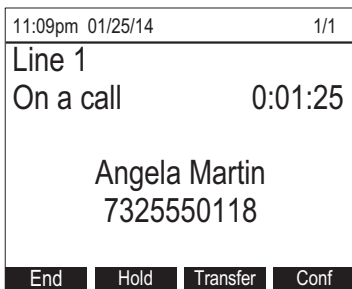

To end the call, hang up or press **End**. If you are on speakerphone and the handset is “on hook,” press **SPEAKER** to end your call.

To make a call using quick dial:


Press the desired quick dial programmable key or press and hold a dial pad key that matches the number of the desired speed dial entry. For example, to dial speed dial entry 4, press and hold 4 on the dial pad. See “Speed Dial” on page 53.


Using the Phone

Answering calls

To answer a call:

Lift the handset, or press **Answer** , **SPEAKER**, or **HEADSET**.

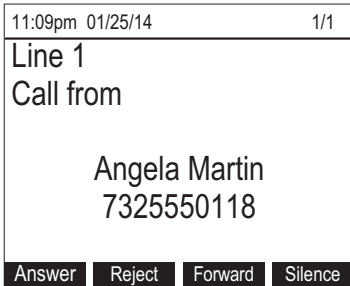

- You can also press a flashing green Line key to answer that incoming call.
- If you have multiple incoming calls, (as indicated by ) , press ▼ or ▲ to select the call you want to answer.

On the incoming call screen, you can also press:

- **Reject** to terminate the incoming call.
- **Forward** to forward the call to another number.
- **Silence** to mute the ringer.

If you don't respond to an incoming call, the phone displays a missed-call alert screen.



If a missed-call alert screen appears, you can press:

- **Clear** to return to the Idle screen.
- **View** to see the caller's information in the call history.
- **Callback** to immediately dial the caller's number.

Using the Phone

Putting a call on hold


Use this feature to hold one call while you access another. The deskset also puts calls on hold automatically when you answer another call, transfer a call, or create a conference.

See also, “Putting a shared-line call on hold” on page 35.

To put a call on hold:

During a call, press **HOLD** on the deskset.


The On hold screen appears. The programmable key for that line flashes green slowly.

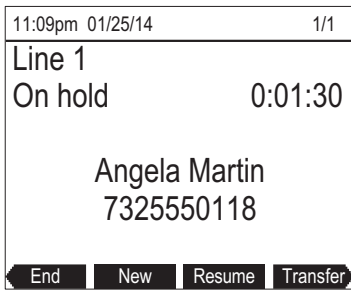

From the On hold screen, you can press:

- **End** to end the call
- **New** to dial a new call
- **Resume** to take the call off hold
- **Transfer** to transfer the held call to another party
- **Conf** to start a conference with the held call.

If another party puts you on hold, you may see the message **Held by far end**. This message depends on compatibility between phones and PBX types, and may not always appear. You can press **End** to end the call.


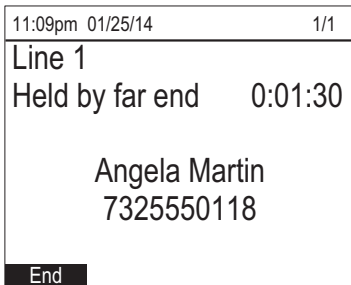


Using the Phone



Managing calls with FLASH

The **FLASH** key can be used to make or answer an additional call when already on a call.



- During a call, press FLASH to make a new call. Your current call will be put on hold.

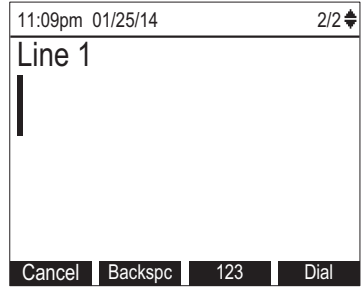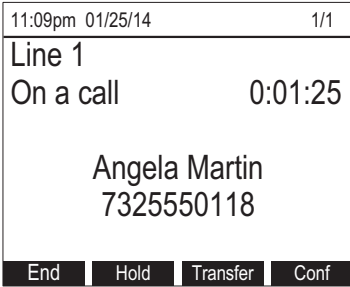

- During a call, press FLASH to answer an incoming call. Your current call will be put on hold.

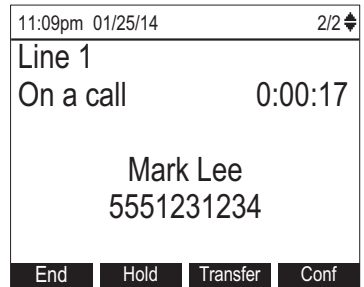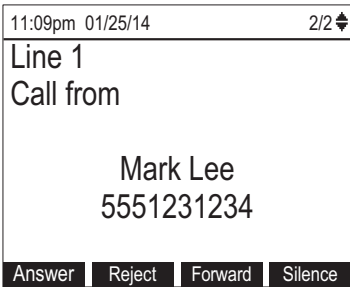

- During a call, press FLASH to retrieve a held call. Your current call will be put on hold.

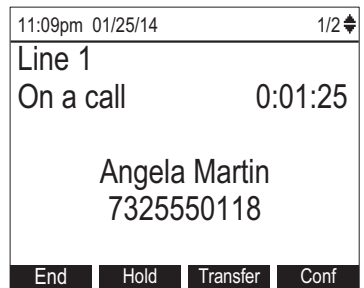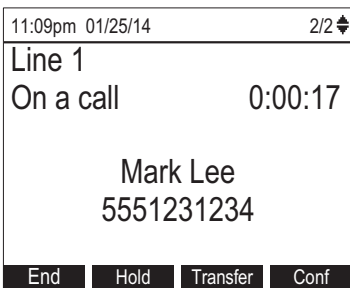

Note: The FLASH key will not function if you are managing three or more calls.

Using the Phone

Forwarding calls


You can forward an incoming call to another number, either by entering the number yourself, or by selecting a number from the directory, redial list, or call history.

Note: Your deskset Call Forward–No Answer setting will cancel the manual forwarding process if it takes effect first. For example, your deskset may be set to forward calls to voicemail after a call rings for 10 seconds, before you can reach the deskset to forward the call yourself. If you have problems forwarding calls because of the Call Forward–No Answer setting, ask your system administrator to extend your Call Forward–No Answer delay.

See also “Using the Call menu” on page 41.


To forward a call using manual entry:

1. When an incoming call appears, press **Forward** .
The deskset stops ringing and the **Forward to** screen appears.

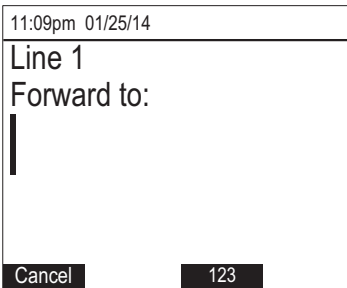

If you press **Cancel** , the deskset begins ringing again and the incoming call screen reappears.

2. Enter the number to which you want to forward the call.

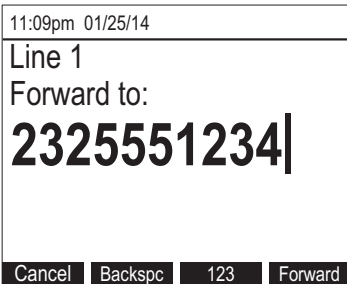


3. Press **Forward** . Your phone returns to idle mode if you have no other active calls.

Using the Phone

Forwarding calls (continued)

To forward a call using the directory, redial list, or call history:

1. When an incoming call appears, press **Forward** .
The deskset stops ringing and the **Forward to** screen appears.

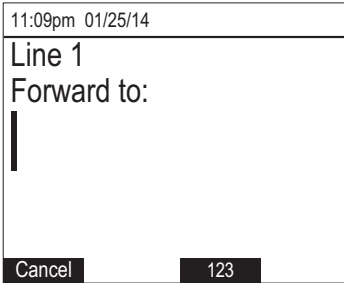

11:09pm 01/25/14


Line 1

Forward to:

|

Cancel 123

2. Press **DIRECTORY**, **REDIAL** or **CALL HISTORY** or a programmable key (if available) to display the directory, redial list, or call history. You can also navigate to the call history or directory using the deskset Features menu.

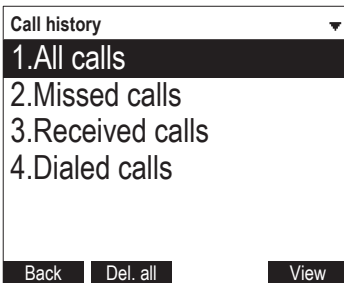

Call history ▾


1.All calls

2.Missed calls

3.Received calls

4.Dialed calls

Back Del. all View

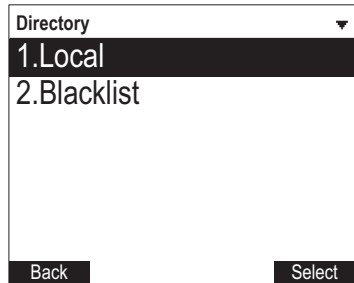


Directory ▾

1.Local

2.Blacklist

Back Select

Select the call history folder or directory you want to access.

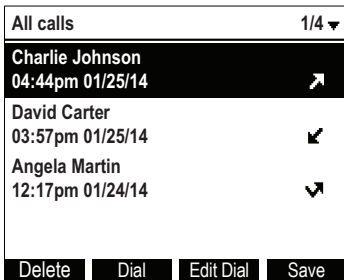


All calls 1/4 ▾

Charlie Johnson
04:44pm 01/25/14 ↗

David Carter
03:57pm 01/25/14 ↙

Angela Martin
12:17pm 01/24/14 ↘

Delete Dial Edit Dial Save

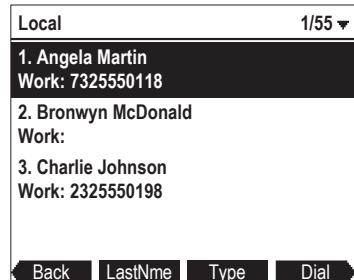

Local 1/55 ▾

1. Angela Martin
Work: 7325550118

2. Bronwyn McDonald
Work:

3. Charlie Johnson
Work: 2325550198

Back LastName Type Dial

3. If necessary, press ◀ or ▶ until **Dial** appears and then press **Dial** to forward the call to the number. Your phone returns to idle mode if you have no other active calls.

Using the Phone

Transferring calls

You can transfer a call to someone else at another phone.



If you talk to the transfer recipient before completing the transfer, you are making a “supervised” transfer.

However, the transfer recipient does not have to talk to you before receiving the transferred call. If you do not talk to the transfer recipient before transferring the call, you are making a “blind” transfer.


You can also transfer a call to a held call.

To transfer a call (supervised):

1. During a call, press **Transfer**. The call is automatically put on hold and the transfer setup screen appears.

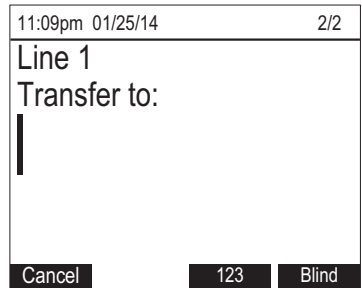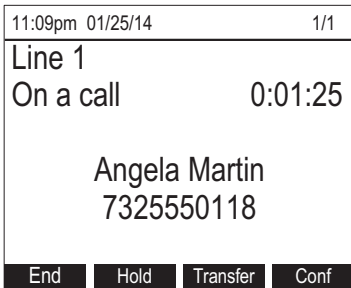


2. Dial the number to which you want to transfer the call. You can also use a number from a list, such as the Directory or Call History.
3. When the second caller answers, you can talk to the caller to notify them of the transfer, and then press **Transf** to transfer the call.

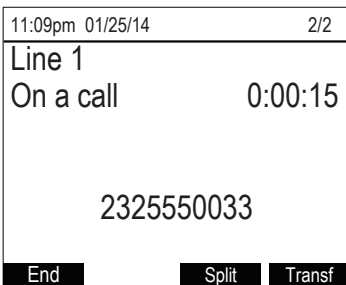

Using the Phone

Transferring calls (continued)

The **Call transferred** screen appears, and your phone returns to idle mode.


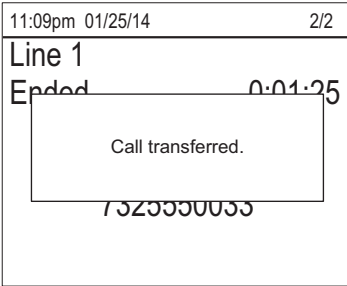


To cancel the transfer, press:


- **Cancel** on the transfer setup screen. The active call screen reappears.
- **End** when the second call is active. You will hang up on the second call.
- **Split** when the second call is active. You will stay connected to the second call. Your first call remains on hold.

To transfer a call (blind):

1. During a call, press **Transfer**. The call is automatically put on hold and the transfer setup screen appears.

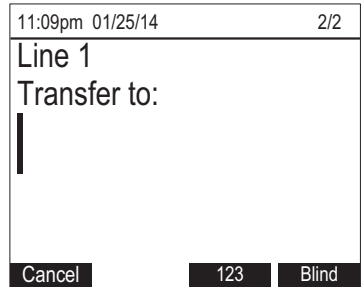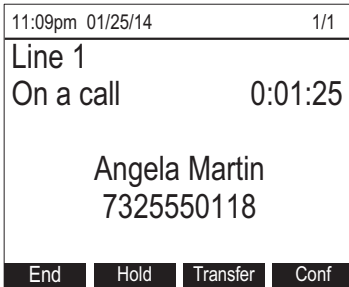

2. Press **Blind**.

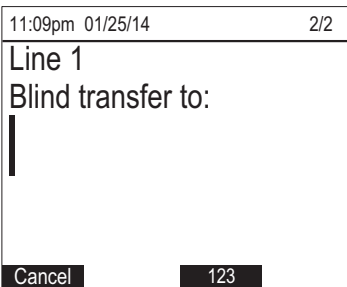

Using the Phone



Transferring calls (continued)

3. Dial the number to which you want to transfer the call. You can also use a number from a list, such as the Directory or Call History.
4. Press **Transf**, or wait for the phone to automatically dial, once it recognizes a valid number.

The **Call transferred** screen appears, and your phone returns to idle mode. If the blind transfer fails, then the transferred call will ring your phone back.


To transfer a call to a held call:

1. During a call, press ◀ or ▶ to view the next set of soft keys.
2. Press **XferCall**. The call is automatically put on hold, and a list of held calls appears.

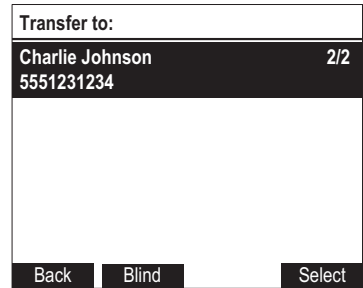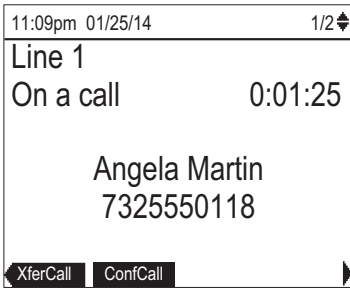

3. On the Transfer to target screen, press:
 - **Select** to talk to the held call, and then press **Transf** to transfer the first call.
 - **Blind**, and then press **Select** to transfer the first call to the held call immediately.

The **Call transferred** screen appears, and your phone returns to idle mode.

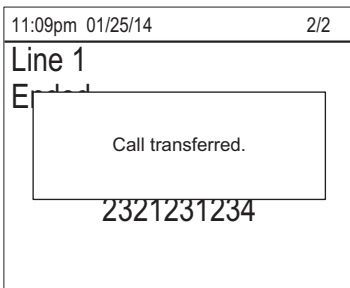



Using the Phone

Making a conference call



You can hold a conference call between yourself and two other callers.

To make a conference call:

1. During a call, press **Conf**. The call is automatically put on hold and the conference setup screen appears.

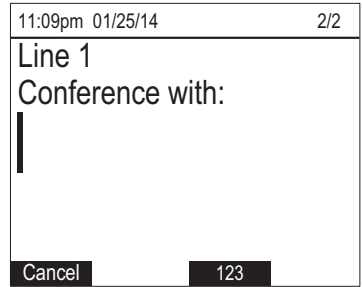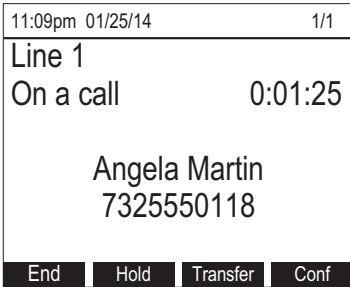

2. Dial the second number for the other party you want to join your conference. You can also use a number from a list, such as the Directory or Call History.
3. When the second call is established, press **Conf**. The conference begins and the conference screen appears.

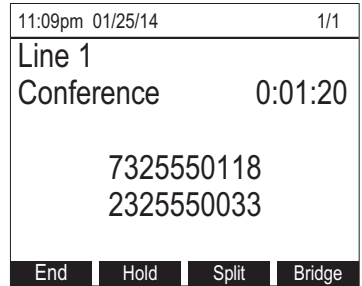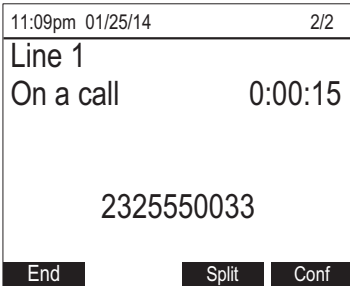

To cancel the conference setup, press:

- **Cancel** on the conference setup screen. The active call screen reappears.
- **End** when the second call is established. You will hang up on the second call and return to your first call.
- **Split** when the second call is established. You will remain on the second call and your first call remains on hold.


When you have an active call and a held call, you can also create a conference with the held call.

Using the Phone



Making a conference call (continued)

To create a conference with a held call:

1. During a call, press ◀ or ▶ to view the next set of soft keys.
2. Press **ConfCall**. The call is automatically put on hold, and a **Conf. with target** screen showing all calls on hold appears.
3. Highlight the desired call and press **Select**. You can now talk to the caller you selected.

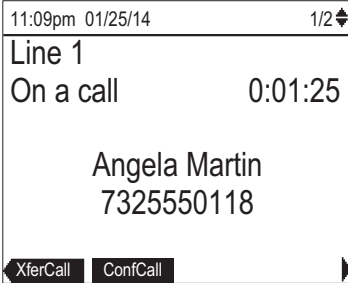

4. Press **Conf**. The conference begins and the conference screen appears.

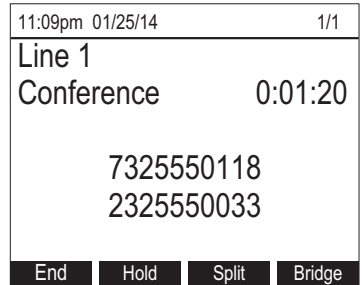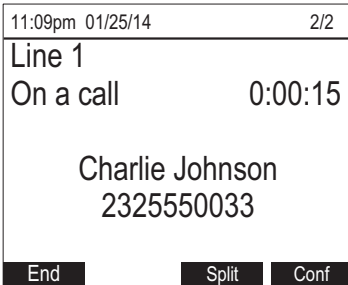

To end a conference call:

Press one of the following soft keys:

- **End**, which hangs up on both calls.
- **Split**, which puts both calls on hold. The screen shows information for the second call.
- **Bridge**, which joins both calls and returns your phone to idle mode.

Setting up a Network Conference


A Network Conference is hosted by your service provider and allows multiple parties to join a conference. A Network Conference works in a similar way to the regular conference described above, except that the **Split** and **Bridge** functions will not be available.

In addition, the soft keys **Add** and/or **AddCall** will appear during a conference, allowing you to add more parties to the ongoing conference call.

Using the Phone


Retrieving messages

The phone alerts you when you have a new message. The Message Waiting indicator also illuminates whenever you have new messages.

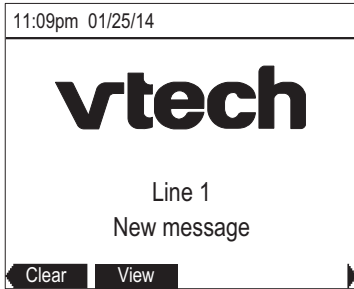

On the New Message alert screen, you can press:

- **Clear** to return to the Idle screen.
- **View** to access your messages. The Message menu appears.


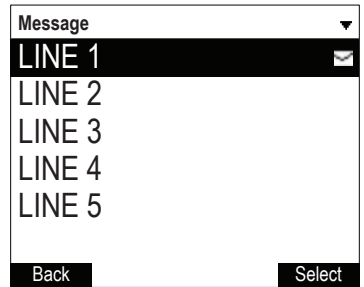


The Message menu displays the mailboxes you can access from your phone. If your phone has more than one line, you may be able to access multiple mailboxes. Press **▲** or **▼** to highlight the desired mailbox and press **SELECT** to access messages in that mailbox.

When there is no New Message alert screen, you can access the Messages menu using the deskset menu.

To view the Messages menu:

1. When the phone is idle, press **Menu**.
2. With **Features** highlighted, press **SELECT**.
3. Press **▼** to highlight **Message**, and then press **SELECT**. The Message menu appears.

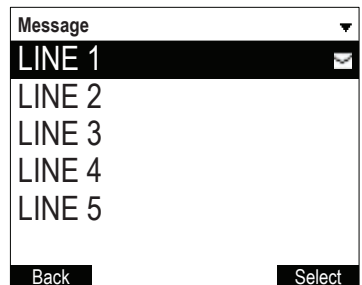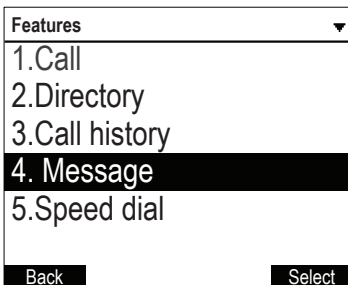

4. On the Message menu, highlight the desired line and then press **SELECT**.

Using the Phone

Using a shared line

Your phone may be configured to have one or more shared lines. This means that a group of phones, including yours, can make and receive calls on the same line. The shared line can have more than one programmable key assigned to it. Ask your system administrator for the configuration that applies to your deskset.


Incoming calls on a shared line will ring every deskset that shares that line. When someone answers the call, the other desksets stop ringing and return to idle mode. In contrast, calls on a private line will ring only your deskset.

Incoming calls on a shared line look identical to private-line calls, except that the **Forward** soft key does not appear on the incoming call screen.

When to Use a Private Line Instead of a Shared Line

Your system administrator should label your deskset feature keys according to the type of line. The labels should indicate which keys apply to the shared line(s) and which keys apply to private lines.

In general, you should use private lines for direct calls to other desksets within your organization. If you use a shared line to call other desksets, all the other desksets that use that line will ring.

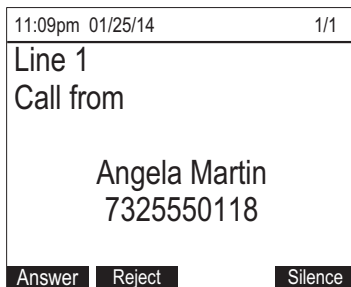

Call monitoring

One of the main features of shared lines is the ability to monitor call activity. You can monitor the call activity by observing the Line key LED. On your deskset, the LED is steady orange when a call has been answered at another deskset, and flashes orange slowly when the user at another deskset puts a call on hold. See “Programmable feature key lights” on page 21.

Putting a shared-line call on hold

After you answer a call on a shared line, you have two options for putting that call on hold.

- You can put a call on hold by pressing the **HOLD** key. This puts a call on “normal” hold. On a shared line, this means that other shared-line users can see that the call is on hold, as indicated by the flashing orange Line key LED. Other users can retrieve the call by pressing the flashing Line key. Your deskset will return to idle mode. Putting a call on hold this way can be useful if you want to hand off the call to someone else, or if you want to pick up the held call at another deskset.
- You can also put a call on “private” hold, which means that other users cannot see that the call is on hold. Their Line key LEDs continue to show a steady orange, indicating that the call is active. This is useful if you plan to resume the held call on the same deskset.

Using the Phone


Putting a shared-line call on hold (continued)

When you transfer a call or start a conference call, the other call is put on private hold automatically. During the transfer or conference setup process, no other desksets can retrieve the call on hold.

As well, when you are on a call and you answer another incoming call or retrieve another call on hold, your first call is put on private hold automatically.

To put a call on private hold manually:

- Press and hold the **HOLD** key for 2 seconds.

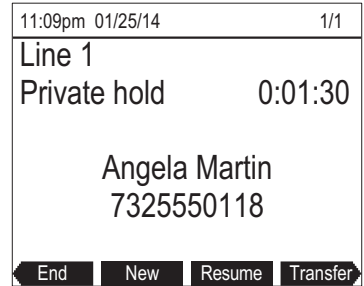

“Barging in”

When you have a shared line, it may be possible to “barge in,” that is, join a call in progress at another deskset that uses that shared line. The result of barging in is that you create a “bridged call” between you and the people whose call you joined. You and the others can then converse. Note that any other shared-line user can barge in on the call as well.

Note: The ability to barge in on calls is a configurable setting for your deskset. Only your system administrator can enable this setting. Your deskset may have shared lines, but be unable to barge in on calls.

Bridged calls differ from conference calls in that you can join a call in progress at any time. However, because the caller ID of the active call is not visible to you, other participants in the call may need to notify you of an appropriate time to join.

Bridged calls can also have any number of participants, unlike conference calls. The number of participants on a bridged call depends on the number of desksets sharing that line and may be limited by system or network capabilities.

To barge in on a call:

- Press the desired line key that has a steady orange LED, indicating an active call on a shared line.

You join the call already in progress.

To leave the call, press **End**. The other participants can continue their bridged call.

Note: If you are unable to barge in on a call, it may be because the other call is not currently in progress. A line key with a steady orange LED can also indicate that the call is on private hold at the other deskset, or that the other deskset is dialing a number and no call is established yet. As well, If barging in is disabled on your deskset, pressing the key with the steady orange LED will do nothing.

Using the Phone

Busy lamp field

As with shared lines, you can monitor call activity using Busy Lamp Field (BLF) keys. However, BLF keys and LEDs represent activity on an individual deskset, not on a line. Keys configured for BLF allow you to monitor call activity for the extension only. You can use the BLF key as a quick dial key to call the extension and intercept ringing calls.


Note: Your system administrator sets up Busy Lamp Field keys. Your key labels should identify the BLF keys and which extensions they monitor. The BLF feature may not be available on your deskset.

For BLF LED states, see “Programmable feature key lights” on page 21.

To dial a monitored extension:


1. Press the BLF key for that extension. The monitored extension can be idle, or have an active or held call.

Your deskset dials the extension using the first available line key. When the other person answers, your deskset indicates two active calls: one active call on the line key that you dialed out on, and one active call on the BLF key of the monitored extension you called.

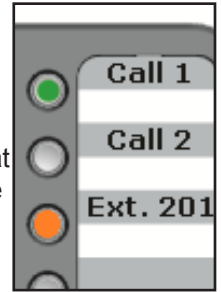

To answer a call ringing at a monitored extension:

1. Press the flashing orange BLF key for the desired extension.

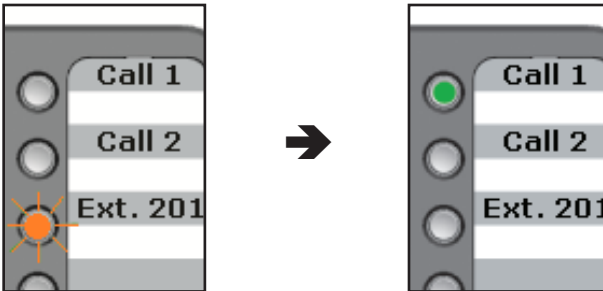

Your deskset answers the call on the first available line key.

Using the Phone



Paging

Your phone supports two types of paging: server-based paging and multicast paging. An incoming page may interrupt any active calls you are on, depending on how your system administrator has configured the paging function. As well, when you are on a call and you answer another incoming call or retrieve another call on hold, your first call is put on private hold automatically.

To send a server-based page:

1. Press the Page feature key.

Your phone dials out the Page Feature Access Code.

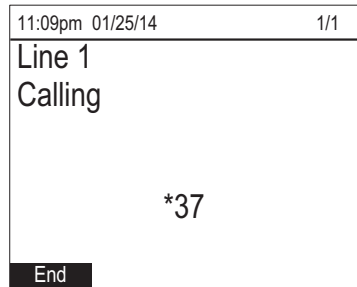
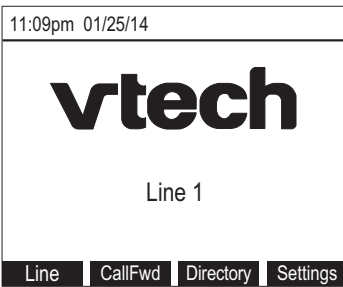


2. Follow the voice prompts to page.

To send a multicast page:

1. Press the Multicast Page feature key.

You hear a paging tone before your phone broadcasts a page to the assigned paging zone.

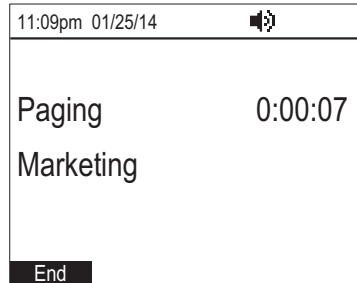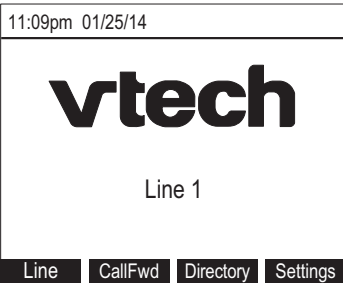

2. Press **End** to terminate the page.

Using the Phone


Automatic Call Distribution

If you are subscribed to Automatic Call Distribution (ACD), pressing the ACD feature key will display the ACD State Menu.

To set your ACD state:

1. Press the ACD feature key.

The ACD State menu appears.

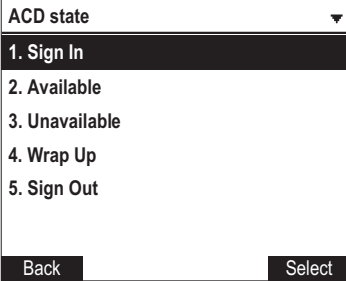

ACD state ▼

- 1. Sign In
- 2. Available
- 3. Unavailable
- 4. Wrap Up
- 5. Sign Out

Back Select

2. Press ▼ or ▲ to select the desired state, and then press **SELECT**.

If you select **Unavailable**, you will have the option of entering a reason code.

Phone Features

Using the Features menu

On the Features menu, you can manage incoming calls, use the Directory, access your messages, view your call history, and manage your speed dial numbers.


Navigating menus

To select a submenu on a numbered list, you can:

- Press ▲ or ▼ to highlight the desired menu, and then press **SELECT**.
- Press the dial pad key that matches the number of the desired menu.

To access the Features menu:

1. When the phone is idle, press **MENU**.
The Main Menu appears.
2. If necessary, press ▲ or ▼ to highlight **Features**, and then press **SELECT**.
The Features menu appears.

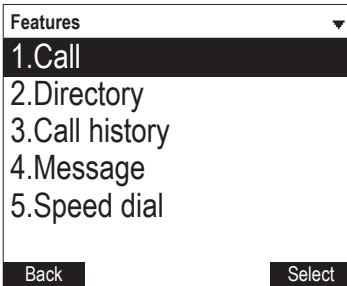

The Features menu includes the following items:

| Setting | See page... | Description |
|-----------------|-------------|--|
| 1. Call | 41 | Manages how your phone handles incoming calls. |
| 2. Directory | 46 | Stores contact information and call contacts. |
| 3. Call History | 49 | Lists incoming and outgoing call information. |
| 4. Message | 34 | Accesses your voicemail. |
| 5. Speed dial | 53 | Accesses your list of speed dial numbers. |

Phone Features


Using the Call menu

On the Call menu, you can manage how your phone handles incoming calls. The settings available on the Call menu include:

| Setting | See page... | Description |
|----------------------|-------------|--|
| 1. Do Not Disturb | 42 | Silences incoming ringing and paging. Do Not Disturb (DND) is set on a per-line basis. The system administrator can enable you to answer incoming calls when DND is on. When DND answering is enabled, the Line key flashes for incoming calls and the incoming call screen appears. If DND answering is disabled, the incoming call will be terminated. |
| 2. Call forward | 42 | Automatically forwards incoming calls depending on the setting. You can enable the following types of call forwarding: <ul style="list-style-type: none">• Call forward always: incoming calls are forwarded immediately and the phone does not ring.• Call forward busy: incoming calls are forwarded if all your available lines are busy.• Call forward no ans: incoming calls are forwarded after the no answer delay expires. |
| 3. Block anonymous | 44 | Enables the phone to reject incoming calls that have no caller ID. |
| 4. Dial as anonymous | 44 | Enables the phone to make outgoing calls with the Caller ID hidden from the far end. |
| 5. Missed call alert | 45 | Enables the missed call alert screen. |
| 6. Call waiting | 45 | Enables or disables incoming call alerts while you are on another call. |

To use the Call menu:

1. When the phone is idle, press **MENU**.
2. If necessary, press **▲** or **▼** to highlight **Features**, and then press **SELECT**.
3. If necessary, press **▲** or **▼** to highlight **Call**, and then press **SELECT**.
The Call menu appears.

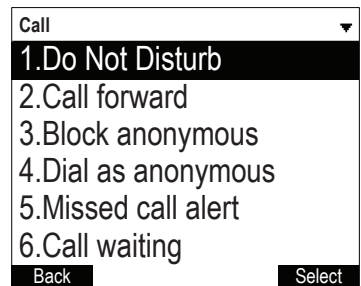


Phone Features

Using the Call menu (continued)

To set Do Not Disturb:

1. From the Call menu, if necessary, press ▲ or ▼ to highlight **Do Not Disturb**.
2. Press **SELECT**.
3. On the Do Not Disturb menu, highlight the line for which you want to turn Do Not Disturb On or Off.

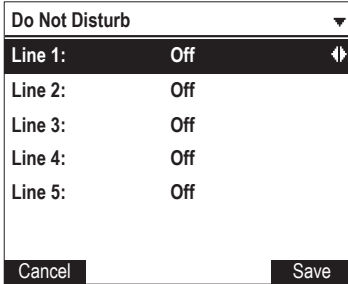


4. When the desired line is highlighted, press ◀ or ▶ to turn Do Not Disturb On or Off.
5. Press **Save**.

When Do Not Disturb for your default line is on, **DND** appears on the idle screen.

To set Call forward:

1. From the Call menu, press ▼ to highlight **Call forward**.
2. Press **SELECT**.

The Call forward menu appears.

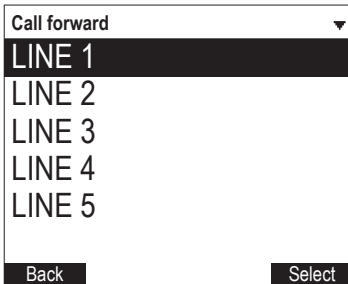

3. Highlight the line for which you want to configure call forward settings, and then press **SELECT**.

Phone Features

Using the Call menu (continued)

- On the next screen, press ▼ to highlight the desired option:
 - Call forward always
 - Call forward busy
 - Call forward no ans.

LINE 1 ▼

Call forward always

Call forward busy

Call forward no ans

Back Select

- Press **SELECT**.
- On the next screen, press ◀ or ▶ to turn call forwarding On or Off.

LINE 1 ▼

Always: Off ◀▶

Number:

Cancel Save

- Press ▼.
- Enter the number to which you would like to forward calls.
- (If you selected **Call forward no ans** earlier) Press ▼.
- (If you selected **Call forward no ans** earlier) Press ◀ or ▶ to set the No answer delay between 1 to 10 rings.
- Press **Save** .

When Call forward for your default line is on, **FWD** appears on the idle screen.

Note: Your system administrator can also configure programmable keys to turn Call forward always, Call forward busy, and Call forward no answer on or off.

Phone Features

Using the Call menu (continued)

To block anonymous callers:

1. From the Call menu, press ▼ to highlight **Block anonymous**.
2. Press **SELECT**.

The Block anonymous menu appears.

| Block anonymous | |
|-----------------|-----|
| Line 1: | Off |
| Line 2: | Off |
| Line 3: | Off |
| Line 4: | Off |
| Line 5: | Off |
| Cancel Save | |

3. Highlight the desired line, and then press ◀ or ▶ to turn anonymous call blocking On or Off for that line.
4. Press **Save** .

To dial as an anonymous caller:

1. From the Call menu, press ▼ to highlight **Dial as anonymous**.
2. Press **SELECT**.

The Dial as anonymous menu appears.

| Dial as anonymous | |
|-------------------|-----|
| Line 1: | Off |
| Line 2: | Off |
| Line 3: | Off |
| Line 4: | Off |
| Line 5: | Off |
| Cancel Save | |

3. Highlight the desired line, and then press ◀ or ▶ to turn anonymous call dialing On or Off for that line.
4. Press **Save** .

Phone Features

Using the Call menu (continued)

To enable missed call alerts:

1. From the Call menu, press ▼ to highlight **Missed call alert**.
2. Press **SELECT**.

The Missed call alert menu appears.



3. Press ◀ or ▶ to turn missed call alerts on (Yes) or off (No).
4. Press **Save** .

To enable call waiting alerts:

1. From the Call menu, press ▼ to highlight **Call waiting**.
2. Press **SELECT**.

The Call waiting menu appears.



3. Press ◀ or ▶ to turn call waiting alerts on (Yes) or off (No).
4. Press **Save** .

When **Show alert** is on and you are on a call, incoming calls are displayed on the screen. When **Show alert** is off, incoming calls are rejected and no notification appears on the screen. See also “Call Waiting Settings” on page 73.

Phone Features

Using the local directory

You can store the names and phone numbers for up to 200 contacts in the deskset directory. Once directory entries are saved, you can dial them directly from the directory. You can also search directory entries by first or last name.

When adding an entry, you can enter numbers for work, mobile, and other. You can also select a ringtone for that contact. Later, you can edit entries if their contact information changes.


To view the local directory:

1. Press the **DIRECTORY** key.

—or—


- a. Press **MENU**.
- b. With **Features** highlighted, press **SELECT**.
- c. Press **▼** to highlight **Directory**, and then press **SELECT**.

The Directory menu appears, listing all your available directories and the blacklist. Any directories other than Local and Blacklist are server-based and will vary with your installation. You can edit the Local directory and the Blacklist.

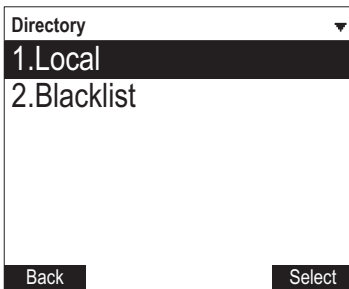

2. With **Local** highlighted, press **SELECT**.

The Local directory appears, showing the first entry (sorted alphabetically by first name).

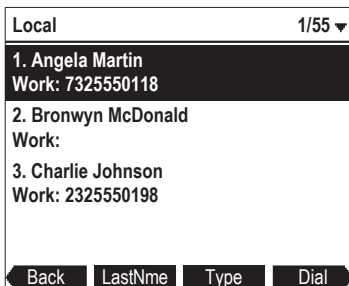

3. Press **▲** or **▼** to view other entries.

Phone Features

Using the local directory (continued)

The following soft keys are available when viewing a directory entry:

| | | | | | |
|-------------|-------------------------------|----------------|--|-----------------|--|
| Back | Returns to Directory menu | LastNme | Sorts the list by last name from the top of the list | Type | Displays the contact's other numbers: Work, Mobile, Other |
| Dial | Dials the entry | Edit | Allows you to change the entry | Search | Allows you to search the list alphabetically by first or last name |
| Add | Allows you to add a new entry | Delete | Deletes the entry | Del. all | Deletes all entries |

To call a contact:

1. Press **▲** or **▼** or **Search** to view the desired directory entry.
2. To view other numbers for the entry, press **Type**.
3. When the desired number appears, press **Dial**.

Note: If you view a directory entry when you have already entered digits in dial mode, an **Insert** soft key appears instead of **Dial**. Press **Insert** to add the entry's number onto the existing digits. You can use this feature when making a call, forwarding a call, transferring a call, and setting up a conference call.

To add a directory entry:

1. When viewing a directory entry, press **◀** or **▶** until the **Add** soft key appears.
2. Press **Add**.
A blank directory entry appears.
3. Use the dial pad keys to enter the first name, last name, and contact numbers.
 - Press **ABC** to switch between entering upper-case letters, lower-case letters, and numbers.
 - Press **Backspc** to delete incorrect characters.
 - After completing a line, press **▼** to move to the next line.
4. When you have entered the desired information and selected the ringtone you want to use for this contact, press **Save**.

To edit a directory entry:

1. When viewing the desired directory entry, press **◀** or **▶** until the **Edit** soft key appears.
2. Press **Edit**.
The directory entry edit screen appears.


Phone Features

Using the local directory (continued)


- Use the dial pad keys to change the first name, last name, and contact numbers as desired.
 - You can edit the name and numbers, and change the ringtone.
 - Press **ABC** to switch between entering upper-case letters, lower-case letters, and numbers.
 - Press **Backspc** to delete incorrect characters.
 - After completing a line, press ▼ to move to the next line.
- Press **Save**.

To search directory entries:

- From the Directories screen or from a directory entry, press **Search**. The Local directory search screen appears.

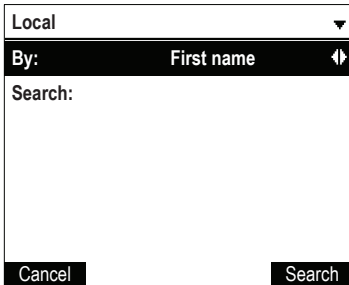

- To filter your search by first name or last name, press ◀ or ▶.
- Press ▼ to move to the Search field.

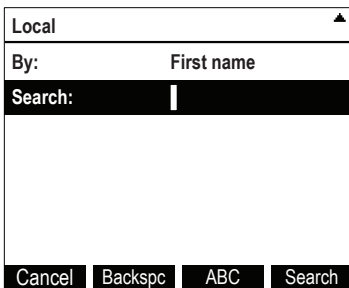

- Press a dial pad key to enter a letter for your first name or last name search. Press **2** once for A, or three times for C, for example.
- Press **Search**. The deskset searches for the first name or last name beginning with the letter you entered.


Phone Features

Using the local directory (continued)

The first entry found appears. If more than one entry was found, press ▲ or ▼ to view other entries.

To delete a directory entry:

1. Press ▲ or ▼ or **Search** to view the desired directory entry.
2. Press ◀ or ▶ until the **Delete** soft key appears.

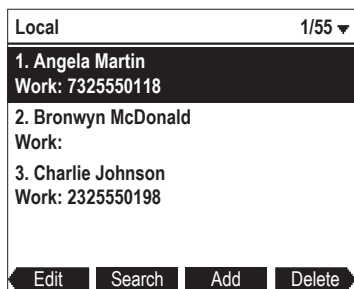

3. Press **Delete** .
4. When the confirmation screen appears, press **Yes** .

To delete all directory entries:

1. From a directory entry, press ▲ or ▼ until the **Del. all** soft key appears.
2. Press **Del. all** .
3. When the confirmation screen appears, press **Yes** .

Blacklist

The directory also includes a blacklist, which is a list of numbers that cannot reach your phone. If you experience nuisance calls, you can add the callers' contact information to the blacklist. Calls from blacklisted numbers will not ring your phone, or be recorded in your call history. The Blacklist can be viewed and edited in the same way as the Local directory but is a completely separate directory listing.

Call history

The call history provides available name and number information for the last 200 incoming and outgoing calls. The newest entries replace the oldest. You can view call history information for:

- All calls—all categories of calls
- Missed calls—incoming calls that were not answered
- Received calls—incoming calls that you answered, forwarded or rejected

Phone Features

Call history (continued)

- Dialed calls—all outgoing calls. You can use this as a redial list.


To view the call history:

1. Press the **CALL HISTORY** key.

—or—


- a. When the phone is idle, press **Menu**.
- b. If necessary, press **▲** or **▼** to highlight **Features**, then press **SELECT**.
- c. Press **▲** or **▼** to highlight **Call History**, then press **SELECT**.

The Call history menu appears.

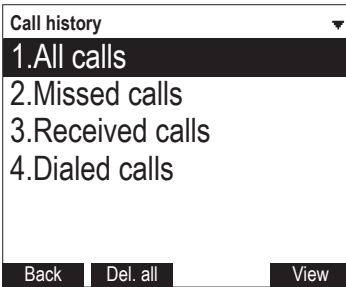

2. Press **▼** to highlight the desired call history folder.
3. Press **View** to see call history entries in the highlighted folder.

The first entry appears.

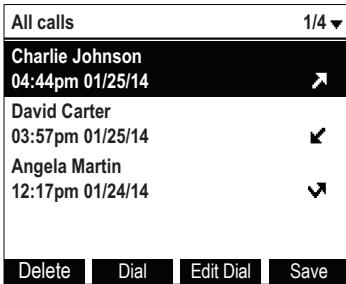

If the folder is empty, the message **No entries to display.** appears.

4. Press **▼** to view more entries.

The call history entry screen shows the time, date, name and number of the call, the number of entries in the folder, along with an icon indicating the type of call.



Phone Features

Call history (continued)

The following soft keys are available when viewing a call history entry:

| | | | | | |
|-------------|----------------------------------|------------------|---|-------------|---|
| Back | Returns to the Call History list | Delete | Deletes the entry | Info | Displays additional call information, such as time and duration |
| Dial | Dials the entry | Edit Dial | Displays the predial screen so you can edit the number before dialing | Save | Saves the call information to the local directory |

To call a call history entry:

1. While viewing the desired entry, press **Dial** . The phone dials the number immediately.


–or–

Press **Edit Dial** . The predial screen appears, allowing you to edit the number before pressing **Dial** .

Note: If you view a call history entry when you have already entered digits in dial mode, an **Insert** soft key appears instead of **Dial** . Press **Insert** to add the entry's number onto the existing digits. You can use this feature when making a call, forwarding a call, transferring a call, and setting up a conference call.

To add a call history entry to the directory:

1. While viewing the desired entry, press ◀ or ▶ until the **Save** soft key appears.
2. Press **Save** .
3. On the **Save to** menu, select the location to which you want to save the entry.
 - To save the entry to your directory, highlight **Local** and then press **Select** .

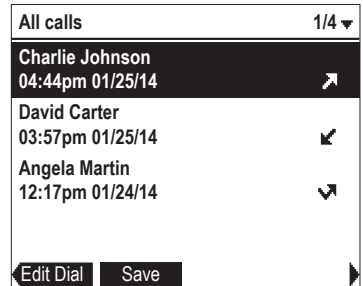

Phone Features

Call history (continued)

- To save the entry to your blacklist, highlight **Blacklist** and then press **Select** .
4. The directory add/edit screen appears. The deskset automatically fills in the name and number, if available.

| | | | |
|-------------|---------------|-----|------|
| First name: | Mary Williams | | |
| Last name: | | | |
| Work: | 2325551234 | | |
| Mobile: | | | |
| Home: | | | |
| Ringer: | Auto | | |
| Line: | Default | | |
| Cancel | Backspc | ABC | Save |

- If necessary, edit the name and number.
Press ▼ to move the cursor to the next line.
 - Press **Backspc** to delete incorrect characters.
5. Press **Save** to save the entry.

To delete a single call history entry:

1. While viewing the desired entry, press **Delete** .

To delete multiple call history entries:

1. While viewing the list of call history folders, press ▼ to highlight the folder for which you would like to delete all entries: All calls, Missed calls, Received calls, or Dialed calls.
2. Press **Del. all** .
3. When the confirmation screen appears, press **Yes** .

| | | |
|------------------|----------|------|
| Call history ▼ | | |
| 1.All calls | | |
| 2.Missed calls | | |
| 3.Received calls | | |
| 4.Dialed calls | | |
| Back | Del. all | View |



| | |
|--------------------------------------|----|
| Delete all All calls Entries ? | |
| Yes | No |

Phone Features

Speed Dial

The speed dial menu allows you to enter up to 10 numbers that you dial frequently. To dial a speed dial number, press and hold the dial pad key that matches the speed dial entry number (for entry 10, press and hold **0**).

You can also enter speed dial numbers using the WebUI. See “Speed Dial” on page 80.


Entering speed dial numbers

To add a speed dial entry:

1. When the phone is idle, press **Menu**.
2. With **Features** highlighted, press **SELECT**.
3. Press **▼** to highlight **Speed dial**, and then press **SELECT**.

The Speed dial menu appears.


4. Press **▼** to highlight a speed dial entry marked **<Empty>**.
5. Press **Add** .

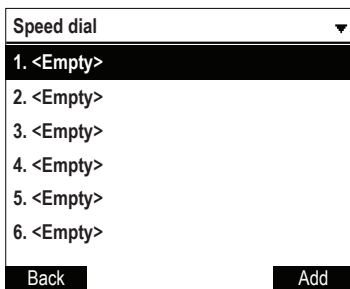

Speed dial ▼

| |
|------------|
| 1. <Empty> |
| 2. <Empty> |
| 3. <Empty> |
| 4. <Empty> |
| 5. <Empty> |
| 6. <Empty> |

Back Add

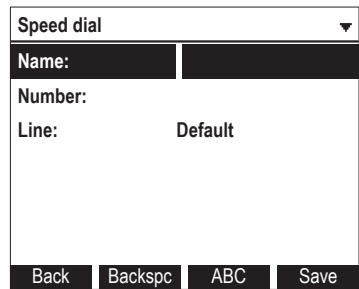

Speed dial ▼

| | |
|---------|---------|
| Name: | |
| Number: | |
| Line: | Default |

Back Backspc ABC Save

A blank speed dial entry appears.

6. Use the dial pad keys to enter the name and number.
 - Press **123** to switch between entering numbers, lower-case letters, and upper-case letters.
 - When you start entering characters, the **Cancel** soft key changes to **Backspc** . Press **Backspc** to delete incorrect characters.
 - After completing a line, press **▼** to move to the next line.
7. Press **▼** and then press **◀** or **▶** to select the line you want to use for this speed dial entry.
8. When you have entered the desired information, press **Save** .

Cordless Headset

Registering an optional cordless headset


You can register one cordless headset to a VSP735 deskset. When a deskset has a cordless accessory, the deskset and headset are all part of the same extension, and only one device can be used at a time.

Note: The headset must be in the charger, otherwise registration cannot proceed.

To register the cordless headset:

1. When the phone is idle, press **MENU**.
2. Press ▼ to highlight **User Settings**, and then press **SELECT**.
3. Press ▼ to highlight **DECT headset**, and then press **SELECT**.

The DECT headset menu appears.

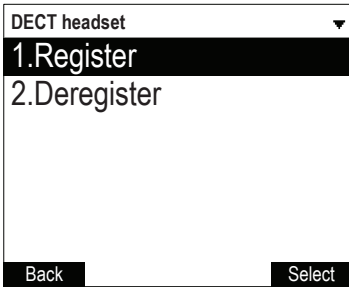

4. Lift the cordless headset out of its charging base, and then place it back in the charger.
5. With **Register** highlighted, press **SELECT** on the deskset. **Registering...** appears while the deskset searches for the headset.

When registration is complete, **Registration succeeded** appears and the ON/OFF light on the cordless headset turns solid blue.

The DECT headset menu appears.

Note: Registration can be terminated by pressing **CANCEL** on the deskset.

If the cordless headset was registered to another deskset, it must be deregistered first. See "Deregistering a cordless headset".

Cordless Headset

Deregistering a cordless headset

You must deregister a cordless headset from its original deskset before you can register it to a different deskset.

To deregister a cordless headset:

1. When the phone to which the headset is registered is idle, press **MENU**.
2. Press **▼** to highlight **User Settings**, and then press **SELECT**.
3. Press **▼** to highlight **DECT Headset**, and then press **SELECT**.
The DECT headset menu appears.
4. Press **▼** to highlight **Deregister**, and then press **Select** .

The deskset screen displays **DECT headset is deregistered**. The cordless headset ON/OFF light flashes twice every five seconds to indicate it is not registered.

The DECT headset menu appears.

Deregistering the cordless headset without the deskset

Cordless headsets can also be deregistered using the headset. You can use this method when you cannot use the deskset for standard deregistration. The deskset may be out of range or may have been removed from the system.

To deregister the cordless headset when the deskset is not available:

On the headset, press **VOL+ > ON/OFF > VOL- > ON/OFF > VOL+ > VOL- > ON/OFF**.

Cordless accessory registration and deregistration time-out

If the cordless device is registered to another deskset or telephone, it must be deregistered first. See “Deregistering a cordless headset”.

For security reasons, the registration process on both the deskset and the cordless accessory terminates after the time-out period of two minutes if registration is not successful.

If the registration process times out on the cordless accessory, the cordless accessory resets itself. If the registration process times out on the deskset, it displays **Registration Failed** and returns to Idle mode.

If cordless headset registration fails, the ON/OFF light on the headset flashes twice every five seconds. To reset the headset, lift the headset out of its charging base, place it back in the charger, and try the registration process again.

Cordless Handset

Registering an optional cordless handset

You can register one VSP601 DECT cordless handset to a VSP735 deskset. When a deskset has a cordless accessory, the deskset and handset are all part of the same extension, and only one device can be used at a time.

Note: Make sure the handset has a charged battery before proceeding. Also make sure the deskset is powered on and is idle.

To register the cordless handset:

1. Press **MENU** on the handset. The Main Menu appears.
2. Press **▼** to scroll to **User settings** and press **SELECT**.
3. Press **▼** to scroll to **Registration** and press **SELECT**.
4. With **Handset** highlighted, press **SELECT**. The handset asks you which device you want to register to. Press **DESKSET**.
5. The handset screen displays instructions. Press **NEXT** to continue reading the instructions.
6. On the phone, press **Menu**.
7. Press **▼** to highlight **User Settings**, and then press **SELECT**.
8. Press **▼** to highlight **DECT handset**, and then press **SELECT**.



The DECT handset menu appears:



9. With **Register** highlighted, press **SELECT** on the deskset. **Registering...** appears while the deskset searches for the handset.
10. Press the **#** key on the handset. The screen shows **Please wait...**

The registration process takes up to 10 seconds. When registration is complete, **Registration succeeded** appears on the deskset. The handset displays **Handset Registered**.

If the handset fails to register, place it in the charger for a few seconds, remove it and repeat the registration procedure.

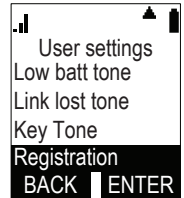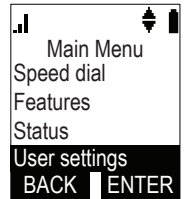

Cordless Handset

Deregistering the cordless handset


Before using the cordless handset with a different deskset, you must deregister the handset from the device to which it is currently registered.

To deregister using the handset:

1. Press **MENU** on the handset. The Main Menu appears.
2. Press **▼** to scroll to **User settings** and press **SELECT**.
3. Press **▼** to scroll to **Registration** and press **SELECT**.
4. Press **▼** to highlight **Deregistration** and press **SELECT**.
5. Enter the PIN and then press **OK** to begin deregistration. The default PIN is 1592.


Note: When deregistering the handset from a deskset that has been upgraded to software version 1.1.1.1 or later:

- If the deskset was not reset to factory defaults after upgrading, the PIN to begin deregistration is 1591.
- If the deskset was reset to factory defaults after upgrading, the PIN to begin deregistration is 1592.

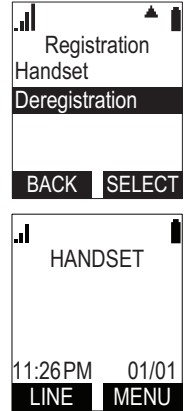

To deregister using the deskset:

1. On the deskset, press **MENU** when idle.
2. Press **▼** to highlight **User Settings**, and then press **SELECT**.
3. Press **▼** to highlight **DECT handset**, and then press **SELECT**. The DECT handset menu appears.

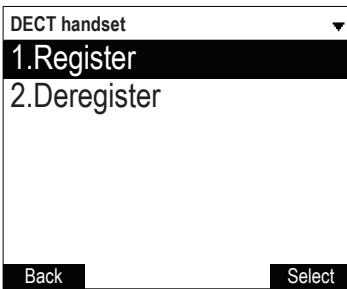

4. Press **▼** to highlight **Deregister**, then press **Select**.
5. Press **Yes** to confirm deregistration.

The deregistration process takes up to 10 seconds to complete. The deskset screen displays **DECT handset is deregistered**.


Note: The handset enters an energy-saving charging mode after being deregistered. All cordless telephone functions except handset-battery charging are disabled. Energy-saving charging mode is deactivated after the handset registers to the deskset.

Status


Finding the firmware version

To view the firmware version of your phone:

1. When the phone is idle, press **MENU**.
2. On the Main menu, press ▼ to highlight **Status**, and then press **SELECT**.
3. On the Status menu, press ▼ to highlight **Product Info**, and then press **SELECT**.

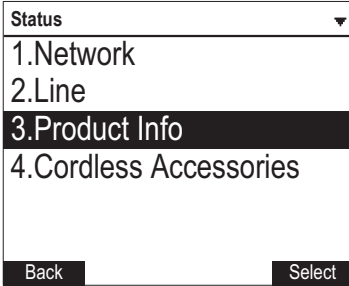

4. On the Product Info screen, find **Firmware Ver.**

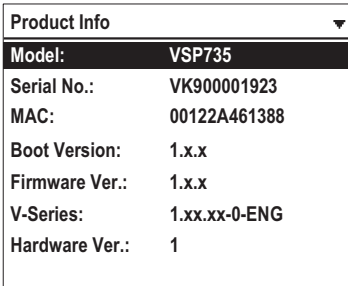

Configuring the Phone

You can configure the phone using one of two methods:

1. The User Settings menu on the phone.
2. The WebUI, which you access using your Internet browser.

This section describes the User Settings menu. For information about the WebUI, see page 67.

Using the User Settings menu


To view the User Settings menu:

1. When the phone is idle, press **Settings** .

The User Settings menu appears.

You can also view the User Settings by pressing the **MENU** key, and then pressing:

- ▼ to highlight **User Settings**, and then pressing **SELECT**.
- **3** (User Settings) on the dial pad.

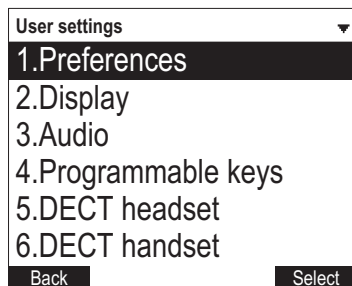

The User Settings are:

| Setting | Options |
|----------------------|---|
| 1. Preferences | Language Date & Time (Clock time, Clock date, Time zone, NTP server, Set manually) Restart phone |
| 2. Display | Contrast (Level 1–7) Backlight ON (Off, Low, Medium, High) Backlight idle (Off, Low, Medium, High) Timeout (10–60 seconds) |
| 3. Audio | Ringer tone (Line 1, Line 2...) Key tone (On, Off) Audio mode (Speaker, Headset) |
| 4. Programmable keys | Keys 1 to 32 |
| 5. DECT headset | Register (see “Registering an optional cordless headset” on page 54) Deregister |
| 6. DECT handset | Register (see “Registering an optional cordless handset” on page 56) Deregister |

Configuring the Phone


Preferences

Use the Preferences menu to set the language, date and time formats, and restart the phone.

To use the Preferences menu:


1. When the phone is idle, press **Settings** .

The User Settings menu appears.

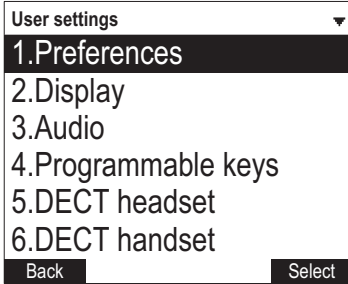

2. On the User Settings menu, ensure that **Preferences** is highlighted and then press **SELECT**.

The Preferences menu appears.

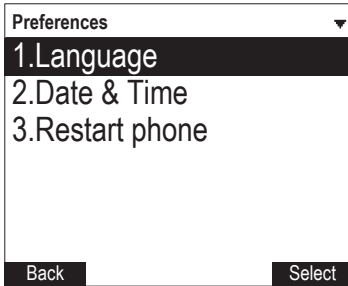

3. Press **▲** or **▼** to highlight the desired option, and then press **SELECT**. The available options are:
 - Language
 - Date & Time
 - Restart phone


Setting the language

1. From the Preferences menu, press **▲** or **▼** to highlight **Language**, and then press **SELECT**.

The Language menu appears.

Configuring the Phone

Setting the language (continued)

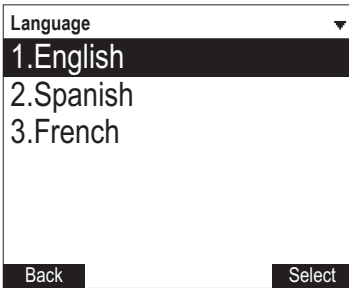


2. Press ▲ or ▼ to highlight the desired language.
3. Press **SELECT**.

Setting the date and time

1. From the Preferences menu, press ▼ to highlight **Date & Time**, and then press **SELECT**.

The Date & Time menu appears.

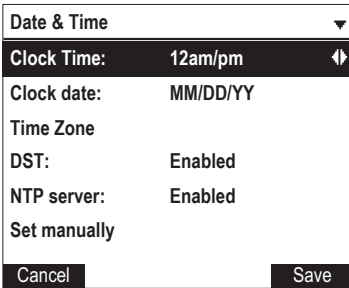

To set the time format:

1. From the Date & Time menu, ensure that **Clock Time** is highlighted.
2. Press ◀ or ▶ to select a 12-hour clock (12am/pm) or 24-hour clock.
3. Press **Save** .

To set the date format that appears on the idle screen:

1. From the Date & Time menu, press ▼ to highlight **Clock date**.
2. Press ◀ or ▶ to select the desired date format (DD/MM/YY, MM/DD/YY, YY/MM/DD)
3. Press **Save** .

Configuring the Phone

Setting the date and time (continued)

To set the Time Zone:

1. From the Date & Time menu, press ▼ to highlight **Time Zone**.
2. Press **Edit** .
3. Press ▲ or ▼ to select your time zone.
4. Press **Save** .

To enable or disable the NTP (Network Time Protocol) server:

1. From the Date & Time menu, press ▼ to highlight **NTP server**.
2. Press ◀ or ▶ to select Enabled or Disabled.
3. Press **Save** .

Note: If the NTP server is disabled, you must manually set the time and date. This setting is valid only if the system administrator has already configured the Network Time settings. For more information, see the VSP735 Deskset Administrator and Provisioning Guide.

To manually set the Year, Month, Day, Hour and Minute:

1. From the Date & Time menu, press ▼ to highlight **Set manually**.
2. Press **SELECT**.

Note: If the NTP server is enabled, you cannot modify this setting. See “To enable or disable the NTP (Network Time Protocol) server” above.

3. For each setting, press ◀ or ▶ to select the desired setting, and then press ▼ to move to the next line.
4. When you have finished, press **Save** .

Display


Use the Display menu to set screen appearance and backlight behavior.

To use the Display menu:

1. When the phone is idle, press **Settings** .
The User Settings menu appears.
2. Press ▲ or ▼ to highlight **Display**, and then press **SELECT**.
The Display menu appears.

Configuring the Phone

Display (continued)

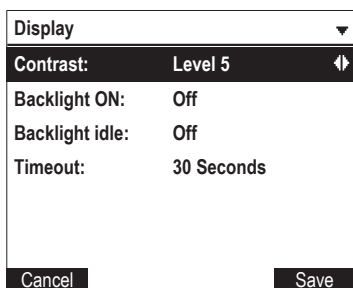

To set the contrast level:

1. From the Display menu, ensure that **Contrast** is highlighted.
2. Press ◀ or ▶ to set the contrast level from 1 to 7 (4 is the default setting).
3. Press **Save** .

To set the backlight level that applies when the phone is active:

1. From the Display menu, press ▼ to highlight **Backlight ON**.
2. Press ◀ or ▶ to select Off, Low, Medium, or High (High is the default setting).
3. Press **Save** .

To set the backlight level that applies when the phone is idle:

1. From the Display menu, press ▼ to highlight **Backlight idle**.
2. Press ◀ or ▶ to select Off, Low, Medium, or High (Off is the default setting).
3. Press **Save** .

To set the backlight off timeout:

1. From the Display menu, press ▼ to highlight **Timeout**.
2. Press ◀ or ▶ to select between 10 and 60 seconds at 5-second intervals (30 seconds is the default setting).
3. Press **Save** .

Audio

Use the Audio menu to pick one of ten ringer tones, turn key tones on and off, or select the default audio mode.


Note: To adjust the ringer volume, press the deskset **VOLUME** ▼ or ▲ keys while the phone is idle.

Configuring the Phone

Audio (continued)



To use the Audio menu:

1. When the phone is idle, press **Settings** .
The User Settings menu appears.
2. Press ▼ to highlight **Audio**, and then press **SELECT**.
The Audio menu appears.

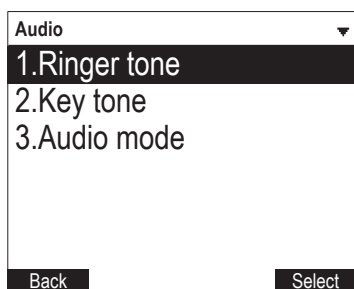

To select different ringer tones for each line:

1. From the Audio menu, ensure that **Ringer tone** is highlighted and then press **Select** .
2. On the Ringer tone menu, press ▼ (if necessary) to highlight a line for which to select a ringer tone and then press **Select** .

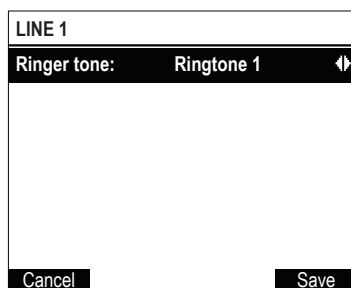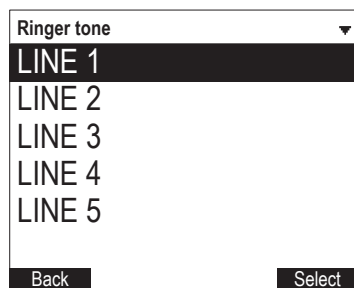

3. On the selected line screen, press ◀ or ▶ to select one of ten ringer tones.
The default is 1. Ringer tone samples play when selected.
4. After selecting the desired ringer tone, press **Save** . To exit without saving a new ringer tone, press **Cancel** .


Configuring the Phone

Audio (continued)

To set the key tone:

1. From the Audio menu, press ▼ to highlight **Key tone** and then press **SELECT**.

The Key tone menu appears.

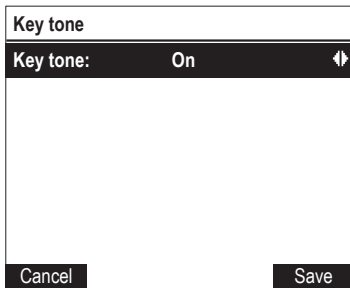


2. On the Key tone menu, press ◀ or ▶ to turn key tones on or off. When off, key presses are silent.
3. Press **Save**.

To set the audio mode:

1. From the Audio menu, press ▼ to highlight **Audio mode** and then press **SELECT**.

The Audio mode menu appears.

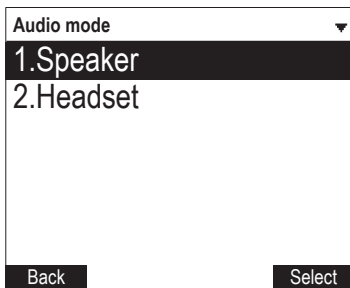

2. On the Audio mode menu, press ▼ to highlight the desired audio mode (Speaker, Headset, or DECT Headset).
3. Press **SELECT**.

When you press a Line key or **Answer**, the call is started or answered using the selected audio mode. Lifting the handset takes priority in all instances.

Configuring the programmable keys

You can configure the Programmable Keys on the Deskset. You can also configure these keys on the WebUI (see “Programmable Keys” on page 74).

To configure the programmable keys:

1. Press **MENU**, then select **User Settings**, or press **3**.

The User Settings menu appears.

2. Press **▼** to highlight **Programmable keys**, and then press **SELECT**.

The Programmable keys menu appears.

3. Select the key to configure, and then press **Edit**.

| Programmable keys ▼ | |
|---------------------|--------------|
| Key 1: | Line |
| Key 2: | Line |
| Key 3: | Line |
| Key 4: | Directory |
| Key 5: | Call History |
| Key 6: | Redial |
| Key 7: | Messages |

Edit

4. Select a PFK type, and then press **SELECT**. Depending on the PFK type, the screen may prompt you to configure additional settings. For more details on PFK types, see Programmable Keys on page 72.

WebUI

Using the WebUI


Use an Internet browser to access the Web User Interface (WebUI) that resides on your deskset. After you log on to the WebUI, you can configure the following features:

- Call Settings
- User Preferences
- Programmable Keys
- Speed Dial
- Local Directory
- Blacklist
- Call History
- User Password

The WebUI also has a Status page, where you can view network status and general information about your phone.

To access the WebUI:

1. Ensure that your computer is connected to the same network as your deskset. Your computer may already be connected to the network through the PC port on the back of your deskset.
2. Find the IP address of your phone:
 - a. When the phone is idle, press **MENU**.
 - b. Press ▼ to highlight **Status**, and then press **SELECT**. The Status menu appears.

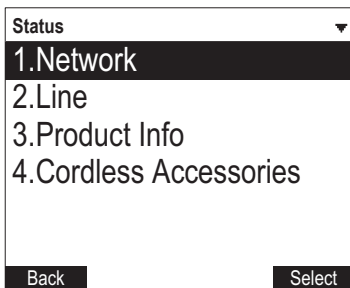


- c. On the Status menu, ensure that **Network** is highlighted, and then press **SELECT**. The Network screen appears.

WebUI

Using the WebUI (continued)

| Network | |
|---------------------|-----------------|
| IP: | 10.88.51.133 |
| DHCP: | Enable |
| Subnet Mask: | 255.255.0.0 |
| Gateway: | 10.88.3.120 |
| DNS 1: | 10.88.126.31 |
| DNS 2: | 10.88.126.10 |
| SNTP: | us.pool.ntp.org |

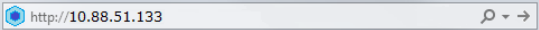- d. On the Network screen, note the IP Address.
 3. On your computer, open an Internet browser. Depending on your browser, some of the pages presented here may look different and have different controls.
 4. Type the phone IP address in the browser address bar and press **ENTER** on your computer keyboard.
A Login page appears.
- 
5. Under **User Name**, enter **user**.
6. Under **Password**, enter **user**, or your own password, if you have created one. You can create or change a password after you log on.
7. Click **Log In**. The WebUI appears.

Click topics from the navigation bar at the top of the page, and then click the desired setting on the left side of the WebUI to see the page for that setting. You view and change settings in two different types of fields: drop-down lists and entry fields into which you type information. For your security, the WebUI times out after 10 minutes, so if it is idle for that time, you must log on again.

The remaining procedures in this section assume that you have already logged on to the WebUI.

WebUI

Status

The Status page shows:

- **General** information about your phone, including model, MAC address, and firmware version.
- **Account Status** information about your SIP account registration.
- **Network** information regarding your phone's network address and network connection.
- **Cordless Status** indicating whether a cordless headset or cordless handset is registered to the deskset.

The Status page has no settings that you can change. You may need some of the status information for troubleshooting purposes.

| STATUS | STATUS | SYSTEM | CONTACTS | SERVICING |
|----------------------|---|--------|----------|-----------|
| System Status | General Model: VSP735 Serial Number: UK900001923 MAC Address: 00:12:2A:46:15:88 Boot Version: 1.04 Firmware Version: 1.0.5A V-Series: 1.23.20-0-ENG Hardware Version: EMC Version: Account Status: Account 1: Registered Account 2: Registered Account 3: Registered Account 4: Not Registered Account 5: Not Registered Network LAN Port IP Address: 10.88.51.189 IP type: DHCP Subnet Mask: 255.255.0.0 Link Status: Connected Gateway: 10.88.3.149 Primary DNS: 10.88.162.31 Secondary DNS: 10.88.162.10 Network Time Settings us.pool.ntp.org Cordless Status Headset: Not Registered Handset: Registered | | | |

WebUI

Call Settings

To view the call settings, click **SYSTEM** in the WebUI header, and then click **Call Settings** in the sidebar. You can configure call settings for each account that is available to your phone. Click **Account 1**, **Account 2**, and so on to select the call settings page for the desired account.

Call Settings include Do Not Disturb and Call Forward settings. You can also set Do Not Disturb and Call Forward using the deskset. See “Using the Call menu” on page 41.

When you have finished changing settings on this page, click **Save** to save them.

The screenshot shows the WebUI interface for 'SYSTEM CALL SETTINGS 1'. On the left is a blue sidebar with navigation options: SYSTEM, Call Settings, Account 1 (selected), Account 2, Account 3, Account 4, Account 5, Preferences, Programmable Keys, Feature Keys 1-4, and Speed Dial. The main content area has a dark header with 'STATUS', 'SYSTEM', 'CONTACTS', and 'SERVICING'. Below the header, the title is 'SYSTEM CALL SETTINGS 1'. There are three sections: 'General Call Settings' with checkboxes for 'Anonymous Call Reject' and 'Enable Anonymous Call'; 'Do Not Disturb' with a checkbox for 'Enable DND' and a dropdown for 'Incoming calls' set to 'Show'; and 'Call Forward' with checkboxes for 'Enable Call Forward Always', 'Enable Call Forward Busy', and 'Enable Call Forward No Answer', each followed by a 'Target number' input field, and a 'Delay' dropdown set to '6 rings'. A 'Save' button is at the bottom.

General Call Settings

| Setting | Description |
|-----------------------|---|
| Anonymous Call Reject | Select to block incoming calls that have no caller ID. |
| Enable Anonymous Call | Select to make outgoing calls that remove your own caller ID information. |

Do Not Disturb Settings

| Setting | Description | Range | Default |
|----------------|--|--------------|----------|
| Enable DND | Turns Do Not Disturb on or off. | n/a | Disabled |
| Incoming Calls | Selects whether the phone displays incoming call information while Do Not Disturb is on. | Show, Reject | Reject |

Call Settings (continued)

Call Forward Settings

| Setting | Description |
|-------------------------------|---|
| Enable Call Forward Always | Select to enable call forwarding for all calls on that account. |
| Target Number | Enter a number to which all calls will be forwarded. |
| Enable Call Forward Busy | Select to enable call forwarding for calls when you are on another call on that account. |
| Target Number | Enter a number to which calls will be forwarded when the line is busy. |
| Enable Call Forward No Answer | Select to enable call forwarding for unanswered calls on that account. |
| Target Number | Enter a number to which unanswered calls will be forwarded. |
| Delay | Select the number of rings before unanswered calls are forwarded. Range: 1 to 10 rings Default: 6 rings |

WebUI

User Preferences

On the User Preferences page, you can configure some basic settings for your phone and set how your phone responds to calls.

After changing any settings on this page, click **Save** to save them.

SYSTEM

- Call Settings
- Account 1
- Account 2
- Account 3
- Account 4
- Account 5
- Preferences**
- Programmable Keys
 - Feature Keys 1
 - Feature Keys 2
 - Feature Keys 3
 - Feature Keys 4
- Speed Dial

STATUS SYSTEM CONTACTS SERVICING

General User Settings

WebUI Language:

Phone Language:

Backlight Timer (secs):

Ringer Volume:

Default Audio Mode:

Call Hold Reminder

Enable Call Hold Reminder Tone

Tone Interval (secs):

Call Waiting

Call Waiting Off: Reject Incoming Call if already on a Call

Call Waiting On: View Incoming Call if already on a Call

Enable Call Waiting Tone

Tone Interval (secs):

General User Settings

| Setting | Description | Range | Default |
|--------------------|--|---|------------|
| WebUI Language | Sets the language that appears on the WebUI. | Any language supported by your phone. For example, English, French, Spanish, etc. | English |
| Phone Language | Sets the language that appears on your phone. | Any language supported by your phone. For example, English, French, Spanish, etc. | English |
| Backlight Timer | Sets how long the screen backlight stays on after the last button press. | 10 to 60 seconds | 30 seconds |
| Ringer Volume | Sets the ringer volume for incoming calls. You can also use the VOLUME ▼ or ▲ keys on the deskset. | Off, 1–9 | 5 |
| Default Audio Mode | Sets how calls are answered when you press a line key or Answer . See also “Audio” on page 63. | Speaker, Headset | Speaker |

WebUI

User Preferences (continued)

Call Hold Reminder Settings

| Setting | Description | Range | Default |
|--------------------------------|--|------------------------|------------|
| Enable Call Hold Reminder Tone | Enables or disables the call hold reminder tone. | n/a — Select to enable | Enabled |
| Tone Interval (secs) | Sets the interval for the call hold reminder tone. | 10–300 seconds | 30 seconds |

Call Waiting Settings

| Setting | Description | Range | Default |
|--------------------------|---|------------------------|------------|
| Call Waiting Off | Rejects additional incoming calls. No notification appears on the screen. | n/a — Select to enable | Disabled |
| Call Waiting On | Shows additional incoming calls on the screen. | n/a — Select to enable | Enabled |
| Enable Call Waiting Tone | Enables or disables Call Waiting Tone. | n/a — Select to enable | Enabled |
| Tone Interval (secs) | Sets the interval for the call waiting tone. | 10–60 seconds | 30 seconds |

Programmable Keys

The deskset has 16 dual-function programmable keys. You can assign up to 32 functions to the programmable keys on the Programmable Keys page.

Keys can have identical functions, depending on the “Type” of key. For example, you can assign several “Line”-type keys to Account 1 so that you can manage multiple calls on Account 1. You can also assign multiple Quick Dial keys.

For the programmable key default settings, see “Programmable keys” on page 12.

SYSTEM

- Call Settings
- Account 1
- Account 2
- Account 3
- Account 4
- Account 5
- User Preferences
- Programmable Keys**
- Speed Dial

| | STATUS | SYSTEM | CONTACTS | SERVICING |
|--------------------------|------------------|--------|-----------|-----------|
| Programmable Keys | | | | |
| Key | Type | Value | Account | |
| Key 1 | Line | | Account 1 | |
| Key 2 | Line | | Account 1 | |
| Key 3 | Line | | Account 1 | |
| Key 4 | Directory | | Account 1 | |
| Key 5 | Call History | | Account 1 | |
| Key 6 | Redial | | Account 1 | |
| Key 7 | Messages | | Account 1 | |
| Key 8 | Do Not Disturb | | Account 1 | |
| Key 9 | Call Forward All | | Account 1 | |
| Key 10 | N/A | | Account 1 | |
| Key 11 | N/A | | Account 1 | |
| Key 12 | N/A | | Account 1 | |
| Key 13 | N/A | | Account 1 | |
| Key 14 | N/A | | Account 1 | |
| Key 15 | N/A | | Account 1 | |
| Key 16 | N/A | | Account 1 | |
| Key 17 | N/A | | Account 1 | |
| Key 18 | N/A | | Account 1 | |
| Key 19 | N/A | | Account 1 | |
| Key 20 | N/A | | Account 1 | |
| Key 21 | N/A | | Account 1 | |
| Key 22 | N/A | | Account 1 | |
| Key 23 | N/A | | Account 1 | |
| Key 24 | N/A | | Account 1 | |
| Key 25 | N/A | | Account 1 | |
| Key 26 | N/A | | Account 1 | |
| Key 27 | N/A | | Account 1 | |
| Key 28 | N/A | | Account 1 | |
| Key 29 | N/A | | Account 1 | |
| Key 30 | N/A | | Account 1 | |
| Key 31 | N/A | | Account 1 | |
| Key 32 | N/A | | Account 1 | |

Save

Programmable keys (continued)

WebUI

Programmable keys (continued)

| Type | Description |
|-----------------------------------|--|
| Line | Configures the key for accessing an account. You can make or answer calls by pressing these keys. The key LED will change according to call activity. After selecting Line in the Type column, select the account number in the Account column. |
| Directory | Configures the key to access the Directory menu. You can then press the key to view the Directory menu. |
| Call History | Configures the key to access the Call History list. You can then press the key to view the Call History list. |
| Redial | Configures the key to access the Redial list. You can then press the key to view the Redial list. |
| Messages | Configures the key to access the Message menu. You can then press the key to view the Message menu. |
| Do Not Disturb | Configures the key to turn Do Not Disturb on or off. The key is lit orange when DND is on. |
| Call Forward All | Configures the key to turn Call Forward All on or off. In the Account column, select the account for which Call Forward All will apply. Before assigning the key, ensure that you configure Call Forward settings on the Call Settings page. |
| Call Forward No Answer | Configures the key to turn Call Forward No Answer on or off. In the Account column, select the account for which Call Forward No Answer will apply. Before assigning the key, ensure that you configure Call Forward settings on the Call Settings page. |
| Call Forward Busy | Configures the key to turn Call Forward Busy on or off. In the Account column, select the account for which Call Forward Busy will apply. Before assigning the key, ensure that you configure Call Forward settings on the Call Settings page. |
| Quick Dial | Configures the key to dial a number on the selected line. After selecting Quick Dial, enter the number to be dialed in the Value column. In the Account column, select the account on which the number will be dialed out. |
| BLF (Busy Lamp Field) | Configures the key to monitor another extension. In the Value column, enter the URI of the extension you want to monitor with this key. For example, <code>2325552001@sipservice.com</code> . |
| ACD (Automatic Call Distribution) | Configures the key to display the ACD State menu. In the Account column, select the account that is subscribed to the ACD service. |

WebUI

Programmable keys (continued)

| Type | Description |
|--------------------|--|
| Page | Configures the key to call one or a group of phones. Pressing the key dials the Paging feature access code. Your System Administrator must configure the feature access code for Paging. |
| Multicast Page | Configures the key to make outgoing multicast pages. In the Value column, enter a valid Paging Zone ID (ranging from 1 to 10). Multicast paging differs from standard paging in that it is handled locally by the Deskset and does not require a subscription through the hosted server. To use multicast paging, your System Administrator must first set up paging zones on the WebUI. |
| Park Call | Enables you to park a call. Pressing the key dials the Call Park feature access code (FAC). Your System Administrator must configure the feature access code and any other settings for Call Park. |
| Retrieve Park Call | Enables you to retrieve a parked call. Pressing the key dials the Parked Call Retrieval feature access code (FAC). Your System Administrator must configure the feature access code and any other settings for Retrieve Park Call. |
| In Call DTMF | Configures the key to dial a string of numbers while you are on a call. For example, pressing the key might dial a conference access code. After selecting In Call DTMF, enter the number to be dialed in the Value column. |
| Call Return | Configures the key to dial the number of the last missed call. |
| Group Call Pickup | Enables you to answer a call ringing at another extension. the call can be ringing at any extension in your phone's call pickup group. Pressing the key dials the Group Call Pickup feature access code (FAC). |
| Direct Call Pickup | Enables you to answer a call ringing at a specific deskset. Pressing the key dials the Direct Call Pickup feature access code (FAC). Depending on the server requirements, you may then need to enter the number of the ringing extension. |

WebUI

Directory

To view the local directory, click **CONTACTS** in the WebUI header, and then click **Local directory** in the sidebar.

On the Local Directory page, you can manage your local directory entries. You can sort, edit, delete, and add contact information for up to 200 entries. The page also allows you to export your phone's local directory or import a local directory file. The export function lets you back up your contacts to your computer.

Phone numbers appear as links. If your service provider's **click to dial** feature is enabled, you can dial a number by clicking its link.

The Local Directory lists entries on up to 10 pages, with 20 entries per page. Click **Next**, **First**, **Last**, or a page number to view the desired page of entries.

Note: You can also use the phone menu to manage your local directory entries. For more information, see "Using the local directory" on page 46.

CONTACTS

Local Directory
Blacklist
Call History

STATUS SYSTEM CONTACTS SERVICING

Local Directory

Select All Sort By Last Name

| Total: 21 | First Name | Last Name | Ringer Tone | Work | Mobile | Other | Account | |
|--------------------------|------------|-------------|-------------|---|---|---|---------|----------------------|
| <input type="checkbox"/> | Angela | Martin | 0 | 7325550118 | | | 1 | Edit |
| <input type="checkbox"/> | Bronwyn | McDonald | 0 | 2325550140 | | | 1 | Edit |
| <input type="checkbox"/> | Charlie | Johnson | 0 | 5550198 | | | 1 | Edit |
| <input type="checkbox"/> | Dale | Appleton | 0 | | 6045550135 | | 1 | Edit |
| <input type="checkbox"/> | David | Carter | 3 | 2325550194 | 2325550177 | | 2 | Edit |
| <input type="checkbox"/> | Davis | Swerdlow | 0 | | 2325550172 | | 1 | Edit |
| <input type="checkbox"/> | Elkhart | Taxi | 0 | | 6045550155 | | 1 | Edit |
| <input type="checkbox"/> | Graham | Ball | 0 | | 2325550176 | | 1 | Edit |
| <input type="checkbox"/> | Kathryn | Dolphy | 0 | | 6045550195 | | 1 | Edit |
| <input type="checkbox"/> | Linda | Miller | 0 | | 6045550117 | | 2 | Edit |
| <input type="checkbox"/> | Lydia | Braithwaite | 0 | 2325550157 | | | 1 | Edit |
| <input type="checkbox"/> | Martin | Meyers | 0 | 2325550122 | | | 1 | Edit |
| <input type="checkbox"/> | Mary | Williams | 0 | | 6045550145 | 6045550146 | 1 | Edit |
| <input type="checkbox"/> | Richard | Serling | 0 | | 6045550141 | 787550181 | 2 | Edit |
| <input type="checkbox"/> | Robert | Brown | 2 | | 6045550105 | | 2 | Edit |
| <input type="checkbox"/> | Sandro | Voss | 0 | 2325550149 | | | 1 | Edit |
| <input type="checkbox"/> | Stefan | Wheeler | 0 | | 2325550161 | | 1 | Edit |
| <input type="checkbox"/> | Susan | Ballance | 0 | | 6045550170 | | 1 | Edit |
| <input type="checkbox"/> | Terry | Ng | 0 | | 2325550187 | | 1 | Edit |
| <input type="checkbox"/> | Ursula | Baldwin | 0 | 6045550165 | | | 1 | Edit |

First 1 Last [Next](#)

[Delete Selected Entries](#) [Add New Entry](#) [Clear Directory](#)

Import Local Directory

No File Chosen [Choose File](#)

[Import](#)

Export Local Directory

[Export](#)

WebUI

Directory (continued)

Local Directory

| Click | To... |
|---|--|
| Sort By Last Name | Sort the list by last name. |
| Edit | Edit information for an entry. |
| Last | View the last page of entries. |
| Next | View the next page of entries. |
| Delete Selected Entries | Delete selected entries from the directory. Click Select All to select every entry on the page you are viewing. |
| Add New Entry | Add a new directory entry. |
| Clear Directory | Delete all Directory entries |

To add a new directory entry:

1. Click **Add New Entry**.

The **Create Local Directory Entry** page appears.

The screenshot shows a web interface with a blue sidebar on the left containing 'CONTACTS', 'Local Directory', 'Blacklist', and 'Call History'. The main content area has a dark header with 'STATUS', 'SYSTEM', 'CONTACTS', and 'SERVICING'. Below the header, the title 'Create Local Directory Entry' is displayed. The form fields are: 'First Name' (text input), 'Last Name' (text input), 'Ringer Tone' (dropdown menu showing 'Auto'), 'Account' (dropdown menu showing 'Default Account'), 'Work Number' (text input), 'Mobile Number' (text input), and 'Other Number' (text input). A 'Save' button is positioned below the 'Other Number' field.

2. Enter the required information. At minimum, a first and last name are required.

| Setting | Description | Range | Default |
|---------------|--|--------------------------------------|-----------------|
| First Name | Enter the appropriate names in these fields. | n/a | n/a |
| Last Name | | | |
| Ringer Tone | Sets a unique ringer tone for calls from this directory entry. | Auto, Tone 1–10 | Auto |
| Account | Sets the account used when you dial this directory entry. | Default Account, Account 1–Account 5 | Default Account |
| Work Number | Enter the appropriate numbers in these fields. | n/a | n/a |
| Mobile Number | | | |
| Other Number | | | |

WebUI

Directory (continued)

3. Click **Save**.

To edit a directory entry:

1. Click Edit for the entry you want to edit.

The **Edit Local Directory Entry** page appears.

| STATUS | SYSTEM | CONTACTS | SERVICING |
|-------------------------------------|--|----------|-----------|
| Edit Local Directory Entry | | | |
| First Name: | <input type="text" value="John"/> | | |
| Last Name: | <input type="text" value="Smith"/> | | |
| Ringer Tone: | <input type="text" value="Auto"/> | | |
| Account: | <input type="text" value="Default Account"/> | | |
| Work Number: | <input type="text" value="5551231234"/> | | |
| Mobile Number: | <input type="text" value="5558729663"/> | | |
| Other Number: | <input type="text" value="5556126549"/> | | |
| <input type="button" value="Save"/> | | | |

2. Edit or add the desired information.
3. Click **Save**.

Import Local Directory

You can import an existing local directory file. Importing a directory file replaces all your previous local directory entries. After importing a directory file, you can add, edit, or delete entries as desired.

Note: Directory files are .xml files containing contacts and contact information. For more information about creating or editing a directory file, consult your system administrator.

To import a local directory file:

1. Click **Choose File**.
2. In the **Choose File to Upload** window, navigate to the directory file.
3. Click the file, and then click **Open**.
4. On the WebUI, click **Import**.

Export Local Directory

You can export the directory and save it as an .xml file on your computer.

To export the local directory:

1. Click **Export**.
2. At your browser's prompt, save the file to the desired location on your computer.

WebUI

Speed Dial

The speed dial keys are used for dialing numbers with one key press. To view the speed dial keys, click **SYSTEM** in the WebUI header, and then click **Speed Dial** in the sidebar.

On the Speed Dial page, you can enter up to 10 numbers that you dial frequently. To dial a speed dial number, press and hold the dial pad key that matches the speed dial entry number (for entry 10, press 0). For each speed dial number you enter, you must assign the account on which the number will be dialed out.

You can also add speed dial entries using the deskset. The Speed dial list is accessed through the Features menu. See “Speed Dial” on page 53.

After entering information on this page, click **Save** to save it.

| Key | Name | Value | Account |
|-------|----------------------|----------------------|-----------|
| Key 1 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 2 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 3 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 4 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 5 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 6 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 7 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 8 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 9 | <input type="text"/> | <input type="text"/> | Default ▼ |
| Key 0 | <input type="text"/> | <input type="text"/> | Default ▼ |

To enter speed dial numbers:

1. In the **Name** column, enter a speed dial label for the desired key.
2. In the **Value** column, enter a phone number for the desired key.
3. In the **Account** column, select the account that this speed dial number will use.
4. Click **Save**.

Troubleshooting

If you have difficulty with your telephone, please try the suggestions below. For customer service, visit our website at businessphones.vtech.com or call **1 (888) 370-2006**.

General issues

Screen is blank.

- Ensure power is connected. If powered by an AC adapter, check that adapter is plugged into a wall socket and the Deskset power jack. If powered by PoE, ensure that the network switch is providing power through the correct ports.

The DECT headset doesn't register. "Registration failed" appears on the screen.

- Deregister the headset from the deskset to which it had been registered.
- Remove and replace the headset in its charger before pressing **Register**.

Pages are not received.

- Your phone can be configured to answer a page automatically. See your system administrator if your phone doesn't answer a page automatically.

Calls are answered on the headset rather than the speakerphone after I press a Line key or Answer to answer a call.

- Change the audio mode from Headset to Speaker. See "To set the audio mode:" on page 65.

Incoming calls do not ring on the deskset when using a cordless handset.

- If you are on a call using the handset, then additional incoming calls will emit a call waiting tone on the handset, but the deskset ringer will be silent.

My computer can't connect to the network after plugging the Ethernet cable through the PC port.

- Make sure the deskset is connected to power. The PC port does not work when the deskset does not have power source or during a power outage.
- Make sure you plug the Ethernet cable connected to the router into the deskset Ethernet port and the Ethernet cable connected to the computer into the deskset PC port.

My caller ID isn't working.

- Caller ID is a subscription service. Your telephone service provider may require subscription to this service for this feature to work.
- The caller must be calling from an area that supports caller ID.
- Both your telephone service provider and your caller's service provider must use caller ID compatible equipment.

Specifications

Electrical and environmental specifications

| | |
|---------------------------|-----------------------|
| RF frequency band | 1921.536–1928.448 MHz |
| Channels | 5 |
| Operating temperature | 32–122 °F (0–50 °C) |
| AC adapter output voltage | 5.0 Vdc @ 1500 mA |
| Ethernet network jacks | GigE RJ-45 ports |

Soft Keys

Index of soft keys

The table below provides an alphabetical list of the labels that appear above the deskset soft keys.

| Label | Description |
|--------------|---|
| abc/ABC/123 | Selects the text format for input |
| Add | Enters a new directory group editor |
| Add dot | Enters dot in IP editing field |
| Answer | Answers an incoming call |
| Back | Shows the previous screen |
| Backspc | Moves cursor back to correct entries in text editing fields |
| Blind | Starts the blind transfer process for the active call |
| Bridge | Joins the two active calls in a conference and returns to idle screen |
| Callback | Dials the last missed caller |
| CallFwd | Configures Call Forward settings |
| Cancel | Quits the current screen without saving any settings |
| Clear | Clears on-screen notification and returns to previous screen. |
| Conf | Opens the live dialing editor to enter digits for the conference target |
| ConfLine | Displays a list of held calls as a target for conferencing with the active call |
| Del. All | Deletes all records in a list |
| Delete | 1) Deletes current entry 2) Deletes assignment 3) Deletes Directory group |
| Dial | Sends and dials currently displayed/highlighted digits |
| Directory | Opens the list of available directories |
| Edit | Displays the entry/group editor |
| Edit Dial | Edits a number stored in a list before dialing |
| End | 1) Closes the current page 2) Ends the current call |
| FirstNme | Sorts the directory by first name |
| Forward | Opens the predial editor to begin forwarding a call |
| Hold | Puts current Active Call on hold |
| Info | Displays additional call information |
| Insert | Inserts a number from the directory or call history to a live dialing screen |
| LastNme | Sorts the directory by last name |
| Line | Switches between registered lines |
| New | Press to predial a new call during a call currently put on hold |
| No | Returns to the previous screen |
| Reject | Rejects an incoming call |

Soft Keys

Index of soft keys (continued)

| Label | Description |
|----------|--|
| Resume | Resumes a call put on hold |
| Save | 1) Saves current setting 2) Begins save process |
| Search | Opens the Directory search editor |
| Select | Selects a highlighted option |
| Settings | Opens the User settings menu |
| SetConf | Confirms to set up conference |
| SetXfer | Confirms to transfer call |
| Silence | 1) Silences ringer 2) Stops current call screening 3) Silences chime tone |
| Split | Breaks a conference or call progress into multiple calls |
| Status | Access the status submenu |
| Transfer | Opens the live dialing editor to enter or insert digits of the transfer target |
| Type | Switches between the Directory number types within an entry |
| View | Displays a database/list |
| XferLine | Displays a list of held calls as a transfer target for the active call |
| Yes | Confirm |

Special Characters

Entering special characters

When entering text using the dial pad, the following special characters are available. Press the 1, star (*), 0, or pound sign (#) keys to enter special characters.

| Key | Characters |
|-----|-----------------------|
| 1 | ~ ^ ` % ! & - _ + = |
| * | . @ * |
| 0 | : ; “ , ? |
| # | () [] { } < > / \ # |

Maintenance

Taking care of your telephone

- Your telephone contains sophisticated electronic parts, so you must treat it with care.
- Avoid rough treatment.
- Place the corded handset down gently.
- Save the original packing materials to protect your telephone base if you ever need to ship it.

Avoid water

- You can damage your telephone if it gets wet. Do not use the corded handset in the rain, or handle it with wet hands. Do not install the telephone near a sink, bathtub or shower.

Electrical storms

- Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND NETWORK CABLE FROM THE WALL**, then pull the unit out by the unplugged cords.

GPL License Information

GPL code requests

Portions of the software associated with this product are open source, and fall within the scope of the GNU General Public License (GPL). Accordingly, those portions of code are available to the public, consistent with the requirements of the GPL, in either source code format or object code format, depending upon the nature of the code at issue. If you would like to exercise your right to receive the available code, please send a written request for the available code along with a cashier's check, payable to VTech Communications, Inc., in the amount of \$15.00 (U.S.\$) to:

VTech Communications, Inc.,
9590 SW Gemini Drive, Suite 120
Beaverton OR 97008

ATTN: Information Technology Group—VSP735 GPL code request

If your request does not fully comply with the foregoing requirements, VTech reserves the right to reject your request. Further, by requesting and receiving the available code, you release VTech, its affiliates, and its and their officers, directors, employees, and representatives ("VTech Parties") from any liability or responsibility relating to such code, and you acknowledge that the VTech Parties make no representations with respect to the origin, accuracy, usability, or usefulness of such code, and the VTech Parties have no responsibility to you whatsoever concerning the code, including without limitation any responsibility to provide explanation, support, upgrade, or any communication whatsoever. Your review or use of the available code is at your sole risk and responsibility.

VTECH COMMUNICATIONS LTD.

A member of THE VTECH GROUP OF COMPANIES.

Distributed in the U.S.A. by VTech Communications Inc., Beaverton, Oregon 97008.

VTech is a registered trademark of VTech Holdings Limited.

ErisTerminal® is a registered trademark of VTech Communications Inc.

Specifications are subject to change without notice.

Copyright © 2015–16 for VTECH COMMUNICATIONS LTD. All rights reserved.

Version 7, 05/16