Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

TONE X OPER (1) QUIET #

CS6648-2 CS6648-3 CS6648-4 CS6649 CS6649-2 CS6649-3

DECT 6.0 cordless telephone

PORS 7 (TUV 8 (RE72 9)

TONE X OPEN O QUET#

vtech

Abridged user's manual



elephones identified with this logo when used with most T-coil equipped rademark of the Telecommunications

# Congratulations

on purchasing your new VTech product. Before using this telephone, please read **Important** safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form. Please refer to the online User's manual for a full set of installation and operation instructions at www.vtechphones.com





nave reduced noise and interference nearing aids and cochlear implants. The TIA-1083 Compliant Logo is a ndustry Association. Used under

# Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is

What's in the box



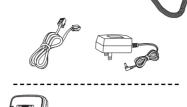

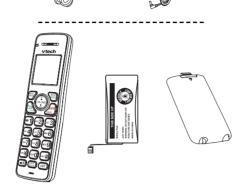

1 set for CS6649: 2 sets for CS6648-2/CS6649-2 3 sets for CS6648-3/CS6649-3 4 sets for CS6648-4



1 set for CS6648-2/CS6649-2 2 sets for CS6648-3/CS6649-3 3 sets for CS6648-4

Abridged user's



### 1 - LCD display 2 - IN USE light

3 – FLASH

- On when the phone is in use, or when the
- answering system is answering a call.
- On when a handset is being registered. · Flashes when there is an incoming call.
- Flashes when handsets are being deregistered. Flashes when another telephone on the

# same line is in use

Return to the previous menu or idle mode

Press and hold to erase the missed call

indicator when the phone is not in use.

While the phone is ringing, press to silence

Review the caller ID log when the telephone

Move the cursor to the left when entering

Decrease the listening volume during a call

Review the directory when the phone is not

Move the cursor to the right when entering

Increase the listening volume during a call or

Scroll up while in a menu, or in the directory,

Scroll down while in a menu, or in the

directory, caller ID log or redial list.

without making changes.

the base ringer temporarily.

is not in use

numbers or names

or message playback

caller ID log or redial list

- Answer an incoming call when you receive a Mute the microphone during a call. call waiting alert. · Silence the base ringer temporarily while CANCEL
  - the phone is ringing ▼ VOL ▲

5 – MUTE

**≫**/SKIP

Adjust the listening volume.

Press to skip to the next message

- Adjust the telephone base ringer volume 也/ANS ON/OFF
- · Press to turn the built-in answering system
- on or off.

### REDIAL/PAUSE Review the redial list

message playback

or to transfer a call.

phone is not in use.

playing announcement.

FIND HANDSET

- ▶/■ /PLAY/STOP

X/DELETE

save an entry or setting.

· While in a menu, press to select an item, or

Press to initiate or answer an intercom call,

· Press to page all handsets when the

Press to start or stop message playback

· Press to delete the playing message or

· While reviewing the redial list, directory or

caller ID log, press to delete an individual

While entering names or numbers, press to

· Press once to repeat the playing message.

Press twice to play the previous message.

memos in the answering system.

Flashes when there are new messages or

MENU/SELECT

· Show a menu.

- Press repeatedly to view the last 10
- numbers dialed.
- Press and hold to insert a dialing pause while dialing or entering numbers.

### Press to make, answer or end a call.

- During a call, press to switch between
- the corded handset and the base speakerphone

### Press and hold to set and turn on the quiet mode, or turn it off.

· Press repeatedly to display other dialing

# options when reviewing a caller ID log entry.

# Transfer a call

While on an outside call, you can transfer the call from a cordless handset to another handset or the elephone base

- 1. During a call, press MENU.
- the telephone base or 1-5 for **HANDSET 1** to
- HANDSET 5. 4. To answer the call on the destination handset, press TALK, • ) or any dialing key on the handset

# or any dialing key on the telephone base

outside call

- When a handset or the telephone base is already on a call, press TALK or ■ on another handset to join the call
- charger to exit the call. The call continues until both devices hang up

- on the telephone base. Place the corded handset back to the
- telephone base or press **■\\\\\SPEAKER** on the telephone base to exit the call. The call continues until both devices hang up.
- tone when there is an incoming call while you are already on a call Press FLASH to put your current call on hold
- and take the new call. Press FLASH to switch back and forth between

Use this feature helps you find misplaced

# To start paging:

 Press FIND HANDSET on the telephone base and its screen displays \*\* Paging \*\*. All idle handsets ring and display \*\* Paging \*\*.

### To stop paging:

- Press ¬ALK , ■) , OFF or any of the dialing keys on the cordless handset.
- Place the cordless handset to the handset


· Switch to tone dialing temporarily during a call. 9 - MIC

Press to enter space during text editing.

Microphone

- While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or
- saving it in the directory. · Press and hold to set or dial your voicemail
- 11 Speakerphone

### 12 - Corded handset

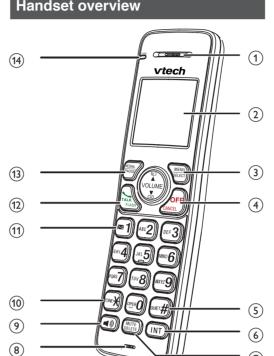

2 - LCD display

1 - Handset earpiece

- Show the menu
- · While in a menu, press to select an item or save an entry or setting.
- Hang up a call.
- Return to the previous menu or idle mode
- without making changes.

## 

- Press FIND HANDSET on the telephone base.

Use the intercom feature for conversations between the telephone base and a cordless handset, or two cordless handsets.

Press 7 for the telephone base or 1-5 for **HANDSET 1** to **HANDSET 5**.

# cordless handset:

- I. Press INT on the cordless handset when the 2. To answer the intercom call on the destination
- handset, press  $\sum_{TALK}$ , **INT**, or any dialing key. To answer the intercom call at the telephone
- 3. To end the intercom call on either handset, one party presses **OFF**, or places the handset back in the handset charger.
- To end the intercom call at the telephone base, press INT or ■ **\*\*** SPEAKER when using the base speakerphone, or place the corded handset back to the telephone base.

### To initiate an intercom call at the elephone base:

- phone is not in use. 2. To answer the intercom call on the destination
- handset, press  $\sum_{\text{TALK}}$ , **INT**,  $\blacktriangleleft \emptyset$  or any dialing key. . To end the intercom call at the telephone base, press INT, or I)/SPEAKER when using the base speakerphone, or place the corded
- To end the intercom call on the destination nandset, press **OFF**, or place the handset back in the handset charger.

- Silence the handset ringer temporarily
- while the phone is ringing. • Press and hold to erase the missed call indicator when the phone is not in use.

- Press and hold to set and turn on the quiet
- mode, or turn it off. Press repeatedly to display other dialing options when reviewing a caller ID log entry.

Delete digits while predialing.

· Press to initiate or answer an intercom call, or to transfer a call.

### 7 - MUTE/DELETE

- Mute the microphone during a call. Silence the handset ringer temporarily while
- the phone is ringing.
- Delete the displayed entry while reviewing the directory, caller ID log or redial list.
- · Delete digits or characters when entering numbers or names
- Delete the playing message or playing announcement.

### 8 - Microphone

• Press to make or answer a call.

if you have pulse service.

saving it in the directory

· During a call, press to switch between the handset speakerphone and the handset

# Press to switch to tone dialing during a call

 While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of

the telephone number before dialing or

• Press and hold to set or dial your voicemail

- Press to make or answer a call. During a call, press to answer an incoming
- call when you receive a call waiting alert 13 - REDIAL/PAUSE Review the redial list.

· Press and hold to insert a dialing pause

# while dialing or entering numbers.

14 - CHARGE light On when the handset is charging in the handset charger.

he battery icon flashes when the

battery is low and needs charging.

The battery icon animates when the

he battery icon becomes solid whe

There are new voicemail received fron

The answering system is turned on.

to reduce power consumption when

the handset is within range from the

The entry you are reviewing is new in

The number of current playing

nessage and the total number of

ne ECO mode activates automaticall

our telephone service provider.

battery is charging.

the battery is fully charged

The handset ringer is off.

Charger overview

Vtech

**ANS ON** 

**ECO** 

### a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet 1 - Charging pole If you subscribe to digital subscriber line (DSL) Display icons overview Handset display icons

desktop usage or wall mounting.


Use only the adapters provided.




You can choose to connect the telephone base for

Make sure the electrical outlets are not controlled by


The adapters are intended to be correctly oriented in

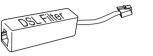

## Connect the telephone bas

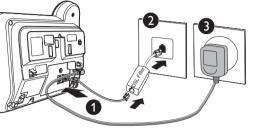

### Mount the telephone base

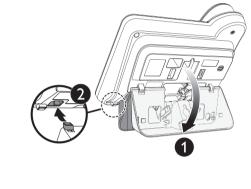

# The telephone base ringer is off.

essages recorded.

the caller ID log.

Telephone base display icons

VM	There are new voicemail received from your telephone service provider.	
NEW	The entry you are reviewing is new in the caller ID log.	
MSG/	The total number of messages recorded when the telephone base is not in use. The number of the playing message.	

### Press and hold PAUSE to insert a dialing pause (for entering numbers only).

Press ▼ or ▲ to move the cursor to the left or

- Press 0 to add a space (for entering names
- Review a directory entry Entries are sorted alphabetically.
- phone is not in use, or  $\blacktriangle \$  on the telephone pase when the telephone base is not in use Press ▼ or ▲ to browse through the directory

1. Press 🖾 on the cordless handset when the

or use the dialing keys to start a name search Dial a directory entry

## When the desired entry appears:

- Press TALK or on the handset.
- Lift the corded handset or press **■)/SPEAKER**

## Edit a directory entry

- 1. When the desired entry displays, press SELECT.
- 2. Use the dialing keys to edit the number, then press **SELECT**.

### press **SELECT**. Delete a directory entry


### **DELETE**. When the screen displays **Delete** contact?, press SELECT.

### 2. Press ▼ or ▲ to scroll to **Directory**, then press SELECT.

# 3. Press ▼ or ▲ to scroll to **\$Speed dial**, then


- press **SELECT**. 4. Press **▼**, **△** or a dialing key (**0** or **2-9**) to choose
- Press SELECT. The screen displays Copy
- 6. Press ▼ or ▲ to scroll to desired entry, then press **SELECT**.
- Dial a speed dial number When the phone is not in use, press and hold a

dialing key (0 or 2-9) to dial the number stored in the corresponding speed dial location.

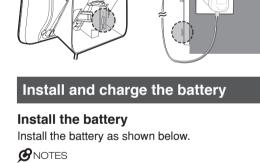


 Use only supplied battery. Charge the battery provided with this product only in accordance with the instructions and

limitations specified in this manual. · If the handset will not be used for a long time disconnect and remove the battery to prevent possible leakage.

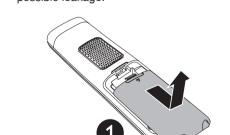

Connect the charger and charge the

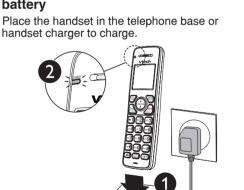

Once you have installed the battery, the handset LCD display indicates the battery status (see the

## table on next page).

s blank, or

ashes.

displays

The screen

Low battery

The screen

HANDSET X

displays Put in

charger and []

· For best performance, keep the handset in the telephone base or charger when not in use. · The battery is fully charged after 11 hours of

charge. The

handset cannot

The battery has

enough charge

The battery is

o be used for a (about 30

• If you place the handset in the telephone base or the charger without plugging in the battery, the screen displays NO BATTERY. home or office. Charge without The screen The battery has

(about 30

minutes).

Charge withou

To keep the

battery charged

handset charge

when not in use

place it in the

If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

After you install your telephone or power returns following a power outage, the handset will prompt you to set the date and time.

- Make sure you set the date and time including the year
- 1. Use the dialing keys (0-9) to enter the month MM), date (DD) and year (YY). Then press

### (HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM.

for more information.

is successful

3. Press SELECT to save Check for dial tone

# Make sure the installation procedures described above are properly done.

Operating range This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base

When the handset is out of range, the handset displays Out of range or no pwr at base.

Set date and time

- correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp
- 2. Use the dialing keys (0-9) to enter the hour

# Press TALK. If you hear a dial tone, the installation

If you do not hear a dial tone:

### It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider

and handset, the weather, and the layout of your

If there is a call while the handset is out of range. it may not ring, or if it does ring, the call may not connect well when you press TALK. Move closer to the telephone base, then press TALK to answer the

# ing the telephone base/

You can use the telephone base or a cordless handset to change your telephone settings. 1. Press MENU when the phone is not in use.

2. Press ▼ or ▲ until the screen displays the desired feature menu.

3. Press **SELECT** to enter that menu.

CANCEL

SELECT

messages time stamp

## To return to the previous menu, press To return to idle mode, press and hold

## Configure your telephone Set language

screen displays 1. Press **MENU** when the handset/telephone base is not in use.

2. Press **▼** or **▲** to scroll to **♦Settings**, then press

**♦Español**, then press **SELECT**.

The LCD language is preset to English. You can

select English, French or Spanish to be used in all

### Press SELECT to select \$LCD language. 4. Press ▼ or ▲ to select **†English**, **†Français** or

Set date and time **⊘**NOTE Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded

1. Press **MENU** when the handset/telephone base is not in use. 2. Press ▼ or ▲ to scroll to **\$Set date/time**, then press SELECT 3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press

4. Use the dialing keys (0-9) to enter the hour

(HH) and minute (MM). Then press ▼ or ▲ to

### Press SELECT. Temporary tone dialing

mode after you end the call.

choose AM or PM.

If you have pulse (rotary) service only, you can switch from pulse to touch-tone dialing temporarily during a call. During a call, press TONEX. Use the dialing keys to enter the number you wish to dial. The telephone sends touch-tone

signals. It automatically returns to pulse dialing

# elephone operations

numbers or names.

 Press ¬ALK or ■) on the handset and then dial the number.

Lift the corded handset, or press **■\( \)\( SPEAKER \)** 

on the telehpone base, then dial the number.

Answer a call Press → , ■ or any of the dialing keys on the handset.

### Lift the corded handset, or press ■ \*\*/SPEAKER or any of the dialing keys on the telephone base.

Press **OFF** on the handset or place the handset in the handset charger

When you are using the corded handset, place

it on the telephone base. When you are using the base speakerphone, press **◄》/SPEAKER**.

### When the cordless handset is on a call, press ■)) to switch between the handset speakerphone and the handset earpiece

Speakerphone

End a call

between the telephone base speakerphone and the corded handset. Volume During a call, press **▲/VOLUME** or **▼/VOLUME** on the handset, or press ▼ VOL or VOL ▲ on

the telephone base to adjust the listening

The mute function allows you to hear the other

· When the corded handset is on a call, press

■ NSPEAKER on the telephone base to switch

party but the other party cannot hear you. 1. During a call, press MUTE on the handset. The handset displays **Muted** until the mute function is turned off.

2. Press **MUTE** on the handset again to resume

the conversation. The handset displays

# Microphone on briefly.

1. During a call, press **MUTE** on the telephone base. The telephone base displays Muted and the MUTE light turns on until the mute function is turned off. 2. Press MUTE on the telephone base again to resume the conversation. The telephone base

displays **Microphone** on briefly.

2. Press ▼ or ▲ to scroll to **†Transfer**, then press SELECT. 3. Your handset shows **Transfer to:** Press **7** for

### 

Join a call in progress You can use the telephone base and a cordless handset, or two cordless handsets at a time on an

# Press **OFF** or place the handset in the handset

Lift the corded handset or press ■ \*\*/SPEAKER

### Call waiting If you subscribe to call waiting service from your telephone service provider, you hear an alert

# Find handset

Do not press and hold FIND HANDSET for more than four seconds. It may lead to handset deregistration.

# To initiate an intercom call with a

base, press **■ )**/**SPEAKER**, **INT**, any dialing key, or lift the corded handset

1. Press **INT** on the telephone base when the

# handset back to the telephone base.

## Answer an incoming call during an If you receive an incoming outside call during an

ntercom call, you will hear an alert tone.

To answer on a cordless handset

To answer the call, press TALK The intercom call ends automatically To end the intercom call without answering or

canceling the incoming call, press OFF. The

handset back to the base. The intercom call

back to the base. The telephone continues to

To transfer a call with a cordless handset:

2. To answer the call on the destination handset,

### telephone continues to ring. To answer at the telephone base: Press **■)/SPEAKER**, or place the corded

ends automatically. Then press **◄ \*\*\*/SPEAKER** or lift up the corded handset to answer the cal To end the intercom call without answering or canceling the incoming call, press **◄》/SPEAKER**, or place the corded handset

### Call transfer using intercom Use the intercom feature to transfer an outside call to another cordless handset or the telephone

During a call, press INT

### press TALK, INT, ■), or any dialing key. The outside call is still on hold. You can now have a private intercom conversation. To answer the call at the telephone base

press INT, ■ WSPEAKER, any dialing key or

lift the corded handset. The outside call is still

on hold. You can now have a private intercom

## To transfer a call at the telephone base: During a call, press INT.

2. To answer the call on the destination handset press TALK, INT, ■), or any dialing key. The outside call is still on hold. You can now have a private intercom conversation.

# Each handset and the telephone base store the

last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry. Review and dial a redial list entry

1. Press **REDIAL** on the handset or the telephone

### 2. Press **▼**, **▲** or **REDIAL** repeatedly until the desired entry displays. 3. When the desired entry displays, press TALK or

base when the phone is not in use.

on the handset to dial.

Delete a redial list entry

Add a directory entry

press **SELECT**.

of that particular key.

5. Press **SELECT** to save.

or character

-OR-

Directory

### Lift the corded handset or press **◄ \*\*/SPEAKER** on the telephone base to dial.

shared by all handsets and the telephone base.

1. Enter the number when the phone is not in use.

telephone base when the phone is not in

Copy a number from the redial list by pressing

repeatedly to find the desired number. Press

Additional key presses show other characters

While entering names and numbers, you can:

· Press DELETE to backspace and erase a digit

Press and hold DELETE to erase the entire entry.

3. Press **SELECT** to move on to enter the name.

4. Use the dialing keys to enter the name.

**REDIAL** and then press **▼**, **△** or **REDIAL** 

· Press MENU on the handset or on the

use, then press **▼** or **△** to scroll to **♦** 

Directory, then press SELECT.

Use the dialing keys to enter the number.

**SELECT** to copy the number.

Each entry may consist of a telephone number

with up to 30 digits and a name with up to 15

Press MENU, then go to Step 3.

### While the screen displays the desired number, on the telephone base press **DELETE** on the handset or press X/DELETE on the telephone base.

The directory can store up to 50 entries, which are

# . When the desired entry appears, press

Speed dial

dial these numbers more quickly. Assign a speed dial number

the desired speed dial location.

# 3. Use the dialing keys to edit the name, then

### You can copy up to nine directory entries into the speed dial locations (0 and 2-9) so that you can

### • Press $\triangledown$ or $\blacktriangle$ to scroll to ♠Add contact, then 1. Press **MENU** when the phone is not in use.

- Press MENU when the phone is not in use.
- 2. Press ▼ or ▲ to scroll to **†Directory**, then press SELECT
- 3. Press ▼ or ▲ to scroll to **\$Speed dial**, then press SELECT 4. Press **▼**, **▲** or a dialing key (**0** or **2-9**) to choose the desired speed dial location, then press
- **SELECT** to show the speed dial entry. 5. Press **SELECT** again. Then press **▼** or **△** to scroll to **♦Clear SD** and then press **SELECT**. The screen shows Clear SD #X?

Press **DELETE**. The screen shows **Clear SD** 

Press SELECT to confirm

### Caller ID

If you subscribe to caller ID service, information about each caller will appear after the first or second ring. If you answer a call before the caller's information appear on the screen, it will not be saved in the caller ID log.

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the phone number has more than 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

### Review a caller ID log entry 1. Press CID on the cordless handset or the

telephone base when the phone is not in use. 2. Press ▼ or ▲ to browse through the caller ID

## Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the screens display XX missed calls.

Each time you review a caller ID log entry marked **NEW** on the handset or **NEW** on the telephone base, the number of missed calls decreases by one When you have reviewed all the missed calls, the missed call indicator no longer displays.

If you do not want to review the missed calls one by one, press and hold CANCEL when not in use to clear the missed call indicator. All the entries are then considered old. Dial a caller ID log entry

When the desired entry displays, press → or ■ on the handset to dial.

When the desired entry displays, press ■ SPEAKER or lift the corded handset to dial.

Save a caller ID log entry to the directory 1. When the desired caller ID log entry displays,

2. Use the dialing keys to modify the number, if necessary. Then press SELECT.

necessary. Then press SELECT. Delete caller ID log entries

· When the desired caller ID log entry displays, press **DELETE**. To delete all caller ID log entries: 1. Press **MENU** on the handset or on the

3. Use the dialing keys to modify the name, if

telephone base when the phone is not in use. 2. Scroll to **Caller ID log** and then press

3. Scroll to **Del all calls** then press **SELECT** 

## Sound settings

You can turn the key tone on or off for each handset and the telephone base 1. Press **MENU** when the handset/telephone base

- is not in use 2. Scroll to **♦Settings** and then press **SELECT**.
- 3. Scroll to choose **♦Key tone**, then press SELECT.
- 4. Press ▼ or ▲ to choose **\$Key tone:On** or **\$Key** tone:Off, then press SELECT to save.

### Ringer tone You can choose from different ringer tones for

each handset and the telephone base. 1. Press **MENU** when the handset/telephone base

- Scroll to **†Ringers** and then press **SELECT**. 3. Scroll to choose **†Ringer tone**, then press SELECT.
- 4. Press **▼** or **△** to sample each ringer tone, then press **SELECT** to save.

## If you turn off the ringer volume on a cordless handset,

you will not hear ringer tone samples. Telephone base ringer volume

Press ▼ VOL or ▲ VOL on the telephone base to adjust the ringer volume when the telephone base is not in use. When you set the ringer volume to zero, the base

ringer is off. The telephone base announces. "Base ringer is off," and displays Ringer off and

### Handset ringer volume You can adjust the handset ringer volume level, or

then press **SELECT** to save.

Temporary ringer silencing

To silence the handset ringer:

base and it displays

displays **Ringer muted** and  $\Delta$ .

To silence the telephone base ringer

Press MUTE or CANCEL on the telephone

You can turn on quiet mode for a period of time

paging tone) and call screening are muted.

elephone base is not in use.

To turn the quiet mode off:

To set and turn the quiet mode on:

2. Use the dialing keys to enter the desired

duration (1-12), then press **SELECT**.

1. Press and hold QUIET# when the handset/

While the quiet mode is on, press and hold

(1-12 hours). During this period, all tones (except

1. Press MENU when the handset/telephone base

Scroll to **†Ringers** and then press **SELECT** 

3. Press ▼ or ▲ to sample each volume level,

When the ringer volume is set to off, the handset still

rings when you press FIND HANDSET at the telephone

When the telephone is ringing, you can temporarily

silence the ringer without disconnecting the call.

The next call rings normally at the preset volume.

Press **MUTE** or **CANCEL** on the handset and it

turn the ringer off.

is not in use.

**⊘**NOTE

QUIET#.

imited warranty

## About the built-in answering system and voicemail service

essages are

elephone base

You messages

When you

essages, the

andset and the

both display XX

new messages

PLAY/STOP ligh

on the telephor

base flashes.

o retrieve

there are two

essages, us

Press ►/■/

the telephon

remotely with

an access

code.

and the ►/■

to retrieve I received new

ressages

will not be deleted

utomatically. You

ssage manually.

have to delete your I deleted after a

ored in the

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fee may apply). The main differences between them are:

essages are

tored in a server

by your telephone

ervice provider.

Your messages

automatically

period of time.

ontact your

lephone service

provider for more

When you receive

iew messages.

o retrieve

PLAY/STOP on by your telephone

essages, you

need an access

umber and/or a

ervice provider.

ssword provide

he handset and

telephone bas play 🕌 and

may be

details.

r system provided

Your answering system allows you to set your announcement, to save and delete messages activate call screening, to set number of rings before pick up, to access remotely, and to control he recording time

## Turn the answering system on or off The answering system must be turned on to

answer and record messages. Press **O/ANS ON/OFF** to turn the built-in

answering system on or off. 1. Press **MENU** when the handset/telephone base

2. Press **▼** or **△** to scroll to **♦**Answering sys, then press SELECT

3. Press **▼** or **△** to scroll to **♦**Answer on/off, then press SELECT

4. Press ▼ or ▲ to scroll to \$Answer: On or \$ Answer: Off, then press SELECT.

### Default announcement

The telephone is preset with a greeting that answers calls with, "Hello. Please leave a message after the tone." You can use this preset announcement, or replace it with your own.

### Record your own announcement The announcement can be up to 90 seconds in

- 1. Press **MENU** when the phone is not in use. Press ▼ or ▲ to scroll to ♣Answering sys, then press **SELECT** twice.
- 3. The system announces, "To play, press 2. To record, press 7." Press 7 to record.
- 4. The system announces, "Record after the tone. Press 5 when you are done." After the tone. speak towards the microphone.

### Press 5 when done. Play your announcement

. Press **MENU** when the phone is not in use. 2. Press **▼** or **△** to scroll to **♦**Answering sys, then press **SELECT** twice.

modifications to this limited warranty and you

State/Provincial Law Rights: This warranty gives

imitations: Implied warranties, including those of

fitness for a particular purpose and merchantability

(an unwritten warranty that the Product is fit for

date of purchase. Some states/provinces do not

allow limitations on how long an implied warranty

ordinary use) are limited to one year from the

lasts, so the above limitation may not apply to

you. In no event shall VTech be liable for any

ndirect, special, incidental, consequential, or

similar damages (including, but not limited to lost

profits or revenue, inability to use the Product or

other associated equipment, the cost of substitute

provinces do not allow the exclusion or limitation of

incidental or consequential damages, so the above

Please retain your original sales receipt

as proof of purchase.

equipment, and claims by third parties) resulting

from the use of this Product. Some states/

imitation or exclusion may not apply to you.

you specific legal rights, and you may also have

other rights, which vary from state to state or

should not rely on any such modification

province to province.

3. The system announces, "To play, press 2. To record, press 7." Press 2 to play the current announcement

### Options during playback: Set your built-in answering system Press **▼/VOLUME** or **▲/VOLUME** on the

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 14 minutes. The actual recording time depends on individual message characteristics

press **SELECT** twice. 3. The system announces, "To play, press 2. To record, press 7." Press 3 or DELETE to delete your recorded announcement.

When your announcement is deleted, calls are answered with the default announcement.

cordless handset, or **▼ VOL** or **VOL ▲** on the

telephone base to adjust the listening volume.

1. Press **MENU** when the phone is not in use.

2. Press ▼ or ▲ to scroll to **\$Answering sys**, then

### Set number of rings

Press 5 to stop playback.

Delete your announcement

You can set the answering system to answer an incoming call after two, three, four, five or six rings; or toll saver. If you choose toll saver, the answering system answers a call after two rings if you have new messages, or after four rings when there are no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges when you are calling from outside your local area. 1. Press **MENU** when the phone is not in use.

- 2. Press ▼ or ▲ to scroll to **♦Answering sys**, then press SELECT.
- 3. Press **▼** or **△** to scroll to **♦**Ans sys setup, then press SELECT
- Scroll to **\\$# of rings**, then press **SELECT**.
- 5. Press **▼** or **△** to select **♦2**, **♦3**, **♦4**, **♦5**, **♦6** or **♦Toll saver**, and then press **SELECT**.

### Set recording time You can set the recording time allowed for each

incoming message 1. Press **MENU** when the phone is not in use.

- 2. Press **▼** or **△** to scroll to **♦**Answering sys, then press **SELECT**
- 3. Press ▼ or ▲ to scroll to \$Ans sys setup, then press SELECT
- Scroll to **♦Recording time**, then press SELECT.
- 5. Press ▼ or ▲ to select **\$3 minutes**, **\$2 minutes** or **\$1 minute**, and then press **SELECT**.

# Jsing your built-in answering

## New message indication

When there are new answering system messages the handset and the telephone base display XX new messages, and the ▶/■/PLAY/STOP light on the telephone base flashes.

If the message alert tone is turned on, the telephone base beeps every 10 seconds when

there are messages that have not been reviewed.

To play messages at the telephone base:

1. Press **MENU** when the phone is not in use.

Press ▼ VOL or VOL ▲ to adjust the message

Press **WREPEAT** twice to hear the previous

message. The system advances to the next

To play messages with a cordless handset:

Press ▼/VOLUME or ▲/VOLUME to adjust the

· Press 4 to repeat the message. Press 4 twice

message. The system advances to the next

You can only delete old (reviewed) messages.

them. You cannot retrieve deleted messages

You cannot delete new messages until you review

To delete all messages with the telephone

1. Press **X/DELETE** twice when the phone is not

To delete all old messages with a handset:

Press ▼ or ▲ to scroll to \$Answering sys, then

Press MENU when the phone is not in use.

3. Press ▼ or ▲ to scroll to **†Delete all old**, and

Press 3 or DELETE to delete the playing

1. Press **MENU** when the phone is not in use.

Press SELECT to select ₱Play messages.

Press SELECT to select ₱Play messages.

Press ►/SKIP to skip to the next message.

Press REPEAT to repeat the message.

Press X/DELETE to delete the playing

• Press STOP or 5 to stop the playback.

Press ►/■/PLAY when the phone is not in use.

### Message playback

Options during playback:

playback volume.

Options during playback:

message playback volume.

to hear the previous message

· Press OFF to stop the playback.

Delete all old messages

Press 6 to skip to the next message.

answering system remotely from any touch-tone telephone. The preset code is 19. You can use this oreset code, or set your own.

Remote access

\*5

\*7

8

0

 Dial your telephone number from any touchtone telephone.

Hear a list of remote commands.

Skip to the next message

Record a new announcement.

Turn the answering system on or off.

(during playback).

End the call.

sing the built-in answering

4. Hang up or press 8 to end the call.

When the system plays your announcement

A two-digit security code is required to access the

enter the two-digit security code. Enter one of the following remote commands.

er one of the	ne following remote commands.	When you received a voicemail, the handset and the telephone base display and New voicemail. To retrieve, you typically dial an acc	
ommand	Description		
1	Play all messages.	number provided by your telephone service	
2	Play only new messages.	provider, and then enter a security code. Conta your telephone service provider for instructions	
3	Delete the current message (during playback).	how to configure the voicemail settings and list to messages.	
33	Delete all old messages.	<b>Ø</b> NOTE	
4	Repeat the current message (during playback).	After you have listened to all new voicemail messages, the indicators on the handset and the	
5	Stop.	telephone base turn off automatically.	

Fees may apply.

Retrieve voicemail

# Turn off the new voicemail indicator

If you have retrieved your voicemail while away rom home, and the telephone still displays the new voicemail indicators, use this feature to turn off the indicators

Voicemail is a feature available from most

This feature turns off the indicators only, it does not delete your voicemail messages.

- 1. Press **MENU** when the handset/telephone base is not in use
- Scroll to \$Settings, then press SELECT. 3. Scroll to **♦CIr voicemail** #, then press **SELECT**
- 4. Press **SELECT** again to confirm.

### Expand your telephone system

You can add new handsets (CS6609, purchased separately) to your telephone system. Your telephone base supports a maximum of five For more details, refer to the user's manual that

comes with your **CS6609** new handset

# General product care

Taking care of your telephone Your cordless telephone contains sophisticated

with your telephone service, or may be optional. Avoid rough treatment Place the handset down gently. Save the original packing materials to protect your telephone if you

base near a sink, bathtub or shower.

# ever need to ship it.

Avoid water Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone

surges harmful to electronic equipment. For your own safety, take caution when using electrical

### Cleaning your telephone

# equently asked questions

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, visit our website at www.vtechphones.com or call 1 (800) 595-9511 for customer service.

My telephone Make sure the telephone

	does not work at all.	base is installed properly, and battery is installed and charged correctly. For optimum daily performance return the handset to the telephone base after use.
	The display shows <b>No line</b> . I cannot hear the dial tone.	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.
		If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.
		You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your service provider for solutions.
	The display shows <b>To</b> register <b>HS</b> and <b>See manual</b> alternately. The	The handset is deregistered from the telephone base. To register it back:  1. Press and hold FIND HANDSET on the

telephone base for about

IN USE light turns on and

set my LCD

language to

French, and I

don't know how

to change it back

Spanish or

to English.

four seconds until the

it shows **Registering..** 

Press QUIET# on the

handset. The handset

shows Registering...

Both the telephone base

and cordless handset

show Registered, and

you hear a beep when

the registration process

completes. This process

takes about 60 seconds

f registration fails, the

handset displays Failed.

Repeat steps 1 to 2 again.

work at all.

handset does not

### Make sure the answering system is on. When the ot record nswering system is on ANS ON should display iessages. on the handset and the telephone base. When the answering machine memory is full it does not record new nessages until some old messages are deleted. If you subscribe to

voicemail service, change the number of rings so that vour answering system answers before your voicemail service answers To determine how many rings activate your voicema service, contact your

elephone service provide The answering Make sure you have set system does the date and time. See not announce Configure your telephone the correct day of the week for recorded messages time stamp.

If a caller leaves a very long he messages on the answering | message, part of it may be system are lost when the answering incomplete. system disconnects the call after the preset recording

back to English.

If the memory on the answering system becomes full during a message, the answering system stops recording and disconnects the call. While the handset is not in use, press **MENU** and

then enter **X364**# to change the handset LCD language

other liquid intrusion: or alteration or modification by anyone other than

an authorized service representative of VTech; 3. Product to the extent that the problem experienced is caused by signal conditions,

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in

the United States of America and Canada. What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

What is not covered by this limited warranty? This limited warranty does not cover: 1. Product that has been subjected to misuse,

- accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or 2. Product that has been damaged due to repair,
- network reliability, or cable or antenna systems; 4. Product to the extent that the problem is caused by use with non-VTech accessories;

 Product whose warranty/quality stickers. product serial number plates or electronic serial numbers have been removed, altered or

- 6. Product purchased, used, serviced, or shipped or repair from outside the United States of America or Canada, or used for commercial or nstitutional purposes (including but not limited to Products used for rental purpos
- 7. Product returned without a valid proof of purchase (see item 2 below); or 8. Charges for installation or set up, adjustment of

systems outside the unit. How do you get warranty service? To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review

customer controls, and installation or repair of

the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit.

If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty. What must you return with the Product to get

- warranty service? Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
- 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct

mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make

# **Disclaimer and Limitation of**

VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product.

Company: VTech Communications, Inc. Address: 9020 SW Washington Square Road -Ste 555 Tigard, OR 97223, United States Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada

# echnical specifications

then press **SELECT** twice.

Frequency Crystal controlled PLL synthesizer control Transmit 1921.536-1928.448 MHz frequency Telephone base: 1921.536-1928.448 MHz

effective IC. Actual operating range may vary range according to environmental conditions at the time of use. requirement 2.4V Ni-MH battery 6V DC @ 400mA

### service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact your telephone service

If you are on a call, or if the answering system s busy recording a message and you receive another call, the second caller can leave a oicemail message

six seconds per ring when determining the

appropriate setting.

You can use your answering system and voicemail

Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, if your voicemail answers after six rings, set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings. In this case, allow

# etrieve voicemail from telephone

electronic parts, so it must be treated with care. telephone service providers. It may be included

### Electrical storms

Electrical storms can sometimes cause power appliances during storms.

VTech is a registered trademark of VTech Holdings Limited. Specifications are subject to change without notice © 2019 VTech Communications Inc. All rights reserved. 11/19. CS6649-X\_ACIB V14.0 Document order number: 91-007067-070-100



Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

Designed to fit your home.

6V DC @ 400mA 50 memory locations: up to 30 digits and 15 characters Caller ID log: 50 memory locations up to 24 digits and 15 characters

Maximum power allowed by FCC and