DECT 6.0 cordless telephone



F085 7 TUV 8 W172 9

CS6948-3

CS6949-2

CS6949-3

CS6949





Abridged user's manual

Congratulations

on purchasing your new VTech product. Before using this product, please read **Important** safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form. Please refer to the User's manual for a full set of installation and operation instructions at



www.vtechphones.com.

Telephones identified with this ogo have reduced noise and terference when used with most T-coil equipped hearing ids and cochlear implants. he TIA-1083 Compliant ogo is a trademark of the elecommunications Industry ssociation. Used under license



he ENERGY STAR® program www.energystar.gov) recognizes and encourages the use of products that save energy and elp protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.



1 set for CS6949



1 set for CS6949



Check for dial tone

Operating range

If you do not hear a dial tone:

Make sure the installation procedures

described above are properly done.

changed your telephone service to digital

service from a cable company or a VoIP

service provider, the telephone line may

telephone jacks to work. Contact your cable,

VoIP service provider for more information.

need to be rewired to allow all existing

This cordless telephone operates with the

naximum power allowed by the Federal

so, this handset and telephone base can

communicate over only a certain distance

which can vary with the locations of the

When the handset is out of range, the hands

If there is a call while the handset is out of

displays Out of range or no pwr at base.

the layout of your home or office.

nmunications Commission (FCC). Even

telephone base and handset, the weather, and

range, it may not ring, or if it does ring, the call

may not connect well when you press TALK. Move

of range during a telephone conversation, there

to answer the call. If the handset moves out

closer to the telephone base, and then press

may be interference. To improve reception,

You can use the telephone base or a cordless

1. Press **MENU** when the phone is not in use.

To return to the previous menu, press CANCEL.

To return to idle mode, <u>press and hold</u> CANCEL

Press ▼ or ▲ until the screen displays the

andset to change your telephone settings.

move closer to the telephone base.

sing the phone menu

3. Press **SELECT** to enter that menu.

desired feature menu.

It may be a wiring problem. If you have



What's in the box

Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is









2 sets for CS6949-2







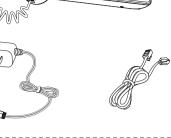

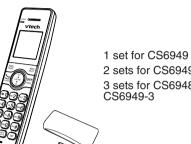



 Press repeatedly to show other dialing options when reviewing a caller ID log entry.

vithout making changes.

· Press to start an intercom conversation or

The LCD language is preset to English. You can

nfigure your telephone

select English, French or Spanish to be used in all screen displays 1. Press **MENU** when the phone is not in use.

2. Scroll to Settings, and then press SELECT

3. Scroll to choose **English**, **Français** or **Español**, and then press **SELECT** to save.

Set date and time

 Make sure you set the date and time including the year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.

1. Press **MENU** when the phone is not in use. Scroll to Set date/time, and then press 3. Use the dialing keys (**0-9**) to enter the

month (MM), date (DD) and year (YY). Then Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM.

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily during a call

During a call, press ™X. Use the dialing keys to enter the relevant

number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

Press TALK or ■), and then dial the telephone

√SPEAKER on the telephone base, then dial the number. Answer a call

Press TALK, ◄», or any dialing key.

• Lift the corded handset, or press ■ SPEAKER or any of the dialing keys on

the telephone base

Press **OFF** on the handset, or place the

. When you are using the corded handset

place it on the telephone base. When you are using the base speakerphone

press **◄ 》/SPEAKER**. Speakerphone

speakerphone and the handset earpiece

When the corded handset is on a call, press

■) /SPEAKER on the telephone base

• During a call, press **▼/VOLUME/**▲ on the handset, or press ▼ VOL or VOL ▲ on the

 The volume settings of handset earpiece, corded handset and speakerphone are independent.

telephone base to adjust the listening volume.

party but the other party cannot hear you.

conversation. The handset displays Microphone on.

You can use up to two system handsets at a

handset charger to exit the call. The call continues until all handsets hang up.

■» /SPEAKER on the telephone base.

continues until both devices hang up. Call waiting

and take the new call.

Press FLASH to switch back and forth

The handset displavs **Muted**

. During a call, press MUTE on the telephone pase. The telephone base displays **Muted** and the **MUTE** light turns on until the mute function is turned off.

resume the conversation. The telephone base

time on an outside call.

When a handset or the telephone base is already on a call, press 🔭 or 🕬 on another handset to join the call.

If you subscribe to call waiting service from your elephone service provider, you hear an alert tone when there is an incoming call while you are on another call.

between calls.

Press **MUTE** again to resume the

10 - Microphone

displays Microphone on.

· Press OFF or place the handset in the

Lift the corded handset or press

The mute function allows you to hear the other

Press to start or stop message playback.

memos in the answering system.

playing announcement

delete a character or digit.

Press to delete the playing message or

While reviewing the redial list, phoneboo

or caller ID log, press to delete an individual

While entering names or numbers, press to

Press once to repeat the playing message.

Press twice to play the previous message.

Press to skip to the next message.

• Mute the microphone during a call.

the phone is ringing.

FIND HANDSET

is not in use

也ANS ON/OFF

on or off.

■ ③ / SPEAKER

· Silence the base ringer temporarily while

Press to page all handsets when the phone

· Press to turn the built-in answering system

· Press to make, answer or end a call

During a call, press to switch between

Press and hold to set and turn on the quiet

options when reviewing a caller ID log entry

Switch to tone dialing temporarily during a

While reviewing a caller ID log entry, press

Press and hold to set or dial your voicemail

repeatedly to add or remove 1 in front of the

telephone number before dialing or saving it

· Press repeatedly to display other dialing

Press to enter space during text editing

the corded handset and the base

X/DELETE

≪ REPEAT

SKIP

5 – MUTE

Flashes when there are new messages or

 Place the corded handset back to the telephone base or press **◄)** /SPEAKER on

Press FLASH to put the current call on hold

To start paging:

idle handsets ring and display ** Paging **. To end paging:

1. Press **INT** on the cordless handset when the Press /FIND HANDSET again on the

destination handset, press TALK, INT, or any

base, press ♥) /SPEAKER, INT, any dialing key, or lift the corded handset

To end the intercom call on either handset, one party presses **OFF**, or places the handset back in the handset charger.

corded handset back to the telephone base. To initiate an intercom call at the

phone is not in use 2. Press 1-5 for HANDSET 1 to HANDSET 5.

1. Press **INT** on the telephone base when the

dialing kev. 4. To end the intercom call at the telephone base, press INT, or **◄)** /SPEAKER when using the base speakerphone, or place the corded handset back to the telephone base.

You can choose to connect the telephone base for desktop usage or wall mounting.

Use only the adapters provided. Make sure the electrical outlets are not controlled by wall switches. The adapters are intended to be correctly oriented


in a vertical or floor mount position. The prongs

are not designed to hold the plug in place if it is


plugged into a ceiling, under-the-table or cabinet


If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSL filter (not included) between the telephone line cord and telephone wall jack. Contact your DSL service provider for more information.

Connect the telephone base

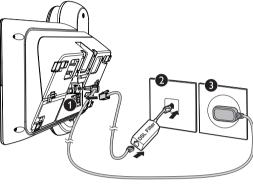



Connect the charge

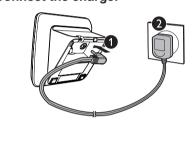

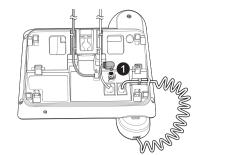

Mount the telephone base

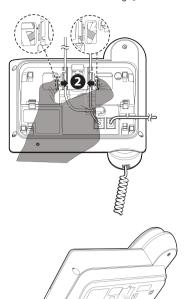


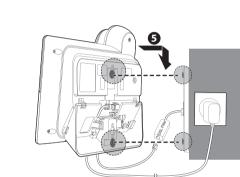


3. Press **SELECT** to move on to enter the

Install the battery as shown below

Use only the battery provided.

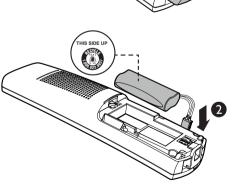


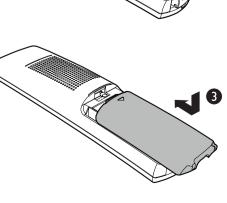


After you have installed the battery, check the

⊘NOTES If the battery icon is □, □ or □, then go to **Before use** section to set the date and time, Charge the battery provided with this product only in accordance with the instructions and limitations and set the answering system through voice

If the handset will not be used for a long time disconnect and remove the battery to prevent possible leakage.

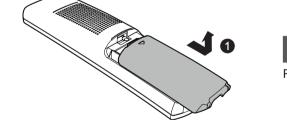

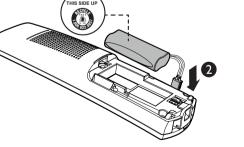

Battery Battery status Action


- 1			
	The screen is blank, or shows Put in charger and flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
	The screen shows Low battery and () flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
	The screen shows	The battery is charged.	To keep the battery charge


not in use.


Check the battery level

battery level on the handset screen

specified in this manual.

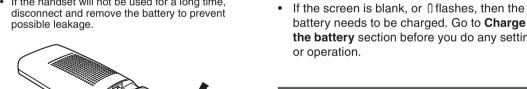

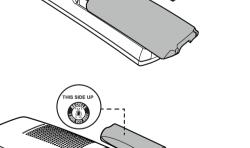

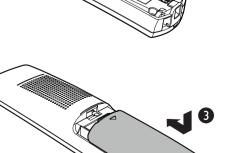

or operation

Place the handset in the charger to charge.

battery needs to be charged. Go to **Charge**

the battery section before you do any setting



Once you have installed the battery, the handset LCD display indicates the battery status (see the following table)

> will display Voice guide to... and set up Ans Set answering system through voice guide This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

Place the handset in the charger will bypass the

For best performance, keep the handset in the

If you place the handset in the charger without

To manually set the date and time and the

answering system, refer to Configure your

To manually initiate the voice guide, refer

to Voice guide under Set your built-in

answering system section.

Set date and time

telephone and Set your built-in answering

After you install your telephone or power returns

following a power outage and battery depletion

the handset will prompt you to set the date and

time, and the answering system through voice

Make sure you set the date and time including the

2. Use the dialing keys (0-9) to enter the hour

(HH) and minute (MM). Then press ▼ or ▲

After the setting for the date and time, the handset

Press **SELECT** to start the voice guide for the answering system setup. You hear

the voice prompt "Hello! This voice guide

will assist you with the basic setup of your

1. Use the dialing keys (0-9) to enter the

recorded messages time stamp.

press SELECT.

to choose AM or PM.

Press **SELECT** to save

answering system."

vear correctly: otherwise the answering system does

month (MM), date (DD) and year (YY). Then

not announce the correct day of the week for your

ing in the battery, the screen displays

The battery is fully charged after 11 hours of

set date and time, and voice guide

charger when not in use


continuous charging.

NO BATTERY.

1 - Handset earpiece 2 - LCD display 3 - MENU/SELECT

2 sets for CS6949-2 3 sets for CS6948-3/



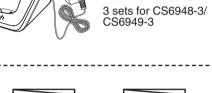

Setup your answering system by inputting

the designated numbers as instructed in the

Press TALK. If you hear a dial tone, the installation

Show a menu.

Hang up a call.

andset overview

 While in a menu, press to select an item, or save an entry or setting. 4 - OFF/CANCEL


Vtech

 Silence the ringer temporarily while the Press and hold to erase the missed call indicator while the phone is not in use. Press to return to the previous menu; or


press and hold to return to idle mode,

• Press and hold to set and turn on the quiet

transfer a call. 7 - Microphone

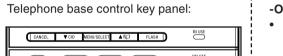

REDIAL TONE X OPER O QUIET #

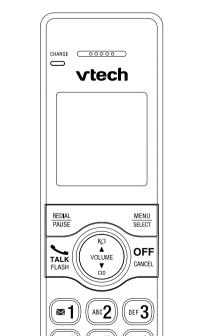

Mute the microphone during a call.

· Silence the ringer temporarily while the

Delete digits or characters while using the

Make or answer a call using the handset

During a call, press to switch between the

· While you have set the dial mode to pulse

temporarily.

13 - TALK/FLASH

14 - REDIAL/PAUSE

15 - **▲**/VOLUME/᠍

not in use.

and on a call, press to switch to tone dialing

· Press to add a space when entering names.

· Press repeatedly to add or remove 1 in front

of the caller ID log entry before dialing or

Press and hold to set or dial your voicemail

· Answer an incoming call when you hear a

· Press repeatedly to review the redial list.

Press and hold to insert a dialing pause

Review the phonebook when the phone is

Increase the listening volume during a call.

· Scroll up while in a menu, phonebook, caller

· Move the cursor to the right when entering

· Review the caller ID log when the phone is

Decrease the listening volume during a call.

Scroll down while in a menu, phonebook,

Move the cursor to the left when entering

saving it to the phonebook.

Make or answer a call

call waiting alert.

while entering a number.

ID log, or redial list.

numbers or names.

numbers or names.

caller ID log, or redial list.

· On when the handset is charging

VOLUME/▼/CID

not in use.

16 - CHARGE light

speakerphone and the handset earpiece.

lephone base overview

Answer an incoming call when you receive

Review the phonebook when the phone is

Move the cursor to the right when entering

• While in a menu, press to select an item, or

Review the caller ID log when the telephone

Scroll down while in a menu, or in the

phonebook, caller ID log or redial list.

mode without making changes.

the base ringer temporarily

Move the cursor to the left when entering

Press to return to the previous menu or idle

Press and hold to erase the missed call

indicator when the phone is not in use.

· On when the phone is in use, or when the

answering system is answering a call.

· On when a handset is being registered.

· Flashes when there is an incoming call.

· Flashes when another telephone on the

Flashes when handsets are being

same line is in use.

While the phone is ringing, press to silence

Scroll up while in a menu, or in the

phonebook, caller ID log or redial list

1 - LCD display

a call waiting alert.

numbers or names.

save an entry or setting.

MENU/SELECT

· Show a menu.


is not in use.

CANCEL

- IN USE light

numbers or names.

Handset control key panel:

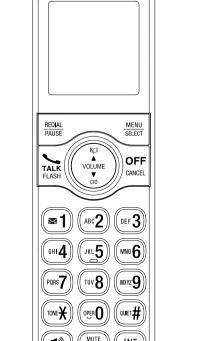

Lift the corded handset, or press

handset in the handset charger.

 When the cordless handset is on a call, press to switch between the handset

speakerphone and the corded handset

During a call, press **MUTE** on the handset.

in the phonebook.

Press **MUTE** on the telephone base again to

Join a call in progress

the telephone base to exit the call. The call

Find handset

Use this feature to find all system handsets Press /FIND HANDSET on the telephone base and its screen displays ** Paging **. Al

· Press to initiate or answer an intercom call,

Adjust the telephone base ringer volume

Press repeatedly to view the last 10

while dialing or entering numbers.

Press and hold to insert a dialing pause

or to transfer a call.

· Review the redial list.

numbers dialed.

· Adjust the listening volume.

▼ VOL ▲

12 - Speakerphone

1 - Charging pole

13 - Corded handset

REDIAL/PAUSE

• Press TALK, •), **OFF**, or any dialing key on the

Place the cordless handset to the handset

• Do not press and hold ☐/FIND HANDSET for

edial list

deregistration

cordless handset

last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry. Review the redial list

1. Press **REDIAL** when the phone is not in use.

2. Press **▼**, **△**, or **REDIAL** repeatedly until the

Each handset and the telephone base stores the

Dial a redial list entry When the desired entry displays, press TALK or on the handset to dial.

Lift the corded handset or press

desired entry displays.

Delete a redial list entry • When the desired redial entry displays, press **DELETE** on the handset or press **X/DELETE** on the telephone base.

■) /SPEAKER on the telephone base to dial.

between the telephone base and a cordless handset, or two cordless handsets. To initiate an intercom call with a cordless handset:

Use the intercom features for conversations

isplay icons overview

charging.

The battery icon flashes when

the battery is low and needs

The battery icon becomes solid

when the battery is fully charged.

The handset ringer is turned off.

received from your telephone

The message number currently

playing and total number of new

The answering system is turned

automatically to reduce power

consumption when the handset

The battery icon animates when

the battery is charging.

There are new voicemail

old messages recorded

The ECO mode activates

I is within range from the

There are new caller ID log

The telephone base ringer is off.

There are new voicemail received

from your telephone service provide

The entry you are reviewing is new

The total number of messages

recorded when the telephone

The number of the playing

telephone base

Telephone base display icons

in the caller ID log.

message.

base is not in use.

service provider

Handset display icons

ANS ON

Press 7 for the telephone base or 1-5 for **HANDSET 1** to **HANDSET 5**. To answer the intercom call on the

To answer the intercom call at the telephone

To end the intercom call at the telephone base, press INT or ■» /SPEAKER when using the base speakerphone, or place the

are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, 3. To answer the intercom call on the and a name up to 15 characters. destination handset, press → , INT, → or any Add a phonebook entry Enter the number when the phone is not in

To end the intercom call on the destination handset, press **OFF**, or place the handset back to the handset charger.

Answer an incoming call during an intercom call

intercom call ends automatically.

to end the intercom call. Then press

◄%SPEAKER again to answer the call.

Then lift it up again to answer the call.

While on an outside call, you can use the

cordless handset or the telephone base.

To answer the call on the destination

intercom feature to transfer the call to another

handset, press TALK, INT, , or any dialing

now have a private intercom conversation.

To answer the call at the telephone base

press INT, ■ /SPEAKER, any dialing key

or lift the corded handset. The outside call

is still on hold. You can now have a private

The phonebook can store up to 50 entries, which

use. Press **MENU**, then go to Step 3.

i. Press **MENU** on the handset or the

telephone base when the phone is not

ii. Press **SELECT** again to choose **Add new**

in use, then press ▼ or ▲ to scroll to

Phonebook, then press SELECT.

2. Use the dialing keys to enter the number.

Copy a number from the redial list by

pressing **REDIAL** and then press **▼**, ▲

or **REDIAL** repeatedly to find the desired

number. Press SELECT to copy the number

entry, then press SELECT.

-OR-

key. The outside call is still on hold. You can

Call transfer using intercom

During a call, press INT.

intercom conversation

4. Use the dialing keys to enter the name. If you receive an incoming call during an Additional key presses show other intercom call, there is an alert tone. characters of that particular key. Press TALK on the cordless handset, the . Press **SELECT** to save.

Press ♥》/SPEAKER on the telephone base While entering names and numbers, you can • Press **DELETE** to backspace and erase a digit or character Place the corded handset back to the base.

Press and hold **DELETE** to erase the entire Press ▼ or ▲ to move the cursor to the left or

pause (for entering numbers only). Press 0 to add a space (for entering names

Review the phonebook entries

Entries are sorted alphabetically.

Press and hold PAUSE to insert a dialing

Press © on the cordless handset when the handset is not in use, or ▲의 on the telephone base when the telephone base is not in use.

Press ▼ or ▲ to browse through the

phonebook, or use the dialing keys to start a

2. Use the dialing keys to edit the number, and

3. Use the dialing keys to edit the name, and

Edit a phonebook entry When the desired entry displays, press

then press **SELECT**.

name search.

Delete a phonebook entry

then press **SELECT** to save.

Dial a phonebook entry


press **SELECT**.

■) /SPEAKER on the telephone base.



When the desired entry appears, press or • on the handset.

Lift the corded handset or press

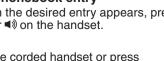





information appears on the screen, it will not be saved in the caller ID log. The caller ID log stores up to 30 entries. Each entry has up to 24 digits for the phone number

If the telephone number has more that 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry

and 15 characters for the name.

- 1. Press **CID** when the phone is not in use.
- 2. Press ▼ or ▲ to browse through the caller

Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the handset displays XX missed calls.

Each time you review a caller ID log entry marked **NEW**, the number of missed calls decreases by one.

When you have reviewed all the missed calls the missed call indicator no longer displays. If you do not want to review the missed calls one by one, press and hold CANCEL on the idle 2. Scroll to Call block, and then press handset or telephone base to erase the missed call indicator. All the entries are then considered

Dial a caller ID log entry

- When the desired entry appears, press TALK or 🔊 on the handset to dial.
- When the desired entry displays, press ■) /SPEAKER or lift the corded handset to
- Save a caller ID log entry to the
- 1. When the desired caller ID log entry displays, press **SELECT**.
- Press SELECT to choose To Phonebook.
- 3. Use the dialing keys to modify the number, and then press **SELECT**.
- 4. Use the dialing keys to modify the name, and then press **SELECT** to save.

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the calle

Delete all caller ID log entries

- Press **MENU** when the phone is not in use. Scroll to Caller ID log and then press
- 3. Scroll to **Delete all** and then press **SELECT**

If you have subscribed to caller ID service, you

can set the telephone to block unknown calls and certain undesired calls. The call block list can store up to 20 entries.

Block unknown calls 1. Press **MENU** when the phone is not in use.

- 2. Scroll to **Call block**, and then press
 - 3. Scroll to choose **Calls w/o num**, and then press **SELECT**.
 - 4. Scroll to choose **Unblock** or **Block**, and then press **SELECT** to save.

Add a call block list entry 1. Press **MENU** when the phone is not in use.

- B. Press **SELECT** to choose **Block list**. 4. Scroll to choose **Add new entry**, and then
- press **SELECT**. 5. Use the dialing keys to enter the number
- (up to 30 digits). Press SELECT to move to enter the name.
- 7. Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.
- Press SELECT to save. Review call block list

- 1. Press **MENU** when the phone is not in use. Scroll to **Call block**, and then press
- 3. Press SELECT to choose Block list.
- Press SELECT to choose Review.

register HS..

alternately. Th

work at all.

handset does no

Edit a call block list entry

My telephor does not wo

performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

Your cordless telephone contains sophisticated

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical

should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

Delete a caller ID log entry

- When the desired caller ID log entry displays press **DELETE** on the handset or **X/DELETE**
 - - - Save a caller ID log entry to call block list 1. When the desired entry displays, press

2. Use the dialing keys to edit the number, and

3. Use the dialing keys to edit the name, and

- . Scroll to **To Call block**, and then press
- Use the dialing keys to modify the number and then press **SELECT**.
- Use the dialing keys to modify the name, and then press SELECT to save.

Delete a call block list entry

then press SELECT.

then press **SELECT** to save.

 When the desired call block list entry displays, press **DETELE** on the handset or press **X/DELETE** twice on the telephone base.

ound settings

Key tone

You can turn the key tone on or off for each handset and the telephone base

- 1. Press **MENU** when the phone is not in use. 2. Scroll to **Settings**, and then press **SELECT**.
- 3. Scroll to choose **Key tone**, and then press SELECT.
- 4. Scroll to choose **On** or **Off**, and then press **SELECT** to save.

Ringer tone

You can choose from different ringer tones for each handset and the telephone base.

- Press **MENU** when the phone is not in use. Scroll to Ringers, and then press SELECT. 3. Scroll to choose **Ringer tone**, and then
- 4. Scroll to sample each ringer tone, and then press **SELECT** to save.

The answering

stem does

ot record

· If you turn off the ringer volume, you will not hear

Handset ringer volume . When the desired entry displays, press You can adjust the ringer volume level, or turn

the ringer off Press MENU when the handset is not in use.

- built-in answering system, and it also supports voicemail service offered by your telephone 2. Scroll to **Ringers**, and then press **SELECT**. 3. Press **SELECT** to choose **Ringer volume**.
- fee may apply 4. Scroll to adjust the volume, and then press The main differences between them are: **SELECT** to save.

If the handset ringer volume is set to off, that

handset is silenced for all incoming calls except

Telephone base ringer volume Press ▼ VOL or VOL ▲ on the telephone base

to adjust the ringer volume when the telephone base is not in use When you set the ringer volume to zero, the base ringer is off. The telephone base announces. 'Base ringer is off.'

Temporary ringer silencing When the telephone is ringing, you can

temporarily silence the ringer of the handset without disconnecting the call. The next call rings ormally at the preset volume

To silence the handset ringer: Press MUTE or OFF on the handset. The handset displays **Ringer muted** and A

To silence the telephone base ringer Press MUTE or CANCEL on the telephone base. The screen displays **Ringer muted** and

Quiet mode

You can turn on the quiet mode for a period of time During this period, all tones (except paging tone) and call screening are muted. When you turn on the quiet mode, the answering system turns on automatically Press and hold QUIET# when the phone is not

To turn off the quiet mode, press and hold QUIET#

- 2. Use the dialing keys (0-9) to enter the press **SELECT**. duration, and then press SELECT to save

oicemail service

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or

imited warranty

material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective

service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement o ne Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer.

This limited warranty does not cover:

use with non-VTech accessories; or

- difficulty; and improper installation, abnormal operation or handling, neglect, inundation, fire, water or other
 - address, and telephone number.
- is caused by signal conditions, network reliability, This warranty is the complete and exclusive agreement or cable or antenna systems; or between you and VTech. It supersedes all other 4. Product to the extent that the problem is caused by written or oral communications related to this Product.

automatically. automatically deleted after a ou have to delete eriod of time. your messages Contact vour nanually. elephone service rovider for more When you receive When you recei new messages, the to retrieve nandset and the the handset and the telephone bas creen display XX screen display and New new messages and the ▶/■ light on | voicemail ne telephone bas Γo retrieve To retrieve essages, usually ssages, yo ere are two ways: I need an access Press **►/**■ on the umber and/or a

sages are

or svstem provide

bv vour telephon

Your messages

asscode provided

ov vour telephone

service provider.

may be

stored in a serve

For message recording, your telephone has a

rvice provider (subscription is required, and

essages are

elephone base.

Your messages

will not be deleted

elephone base

Access remotely

with an access

Product whose warranty/quality stickers, product

serial number plates or electronic serial numbers

Product purchased, used, serviced, or shipped for

repair from outside the United States of America

or Canada, or used for commercial or institutional

Product returned without a valid proof of purchase

purposes (including but not limited to Products

Charges for installation or set up, adjustment

To obtain warranty service in the United States of

Canada, go to www.vtechcanada.com or dial

NOTE: Before calling for service, please review the

user's manual - a check of the Product's controls and

Except as provided by applicable law, you assume the

risk of loss or damage during transit and transportation

incurred in the transport of the Product(s) to the service

location. VTech will return repaired or replaced Produc

and are responsible for delivery or handling charges

under this limited warranty. Transportation, delivery

or handling charges are prepaid. VTech assumes no

Product failure is not covered by this limited warranty

limited warranty, VTech will notify you and will request

that you authorize the cost of repair prior to any further

repair activity. You must pay for the cost of repair and

return shipping costs for the repair of Products that are

What must you return with the Product to get

1. Return the entire original package and contents

VTech provides no other warranties for this Product.

responsibilities regarding the Product. There are no

The warranty exclusively describes all of VTech's

or proof of purchase does not meet the terms of this

ne or lose of the Product in transit. If the

www.vtechphones.com or call 1 (800) 595-9511. In

of customer controls, and installation or repair of

used for rental purposes); or

systems outside the unit.

How do you get warranty service?

America, please visit our website at

features may save you a service call.

not covered by this limited warranty.

1 (800) 267-7377

(see item 2 on the next page); or

have been removed, altered or rendered illegible; or


stored in the

Storage

et your built-in answering system

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 22 minutes. The actual recording time depends on individual message characteristics

Your answering system allows you to set your nnouncement, to save and delete messages, activate call screening, to set number of rings before pick up, and to access remotely. Telephone base control kev panel:

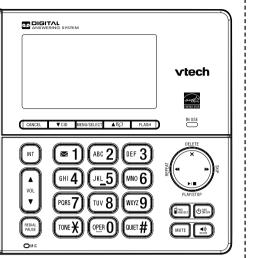

Turn the answering system on or off The answering system must be turned on to answer and record messages

1. Press **MENU** when the phone is not in use. 2. Scroll to **Answering sys**, and then press

turn the built-in answering system on or off.

• Press **U/ANS ON/OFF** on the telephone base to

SELECT Scroll to Answer on/off, and then press

not rely on any such modification.

apply to you.

proof of purchase.

4. Scroll to **On** or **Off**, and then press **SELECT** to save. You hear a confirmation tone.

other express warranties. No one is authorized to make

modifications to this limited warranty and you should

State/Provincial Law Rights: This warranty gives you

specific legal rights, and you may also have other rights,

which vary from state to state or province to province.

fitness for a particular purpose and merchantability (an

imitations: Implied warranties, including those of

unwritten warranty that the Product is fit for ordinary

use) are limited to one year from the date of purchase.

Some states/provinces do not allow limitations on how

long an implied warranty lasts, so the above limitation

may not apply to you. In no event shall VTech be liable

for any indirect, special, incidental, consequential,

or similar damages (including, but not limited to lost

and claims by third parties) resulting from the use of

this Product. Some states/provinces do not allow the

exclusion or limitation of incidental or consequential

Please retain your original sales receipt as

damages, so the above limitation or exclusion may not

profits or revenue, inability to use the Product or other

associated equipment, the cost of substitute equipment.

announcement, or replace it with your own.

message after the tone." You can use this preset message alert tone is preset to **Off**. Record your own announcement Scroll to **Answering sys** then press **SELECT**.

The announcement can be up to 90 seconds in

he telephone is preset with a greeting that

nswers calls with "Hello, please leave a

- Scroll to Ans sys setup then press SELECT. Scroll to Msg alert tone then press SELECT. . Press **MENU** when the phone is not in use.
- Scroll to choose **On** or **Off**. Scroll to **Answering sys** and then press SELECT twice. Press **SELECT** to save and you hear a
- The screen displays Play [2] Del [3] **Rec** [7], and it announces, "To play, press 2
- To record, press 7." Press 7 to record. The phone announces, "Record after the tone. Press 5 when you are done." After the tone, speak towards the
- Press 5 when done

handset microphone

Play the announcement . Press **MENU** when the phone is not in use.

Default announcement

- Scroll to **Answering sys** and then press SELECT twice.
- The screen displays Play [2] Del [3] Rec [7], and it announces, "To play, press 2. To record, press 7."
- Press 2 to play the announcement. Delete the announcement

Press **MENU** when the phone is not in use.

- Use your built-in answering syster Scroll to **Answering sys** and then press SELECT twice. New message indication The screen displays Play [2] Del [3] When there are new answering system Rec [7], and it announces, "To play, press 2
- . Press **3** to delete your own recorded

Set number of rings

You can set the answering system to answer an incoming call after two, three, four, five or six rings: or toll saver. If you choose toll saver, the answering system answers a call after two rings when you have new messages, or after four rings when you have no new messages

- 1. Press **MENU** when the phone is not in use 2. Scroll to Answering sys then press SELECT
- 3. Scroll to Ans sys setup then press SELECT 4. Scroll to # of rings then press SELECT. 5. Scroll to choose 2, 3, 4, 5, 6 or Toll saver
- 6. Press **SELECT** to save and you hear a confirmation tone.

requirements

Telephone base: 6V DC @ 400mA Charger: 6V DC @ 400mA Phonebook: 50 memory locations; up to 30 digits and 15 characters

30 memory locations; up to 24 digits

Caller ID log:

and 15 characters

Set message alert tone

This feature is an alternative way for you to do

announcement, set the number of rings and the

1. Press **MENU** when the phone is not in use.

Scroll to **Answering sys** and then press

SELECT. You hear the voice prompt "Hello

This voice guide will assist you with the

designated numbers as instructed in the

nessages, the handset and the telephone base

Press ►/■/PLAY when the phone is not in use.

1. Press **MENU** when the phone is not in use.

2. Press **SELECT** to select **Play messages**

display XX new messages and the ▶/■ light on

Scroll to **Voice guide**, and then press

basic setup of your answering system."

4. Setup your answering system by inputting

the basic setup of the answering system. You

can follow the voice guide to record your own

confirmation tone.

message alert tone.

voice guide.

he telephone base flashes

Message playback

 Press ▼ VOL or VOL ▲ to adjust the message When the message alert tone is set to on. and there is at least one new message, the playback volume Press **►/SKIP** to skip to the next message. telephone base beeps every 10 seconds. The

- 1. Press **MENU** when the phone is not in use.
- Press **≪/REPEAT** to repeat the message

Options during playback:

- currently playing. Press **≪/REPEAT** twice to listen to the previous message.
- Press **X/DELETE** to delete the playing message. The system advances to the next
- Press ►/■/STOP or 5 to stop
- To playback messages with a handset: Press MENU when the phone is not in use,

Options during playback:

and then press SELECT.

- Press ▼/VOLUME/▲ to adjust the message playback volume.
- Press 6 to skip to the next message. Press 4 to repeat the message. Press 4 twice
- to listen to the previous message. • Press 3 to delete the playing message. The
- system advances to the next message
- Press **OFF** to stop the playback. • Press ♥) to switch between speakerphone

Delete all messages You can only delete old (reviewed) messages.

and handset earpiece.

To delete all messages with the telephone • Press **X/DELETE** twice when the phone is

2. Scroll to Answering sys, and then press

You cannot delete new messages until you

review them. You cannot retrieve deleted

To delete all messages with a handset: 1. Press **MENU** when the phone is not in use.

SELECT To playback messages at the telephone base: 3. Scroll to Delete all old, and then press **SELECT**. You hear a confirmation tone.

Remote access

- the answering system remotely from any touch-tone telephone. The preset code is 19. You can use this preset code, or set your own.
- touch-tone telephone.

5

- 2. When the system plays your announcement,
- 3. Enter one of the following remote commands.

Delete the current message

Repeat the current message

(during playback).

during playback).

Hear a list of remote

luring playback).

*7 Record a new announcement.

Skip to the next message

Turn the answering system

commands

8 End the call.

Hang up or press 8 to end the call.

Remote access code

confirmation tone.

on or off.

You can set your own remote access code from

. Press **MENU** when the phone is not in use

Scroll to Answering sys then press SELECT.

3. Scroll to **Ans sys setup** then press **SELECT**.

5. Use the dialing keys to enter a two-digit number

4. Scroll to **Remote code**, and then press

Scroll to a desired two-digit number.

6. Press **SELECT** to save and you hear a

Delete all old messages.

at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, set your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the

You can use your answering system and

vour telephone service provider.

voicemail service together by setting your

f you are on a call, or if the answering system

is busy recording a message and you receive

Specifications are subject to change without notice.

All rights reserved. 12/15. CS6949_ACIB_V2.0

Document order number: 91-008871-020-100

© 2015 for VTech Communications, Inc.

another call, the second caller can leave a

Use the built-in answering system and voicemail service

Voicemail is a feature available from most answering system to answer before voicemai service answers as described below. To learn Fees may apply. how to program your voicemail settings, contact

> When you received a voicemail, the handse and the telephone base display M and New voicemail. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code Contact your telephone service provider for instructions on how to configure the voicemail

· After you have listened to all new voicemail messages, the indicators on the handset and the

telephone base turn off automatically.

1. Press **MENU** when the phone is not in use. Scroll to Settings and then press SELECT.

- 4. Use the dialing keys to enter the voicemail number (up to 30 digits).
- Press SELECT to save.

from home, and the handset still displays the new voicemail indicators, use this feature to turn off the indicators

delete your voicemail messages. 1. Press **MENU** when the phone is not in use.

Scroll to Settings, and then press SELECT 3. Scroll to **CIr voicemail**, and then press **SELECT**. You hear a confirmation tone.

You can add new handsets (CS6909), cordless headsets (IS6: **TL80133**) to accessories base suppor For more deta comes with your new device.

Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Expand your telephone system

ECO mode

Place

Your telephone can be damaged if it gets wet.

appliances during storms. Cleaning your telephone Your telephone has a durable plastic casing that

equently asked questions

66200) or speakerphones (AT&T	the cordless telephone.
your telephone system. All are sold separately. Your telephone rts a maximum of five devices.	If you cannot find the answer to your que website at www.vtechphones.com or call (800) 595-9511 for customer service. to www.vtechcanada.com or call 1 (80)

This power conserving technology reduces power consumption for optimal battery

ieneral product care

packir ever n

Taking care of your telephone

Electrical storms

9511 for customer service. In Canada, go chcanada.com or call 1 (800) 267-7377.			
ne ork	Make sure the telephone base is installed properly, and battery is installed and charged correctly. For optimum daily performance,		

return the handset to the The display shows No line I cannot hear the

d water
I rough treatment the handset down gently. Save the original ng materials to protect your telephone if you need to ship it.
onic parts, so it must be treated with care.

and ...see

Below are the questions most frequently asked about

question, visit our

	telephone base after use.	
,	Disconnect the telephone line cord from your telephone and connect it to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.	

other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord.	system does not announce the correct da of the week for recorded		
If changing telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact your telephone service provider.	messages tim stamp. The messages on the answer system are		
You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your	incomplete.		

The handset is deregistered from he telephone base. Press and hold FIND HANDSET on the I accidentally telephone base for about four I set my LCD seconds until the IN USE language to light turns on and it shows | Spanish or

Registering... Press QUIET# on the handset. The handset shows Registering.... Both the

telephone base and cordless

handset show Registered,

and you hear a beep when

the registration process

completes. This process

takes about 60 seconds.

f registration fails, the handset

displays Failed. Repeat steps 1

ot announce elephone section e correct day f the week recorded essages time ne messages message is 4 minutes. If a caller the answering I stem are leaves a very long message, i.e., more than 4 minutes, part of it complete. nav be lost when the answe system disconnects the call. If the memory on the answering service provider for solutions. system becomes full during a message, the answering system stops recording and disconnects

French, and I

to English.

don't know how

to change it back

The answering

is on. When the answering system is on, **ANS ON** should display on the handset and the telephone

Make sure the answering system

I rings so that your answering

system answers before your

voicemail service answers. To

elephone service provider.

determine how many rings activate

your voicemail service, contact you

Make sure you have set the date

and time. See **Configure your**

While the handset is not in use

press **MENU** and then enter

X364# to change the handset

LCD language back to English.

When the answering machine "you") that the Product and all accessories provided in he sales package ("Product") are free from defects in emory is full, it does not record new messages until some old nessages are deleted. If you subscribe to voicemail service, change the number of

During the limited warranty period, VTech's authorized

What is not covered by this limited warranty? Product that has been subjected to misuse. accident, shipping or other physical damage,

2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or 3. Product to the extent that the problem experienced **Other limitations**

including the Product to the VTech service location along with a description of the malfunction or 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and Provide your name, complete and correct mailing

Frequency Crystal controlled PLL synthesizer

Handset: 1921.536-1928.448 MHz Telephone base: 1921.536-1928.448 Nominal Maximum power allowed by FCC and effective IC. Actual operating range may vary according to environment conditions at the time of use. Handset: 2.4V Ni-MH battery

- A two-digit security code is required to access
- 1. Dial your telephone number from any
- enter the two-digit security code.
 - Description voicemail message Set your answering system to answer calls Play all messages 2 Play new messages.

appropriate setting.

ne service

telephone service providers. It may be included with your telephone service, or may be optional

Retrieve voicemai

settings and listen to messages.

Set vour voicemail number You can save your access number on each

handset and the telephone base for easy access to your voicemail. After you save the voicemail number, you can <u>press and hold</u> M 1 to retrieve

- 3. Scroll to **Voicemail** # and then press SELECT.
- Turn off the new voicemail indicators

This feature turns off the indicators only, it does not

If you have retrieved your voicemail while away