## Analog Contemporary Series

CTM-A2116

Analog 1-Line Hidden Base with Cordless Colour Handset and Charger

NGC-C3416HC Virtual Bundle of NGC-C5106 and C5016 1-Line Cordless Colour handset and Charger

NGC-C5106

1-Line Cordless Colour handset

C5016 Charger



## **IMPORTANT SAFETY INSTRUCTIONS**

The applied nameplate is located at the bottom or rear of the product.

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. This product should be installed by a qualified technician.
- 2. Read and understand all instructions.
- 3. Follow all warnings and instructions marked on the product.
- 4. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
- 6. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 7. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
- 8. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply on the premises, consult your dealer or local power company.
- 9. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- 10. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

- 11. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 12. Do not overload wall outlets and extension cords.
- 13. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
  - When the power supply cord or plug is damaged or frayed.
  - If liquid has been spilled onto the product.
  - If the product has been exposed to rain or water.
  - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
  - If the product has been dropped and the telephone base and/or handset has been damaged.
  - If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
- 15. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain

ble No. ries

circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial qases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.

- 16. Only put the handset of your telephone next to your ear when it is in normal talk mode.
- 17. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- 18. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- 19. In wall mounting position, make sure to mount the telephone base on the wall by aligning the eyelets with the mounting studs of the wall plate. Then slide the telephone base down on both mounting studs until it locks into place. Refer to the full instructions in Installation in the user's manual.
- 20. This product should be mounted at a height of less than 2 meters.

## 

- Keep small metallic objects such as pins and staples away from the handset receiver.
- There may be a risk of explosion if a

wrong type of handset battery is used. Use only the supplied rechargeable battery or replacement battery (Model No. 523450AR1000). Dispose of used batteries according to the instructions.

## SAVE THESE INSTRUCTIONS

## INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

La plaque signalétique appliquée est située au bas et à l'arrière de la base du produit.

Lorsque vous utilisez votre équipement téléphonique, des précautions de base doivent toujours être prises pour réduire les risques d'incendie, d'électrocution et de blessure, notamment les suivantes :

- 1. Ce produit doit être installé par un technicien qualifié.
- 2. Lire et comprendre toutes les instructions.
- 3. Respecter tous les avertissements et instructions figurant sur le produit.
- Débranchez ce produit de la prise murale avant de le nettoyer. N'utilisez pas de nettoyants liquides ou en aérosol. Utilisez un chiffon humide pour le nettoyage.
- N'utilisez pas ce produit près de l'eau, par exemple près d'une baignoire, d'une cuvette de lavage, d'un évier de cuisine, d'une cuve de lavage ou d'une piscine, ou dans un sous-sol ou une douche humide.
- 6. Ne pas placer ce produit sur une table, une étagère, un support ou toute autre surface instable.
- 7. Des fentes et des ouvertures à l'arrière ou en-dessous du socle du téléphone et du combiné sont prévues pour la ventilation. Afin de les protéger contre la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant le produit sur une surface souple comme un lit, un divan ou un tapis. Ce produit ne doit jamais être placé à proximité ou audessus d'un radiateur ou d'un registre de chaleur. Ce produit ne doit pas être placé dans un endroit où une ventilation adéquate n'est pas assurée.
- Ce produit ne doit être utilisé qu'avec le type de source d'énergie indiqué sur l'étiquette de marquage. Si vous n'êtes pas sûr du type d'alimentation électrique sur place, consultez votre revendeur ou votre compagnie d'électricité locale.
- Ne laissez rien reposer sur le cordon d'alimentation. N'installez pas ce produit à un endroit où l'on pourrait marcher sur le

cordon.

- N'introduisez jamais d'objets de quelque nature que ce soit dans ce produit par les fentes du socle du téléphone ou du combiné, car ils pourraient toucher des points de tension dangereux ou créer un court-circuit. Ne jamais renverser de liquide de quelque nature que ce soit sur le produit.
- 11. Pour réduire le risque d'électrocution, ne démontez pas ce produit, mais confiez-le à un service après-vente agréé. Ouvrir ou retirer des parties du socle du téléphone ou du combiné autres que les portes d'accès spécifiées peut vous exposer à des tensions dangereuses ou à d'autres risques. Un remontage incorrect peut provoquer une électrocution lors de l'utilisation ultérieure du produit.
- 12. Ne surchargez pas les prises murales et les rallonges électriques.
- 13. Débranchez ce produit de la prise murale et confiez l'entretien à un centre de service agréé dans les conditions suivantes :
  - Lorsque le cordon d'alimentation ou la fiche est endommagé ou effiloché.
  - Si du liquide a été renversé sur le produit.
  - Si le produit a été exposé à la pluie ou à l'eau.
  - Si le produit ne fonctionne pas normalement en suivant les instructions réglez d'utilisation. Ne que les commandes qui sont couvertes par le mode d'emploi. Un mauvais réglage des autres commandes peut entraîner des dommages et nécessite souvent un travail important de la part d'un technicien autorisé pour remettre le produit en état de fonctionnement.

- Si le produit est tombé et que le socle du téléphone et/ou le combiné ont été endommagés.
- Si le produit présente un changement distinct de performance.
- Évitez d'utiliser un téléphone (autre que sans fil) pendant un orage électrique. Il existe un risque d'électrocution dû à la foudre.
- 15. N'utilisez pas le téléphone pour signaler une fuite de gaz à proximité de la fuite. Dans certaines circonstances, une étincelle peut se produire lorsque l'adaptateur est branché dans la prise de courant, ou lorsque le combiné est replacé dans son berceau. Il s'agit d'un événement courant associé à la fermeture de tout circuit électrique. L'utilisateur ne doit pas brancher le téléphone dans une prise de courant, ni placer un combiné chargé dans son socle, si le téléphone est situé dans un environnement contenant des concentrations de gaz inflammables ou propices aux flammes, à moins qu'il n'y ait une ventilation adéquate. Une étincelle dans un tel environnement pourrait créer un incendie une explosion. Ces environnements ΟU peuvent comprendre : l'utilisation médicale de l'oxygène sans ventilation adéquate; les gaz industriels (solvants de nettoyage; vapeurs d'essence; etc.); une fuite de gaz naturel; etc.
- Ne placez le combiné de votre téléphone près de votre oreille que lorsqu'il est en mode de conversation normal.
- 17. Les adaptateurs d'alimentation sont destinés à être correctement orientés en position verticale ou au sol. Les broches ne sont pas conçues pour maintenir la fiche en place si elle est branchée au plafond, sous la table ou dans une prise de courant d'armoire.
- 18. Utilisez uniquement le cordon d'alimentation et les piles indiqués dans ce manuel. Ne jetez pas les piles au feu. Elles risquent d'exploser. Vérifiez auprès des autorités locales les éventuelles instructions spéciales d'élimination.

- 19. En position de montage mural, veillez à monter le socle du téléphone sur le mur en alignant les oeillets avec les montants de fixation de la plaque murale. Ensuite, faites glisser le socle téléphonique vers le bas sur les deux montants de montage jusqu'à ce qu'il se verrouille en place. Reportez-vous aux instructions complètes dans la section Installation du quide d'utilisation.
- 20. Ce produit doit être installé à une hauteur inférieure à 2 mètres.

## ▲ 🔃 🕛 MISE EN GARDE

- Gardez les petits objets métalliques tels que les épingles et les agrafes loin du combiné.
- Il peut y avoir un risque d'explosion si un mauvais type de pile de combiné est utilisé. Utilisez uniquement la pile rechargeable fournie ou une pile de remplacement (N° de modèle 523450AR1000). Éliminez les piles usagées conformément aux instructions.

## **CONSERVEZ CES INSTRUCTIONS**

## TABLE OF CONTENTS

Important safety instructions2
Instructions de sécurité importantes 4
Parts check list7
Telephone layout 8
Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A2116.8
1-Line Cordless Color Handset - NGC-C51068
Screen icons9
Analog 1-Line Hidden Base10
Installation11
Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A211611 Analog 1-Line Hidden Base11
Telephone base installation
Charger - C5016
Handset Charger Installation
1-Line Cordless Color Handset - NGC-C510614
Handset registration
Handset deregistration14
Handset battery charging15
Installing or Replacing a Cordless Handset Battery15
Set up16
Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A211616
Default settings16
Speed Dials Preset16
Handset Name and Speed Dials Setup 17
Operation25
Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A2116 25
1-Line Cordless Colour Handset - NGC-C510625

Using the cordless handset25
Change handset screen language25
Receive a call25
Place a call25
End a call25
Speakerphone25
Volume25
Mute25
Call waiting25
Make a second call26
Switching between calls26
Speed dial26
Message waiting indicator26
Play messages26
Find handset26
Appendix
Troubleshooting
VTech Hospitality Limited Warranty
Program
Precautions for users of implanted cardiac
pacemakers35
Operating range35
About cordless telephones35
FCC, ACTA and IC regulations
FCC Part 1536
FCC Part 68 and ACTA36
Industry Canada37
ISEDC Warning38
Avertissement ISEDC
Maintenance39
Disclaimer and Limitation of Liability39
Technical specifications40
Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A211640
Analog 1-Line Hidden Base
1-Line Cordless Color Handset - NGC-C5106
Charger - C5016 40

### Parts check list

Items contained in the respective cordless telephone package: 

		Parts included			
Model name	Model number	Base station   Base Station Adapter	Base station wall mounting plate   Network cable	Cordless handset and Handset battery	Handset charger   Handset charger adapter
Analog 1-Line Hidden Base with Cordless Color Handset and Charger	CTM-A2116 (virtual bundle of CTM-A2116 Base, NGC-C5106 and C5016)	vtech		I       I       I         I       I       I	
1-Line Cordless Color Handset	NGC- C3416HC (virtual bundle of NGC-C5106 and C5016)				

## **Telephone layout**

Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A2116 1-Line Cordless Color Handset - NGC-C5106





#### Handset Charger and Adapter

16	Charging poles
17	Modular jack socket
18	Modular jack





Signal strength indicator at top left				
The signal strength is displayed				
$\square$	The handset is out of range or the telephone base is turned off			
no icon The handset is not registered to a telephone base				

Battery strength indicator at top right		
	Fully charged	
	Normal	
	Low battery	
	Extremely low battery	
ł	Battery is charging	

Ringer indicator next to battery strength indicator				
//	Ringer is silent			

## **Telephone layout**

Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A2116 Analog 1-Line Hidden Base



1	FIND HANDSET button.
	Short press (for less than 2 seconds) to find the handset by making it ring.
	Short press again to stop handset ringing.
2	POWER LED
3	IN USE LED
4	Antenna
5	Cable tie mount
6	AC adapter input
7	RJ11 telephone jack

## English

## Installation

Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A2116

Analog 1-Line Hidden Base

#### Telephone base installation

This section assumes that your network infrastructure is established.

You can power the telephone base using a compatible VTech power adapter. Install the telephone base near a power outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or mounted on a wall in a vertical or horizontal orientation.

#### To install the telephone base

Plug one end of the telephone line cord into the RJ jack on the rear of the telephone base (marked by TO TEL), and plug the other end of the cord into your telephone wall jack.

Connect the supplied power adapter to the telephone base power jack.

Plug the power adapter into an electrical outlet that is not controlled by a wall switch.

#### IMPORTANT INFORMATION

- Use only a compatible VTech power adapter. To order a replacement power adapter, call 1-888-907-2007.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, underthe-table or cabinet outlet.

#### TO MOUNT THE TELEPHONE BASE ON THE WALL

 Install two mounting screws on the wall. Choose screws with heads larger than 5 mm (3/16 inch) in diameter (1 cm / 3/8 inch diameter maximum). The screw centers should be 5 cm (1 15/16 inches) apart vertically or horizontally.



- 2. Tighten screws until only 3 mm (1/8 inch) of the screws are exposed.
- Attach the mounting plate to the top of the telephone base. Insert the tab into the slot and then push the plate in at the bottom of the telephone base until the mounting plate clicks into place.

- 4. Check to make sure the plate is secure at top and bottom. It should be flush with the telephone base body.
- 5. Place the telephone base over the mounting screws.



6. Connect the telephone line cord and power as described on page 11.



#### Charger - C5016

#### HANDSET CHARGER INSTALLATION

- Install the handset charger as shown below.
  - Make sure the supplied power adapter is securely plugged into an outlet not controlled by a wall switch.



• The battery is fully charged after 11 hours of continuous charging. For best performance, keep the handset in the handset charger when not in use.

#### **!** CAUTIONS

Use only the supplied power adapter. The supplied power adapter is not designed for use in any other devices. Misuse of it on your other devices shall be prohibited. To order a replacement, call 1-888-907-2007.

#### Installation Notes

Avoid placing the telephone base, handset, or handset charger too close to:

- Communication devices such as television sets, DVD players, or other cordless telephones
- Excessive heat sources
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting
- Excessive dust sources such as a workshop or garage
- Excessive moisture
- Extremely low temperature
- Mechanical vibration or shock such as on top of a washing machine or work bench

#### 1-Line Cordless Color Handset -NGC-C5106

#### Handset registration

Your cordless handset is preregistered to the telephone base. You do not need to register your cordless handset.

You can register additional cordless handsets to the telephone base. The Telephone base accommodates up to five CTM-A2116 cordless handsets.

1. On the cordless handset, press the **Lang** soft key, and then the key sequence:

#### **★ 7 5 6 0 0** #.

The key sequence will not be displayed on the screen when entered.

- 2. With Registration selected, press OK.
- With Register Handset selected, press Select. The handset displays the message "Long press the FIND HANDSET button on your base".
- On the telephone base, press and hold the / FIND HANDSET button until the IN USE LED indicator is on, then release the button.

The handset displays "Registering handset".

The handset beeps and displays "Handset registered".

#### HANDSET DEREGISTRATION

- When all registered cordless handsets are idle, press and hold the / FIND HANDSET button on the telephone base until the IN USE LED indicator flashes, then release the button.
- Press the / FIND HANDSET button again. All the registered handsets are deregistered.

#### HANDSET BATTERY CHARGING

The battery must be fully charged before using the cordless handset for the first time. The battery charge light turns on when the cordless handset is charging on the handset charger. The battery is fully charged after 11 hours of continuous charging. For best performance, keep the cordless handset in the handset charger when not in use.

#### Installing or Replacing a Cordless Handset Battery

To install or replace the cordless handset battery, follow the steps below.

1. Use a narrow object to pry open the handset cover, so that you unsnap the tabs at the locations indicated below.



- 2. Place your thumb in the slot below the battery, and lift the battery out of the handset battery compartment.
- 3. Place the top of the battery in the handset battery compartment so that the battery connectors are aligned.
- 4. Push the bottom of the battery down into the battery compartment.
- 5. To replace the handset cover, align all the tabs on the handset cover against the corresponding grooves on the handset, then firmly push downward until all the tabs lock in the grooves.

#### **!** CAUTIONS

There may be a risk of explosion if a wrong type of handset battery is used. Use only the supplied rechargeable battery or replacement battery. To order a replacement, call 1-888-907-2007.

Dispose of used batteries according to the instructions.

## Set up

Analogue 1-Line Hidden Base with Cordless Colour Handset and Charger - CTM-A2116

Default settings are indicated by asterisks (\*).

Setting	Options	Adjustable by
Listening volume- Handset	1, 2, 3, 4, 5, 6*, 7	User and administrator
Ringer tone	Tone 1*	Administrator only

#### Speed Dials Preset

Customers are required to fill in the VTech Telephone Compatibility Form (TC Form) to choose up to 10 speed dials to be preset on the telephone.

Customers can either choose the speed dial icons listed in the table below, or provide speed dial names (up to 16 characters), icon indexes on the TC form. VTech will then preset these speed dials on the telephone before the products are delivered to customers.

lcon	Description	Icon Index	lcon	Description	Icon Index
r and the second	Front Desk	1	Đ	Emergency	8
Â	Guest Service	2	Û	Wake Up	9
	Room Service	3		House Keeping	10
₩ ● I I	Restaurant	4		Laundry	11
	Concierge	5	ţ 💼 [	Valet	12
X	Message	6	) H	SPA	13
	Ticket Booking	7			

#### Handset Name and Speed Dials Setup

 On the cordless handset, press the Lang soft key, and then the key sequence: ¥ 7 5 6 0 0 #. The key sequence will not be displayed on the screen when entered.



2. Press  $\wedge$  or  $\vee$  to select **Select Base**, and then press **OK**.



3. Press  $\wedge$  or  $\vee$  to select A2116, and then press OK.



4. Press  $\wedge$  or  $\vee$  to select **Handset Settings**, and then press **OK**.



#### To set handset name

5. Press  $\wedge$  or  $\vee$  to select **Handset name**, and then press **OK**.



6. Edit Handset name and then tap **Save**.

0		
all	HANDSET	
Edit na	ime:	Abc
Rm1	601	
Clear		Save
_	—	

#### To set Speed dials

5. Press  $\wedge$  or  $\vee$  to select **Set Speed dial**, and then press **OK**.

o				
al	HANDSET			
Hand	set nar	ne		
Set sp	beed di	al		
Auto /	Answei	-		
Auto End Call				
Wall F	Paper			
Back	Back OK			
_	_			
	~			

Note: By entering this page, you can set 3 hard keys (Message, Front Desk, and Emergency), middle Soft key and maximum 10 speed dials on screen

6. Press  $\wedge$  or  $\vee$  to select a HardKey (Emergency, Message or Fron Desk) and then press OK.



7. Set its telephone number, and then press Save. (HardKeys' names and icons are not editable.)

o		
all	HANDSET	
Name: Emerge	ency	
Numbe 0	r:	123
lcon: 1		
Delete		Save
—	—	—

8. Press  $\wedge$  or  $\vee$  to select Middle Softkey and then press **OK**.



9. Set middle SoftKeys' name and telephone number, and then press **Save**. (Icon doesn't apply to middle SoftKey.)

٥		
all	HANDSET	
Name: RmSe Numbe 102		Abc
lcon: 1		
Delete		Save
_	—	—

10. Press  $\land$  or  $\checkmark$  to select a Speed dial key on screen, and then press **OK**.



11. Set the speed dial's name, telephone number and icon, and then press **Save**.

o		
all	HANDSET	
Nam Res	<sup>e:</sup> taurant	Abc
Num 103	ber:	
lcon: 4	:	
Dele	ato	Save
Dele		Save
_	—	—

Note: Please refer to the table on page 14 for icon index.

12. Set all the other nine speed dials on screen by following Step 10 and 11 above.



# English

## Operation

Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A2116 -Line Cordless Color Handset - NGC-C5106

#### Using the cordless handset

When you use the keypad of the cordless handset, the handset keys are backlit.

#### Change handset screen language

To change the display lanuage of your handset color screen:

- 1. Press Lang.
- 2. Press  $\wedge$  or  $\vee$  to select a language.
- 3. Press OK.

#### RECEIVE A CALL

When there is an incoming call, the handset rings.

Answer a call using the cordless handset while it is not on the handset charger

On the cordless handset, press **Ans** or **()**.

 The icon appears in the middle of the screen when in speakerphone mode.

Answer a call using the cordless handset while it is cradled on the handset charger

Lift the cordless handset from the handset charger.

Place a call

- 1. On the cordless handset, use the keypad to enter the number.
  - Press **Delete** if you enter an incorrect digit.
- 2. Press Dial or and or **1**.
- 3. To end the call, press **End** or **for** or place the handset in the charger.

#### End a call

Press **on the cordless handset or place** it in the handset charger. The call ends when all handsets hang up.

#### Speakerphone

During a call, press  $\blacksquare$  ) on the cordless handset to switch between speakerphone mode and handset earpiece mode.

• The **v** icon appears in the middle of the screen when in speakerphone mode.

#### Volume

#### Adjust the listening volume

- 1. During a call, press ∧ or ∨ to adjust the listening volume.
- 2. Press **OK**.

#### Adjust the Ringer volume

- When the cordless handset is idle, press ∧ or ∨ to adjust the ringer volume.
- 2. Press **OK**.

#### Mute

#### MUTE THE MICROPHONE

- 1. During a call, press 🖗 on the cordless handset.
  - The handset displays "Call Muted" when the mute function is turned on. You can hear the party on the other end but they cannot hear you.
- 2. Press  $\aleph$  again to resume the conversation.

#### CALL WAITING

If receive an incoming call during an active call, you will hear a call waiting tone. The phone may show "Call waiting" but it depends on telephone system.

#### TO ANSWER THE INCOMING CALL:

• Press **Ans** on the cordless handset. The active call is put on hold.

#### Make a second call

If you have an active call and intend to make a new call.

Press **Flash** to put the active call on hold, and use the keypad to enter the number. Press **Call** soft key to place a call.

#### Switching between calls

If you have an active call and another call on hold, you can switch between the two calls.

- 1. Press **Flash** to put the active call on hold, and resume the held call.
- To end both calls, press End or 
   on the cordless handset or place it in the handset charger.

#### Speed dial

To dial a speed dial number:

- 1. Press **SpdDial**.
- 2. Press  $\wedge$  or  $\vee$  to select a speed dial entry.
- 3. Press OK.

Alternatively, you can press a speed dial key ( in or in ), or press a speed dial soft key (for example, **RmServ**).

#### Message waiting indicator

When a new voice message is received, the handset displays "New msg" on the screen.

#### Play messages

1. When the phone is idle, press  $\mathbf{\Sigma}$ .

The handset dials the voicemail access number.

2. Follow the voice prompts to play your messages.

#### Find handset

Use this feature to find all registered cordless handsets.

TO START PAGING:

Press / **FIND HANDSET** on the telephone base when the phone is not in use. All idle cordless handsets beep for 60 seconds.

TO END PAGING:

Press / FIND HANDSET again on the telephone base.

-OR-

• Press **Contract** on the cordless handset.

## Appendix

#### Troubleshooting

If you have difficulty with the telephones, please try the suggestions below. For customer service, visit our website at www.vtechhotelphones.com or call 1-888-907-2007.

#### For cordless telephone

0	Cue ererieue
QUESTION	Suggestions
	<ul> <li>Make sure the power adapter is connected to the telephone base power jack, and plugged into an electrical outlet that is not controlled by a wall switch.</li> </ul>
	<ul> <li>Make sure the telephone line cord is plugged into the telephone line jack of the telephone base and the telephone wall jack.</li> </ul>
	<ul> <li>Make sure the handset battery is installed and charged correctly. For optimum daily performance, return the cordless handset to the handset charger after use.</li> </ul>
1. The telephone does not work at all.	<ul> <li>Unplug the telephone line cord from the telephone wall jack. Wait for approximately 15 seconds, then plug it back in.</li> </ul>
	<ul> <li>Charge the battery in the cordless handset for up to 11 hours.</li> </ul>
	<ul> <li>If the battery is completely depleted, charge the battery for at least 30 minutes before use.</li> </ul>
	<ul> <li>Remove the battery and then install it again. If that still does not work, it may be necessary to purchase a new battery.</li> </ul>
	<ul> <li>Disconnect the telephone base from the telephone wall jack and connect a working telephone. If the other telephone does not work, the problem is probably in the wiring or telephone service. Contact your telephone service provider (charges may apply).</li> </ul>

QUESTION	Suggestions
2. There is no dial tone.	<ul> <li>Try all the above suggestions. Make sure there is a dial tone before dialing. It is normal if the cordless handset takes a second or two to synchronise with the telephone base before producing a dial tone. Wait an extra second before dialing.</li> </ul>
	• Eliminate any background noise. Mute the telephone before dialing, if applicable, or dial from another room in your unit with less background noise.
	<ul> <li>If other telephones in your hotel are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider (charges may apply).</li> </ul>
3. I cannot dial out.	<ul> <li>Try all the above suggestions.</li> </ul>
<ol> <li>The LOW BATTERY icon or the EXTREMELY LOW BATTERY icon appears at the top of the cordless handset screen.</li> </ol>	Place the cordless handset in the handset charger for recharging.
	<ul> <li>Remove the battery and then install it again, and use it until fully depleted. Then charge the cordless handset in the handset charger for up to 11 hours.</li> </ul>
	<ul> <li>If the above measures do not correct the problem, replace the battery.</li> </ul>
5. The battery does not charge in the cordless handset or the battery does not accept charge.	<ul> <li>Make sure the cordless handset is placed in the handset charger correctly. The red LED beside the screen on handset should turn on and the battery icon at the top right of the screen should display a charging flash icon N.</li> </ul>
	<ul> <li>Remove the battery and then install it again. Charge it for up to 11 hours.</li> </ul>
	<ul> <li>If the cordless handset is in the handset charger but the battery charging light is not on, refer to <b>The battery charging light</b> is off below.</li> </ul>
	A.If the battery is completely depleted, charge the cordless handset for at least 30 minutes before use.
	B. If the above measures do not correct the problem, replace the battery.

QUESTION	Suggestions
6. The battery charging light is off.	<ul> <li>Clean the charging contacts on the cordless handset and/or handset charger each month with a pencil eraser or a dry non-abrasive fabric.</li> </ul>
	<ul> <li>Make sure the power adapter and telephone line cord are plugged in correctly and securely.</li> </ul>
	<ul> <li>Unplug the power adapter. Wait for 15 seconds before plugging it back in. Allow up to one minute for the cordless handset and the telephone base to reset.</li> </ul>
7. The telephone does not ring when there is an incoming call.	<ul> <li>Make sure the ringer volume is turned up on the cordless handset.</li> </ul>
	<ul> <li>Make sure the power adapter is connected to the telephone base power jack, and plugged into an electrical outlet that is not controlled by a wall switch.</li> </ul>
	<ul> <li>Make sure the telephone line cord is plugged into the telephone line jack of the telephone base and the telephone wall jack.</li> </ul>
	<ul> <li>The cordless handset may be too far from the telephone base. Move it closer to the telephone base.</li> </ul>
	<ul> <li>If other telephones in your hotel are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider (charges may apply).</li> </ul>
	<ul> <li>Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.</li> </ul>
	<ul> <li>Test a working telephone at the telephone wall jack. If the other telephone has the same problem, the problem is in the telephone wall jack. Contact your telephone service provider (charges may apply).</li> </ul>

English

QUESTION	Suggestions
7. The telephone does not ring when there is an incoming call.(Continued)	<ul> <li>The telephone line cord may be defective. Install a new telephone line cord.</li> <li>Remove the handset battery and then install it again. Then place the cordless handset in the handset charger. Wait for the handset to synchronise with the telephone base. Allow up to one minute for this to take place.</li> </ul>
8. The cordless handset beeps and is not performing normally.	<ul> <li>Reset the telephone base by unplugging the electrical power to the base. Wait for 15 seconds and plug it back in again. Allow up to one minute for the cordless handset and the telephone base to synchronize.</li> <li>Other electronic products such as HAM radios and other DECT phones can cause</li> </ul>
	interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
9. There is interference during a telephone conversation, or the call fades in and out when I am using the cordless handset.	<ul> <li>The cordless handset may be out of range. Move the handset closer to the base station.</li> </ul>
	<ul> <li>Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference. Try moving the appliance or the telephone base to another outlet.</li> </ul>
	<ul> <li>Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.</li> </ul>
	<ul> <li>If the telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, relocate the telephone or modem farther apart from each other, or use a different surge protector.</li> </ul>

QUESTION	Suggestions
<ol> <li>There is interference during a telephone conversation, or the call fades in and out when I am using the cordless handset. (Continued)</li> </ol>	• The location of the telephone base can impact the performance of the cordless phone. For better reception, install the telephone base in a centralized location within the room, away from walls or other obstructions.
	<ul> <li>Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or telephone service. Contact your telephone service provider</li> </ul>
	<ul> <li>If other telephones in your hotel are having the same problem, the problem is in the wiring or telephone service. Contact your telephone service provider (charges may apply).</li> </ul>
10.1 hear other calls when using the telephone.	<ul> <li>Disconnect the telephone base from the network wall jack and connect a different working telephone. If calls are still not clear, the problem is probably in the wiring or telephone service. Contact your telephone service provider (charges may apply).</li> </ul>
11.1 hear noise on the cordless handset and the keys do not work.	<ul> <li>Make sure the telephone line cord is plugged in correctly and securely.</li> </ul>

English

QUESTION	Suggestions
	<ul> <li>If the telephone is not responding normally, put the cordless handset in the handset charger. If it does not fix the problem, try the following (in the order listed):</li> </ul>
	<ul> <li>A. Disconnect the power to the telephone base.</li> </ul>
	<ul> <li>B. Disconnect the battery on the cordless handset.</li> </ul>
12. Common cure for electronic equipment.	C. Wait a few minutes before connecting power to the telephone base.
	D. Install the battery again and then place the cordless handset in the handset charger.
	<ul> <li>E. Wait for the cordless handset to synchronise with the telephone base.</li> <li>Allow up to one minute for this to take place.</li> </ul>

## Appendix

#### VTech Hospitality Limited Warranty Program

VTech Communications, Inc., the manufacturer of VTech Hospitality Product ("Product"), warrants to the holder of a valid proof of purchase ("end user" or "you") that the Product and all accessories provided by VTech in the Product's package are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product's operating instructions. The limited warranty extends to the end user of this Product and applies only if such Product is purchased through a United States of America and/or Canadian distributor. The limited warranty period for this Product is determined based on the following:

5 Years – Analog Models

- All Classic Models corded and cordless
- All Contemporary Models corded and cordless
- All TrimStyle Models
- All Next Gen Models corded and cordless

#### 2 Years – SIP Non-Display Models

- All Classic Models corded and cordless
- All Contemporary Models corded and cordless
- All TrimStyle Models
- All Next Gen Models corded and cordless

During the limited warranty period, VTech's authorized service representative will repair or replace, at VTech's option, without charge, a Product that is not free from defects in materials and workmanship. If VTech's authorized service representative repairs the Product, new or refurbished replacement parts may be used. If the Product is replaced, it may be replaced with a new or refurbished Product of the same or similar design. Repair or replacement of Product, at VTech's option, is the exclusive remedy.

The limited warranty period for the Product begins on the date that the end user takes possession of the Product. This limited warranty also applies to repaired or replacement Products for a period of either: (a) 90 days from the date the repaired or replacement Product is shipped to you; or (b) the time remaining on the original limited warranty as described above; whichever is longer.

This limited warranty does not cover:

- 1. Product or parts that have been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
- 2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or
- 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- 4. Product to the extent that the problem is caused by use with non-VTech accessories; or

- Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- 6. Product purchased, used, serviced, or shipped for repair from outside the United States or Canada, or used for non-approved commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- 7. Product returned without valid proof of purchase; or
- 8. Charges or costs incurred by the end user, and risk of loss or damage, in removing and shipping the Product, or for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.
- Line cords or coil cords, plastic overlays, connectors, power adapters and batteries, if the Product is returned without them. VTech will charge the end user at then-current prices for each of the missing items.
- 10. NiCd, NiMH or Li-ion handset batteries, or power adapters, which, under all circumstances, are covered by a one (1) year warranty only.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of Product(s) to the service location. VTech's authorized service representative will return repaired or replaced product under this limited warranty to you, transportation, delivery and handling charges prepaid. VTech assumes no risk for damage or loss of the Product in transit.

If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair and return shipping costs for the repair of Products that not covered by this limited warranty. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

#### OTHER LIMITATIONS

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product, whether express or implied, oral or written, or statutory. The warranty exclusively describes all of VTech's responsibilities regarding the Product. No one is authorized to make modifications to this warranty and you should not rely on any such modification.

VTech's liability to end user hereunder shall not exceed the purchase price of the Product. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the product, or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/ provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you also have other rights which vary from state to state or province to province.

## Appendix

## Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

#### **Operating range**

The cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, the cordless handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base, cordless handset, the weather, and the layout of the hotel.

When the cordless handset is out of range while on a call, the cordless handset rapidly beeps three times.

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you answer the call. Move closer to the telephone base to answer the call.

If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

#### About cordless telephones

**Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.

**Electrical power:** The telephone base of the cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.

**Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.

**Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.

## **Appendix** FCC, ACTA and IC regulations

#### FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003. CAN ICES-3 (B)/NMB-3(B)

#### FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAKXNANXXXX. This identifier must be provided to your telephone service provider upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ45 jack should normally be used for connecting to a single line. See the installation instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under **VTech Hospitality limited warranty program** in the user's manual.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

If this equipment is causing harm to the telephone network, your telephone service provider may temporarily discontinue your telephone service. Your telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and your telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. Your telephone service provider is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

When the adjunct is used with a leased system, permission of the owner of the equipment must be obtained for connection of the adjunct because modification of the host system is often required.

This product can only be connected to the host equipment and never directly to the network.

#### Industry Canada

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

The Ringer Equivalence Number (REN) is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five.

Leprésentmatérielestconformeauxspecifications techniques applicables d'Innovation, Sciences et Développement économique Canada.

L'indice d'équivalence de la sonnerie (IES) sert àindiquer le nombre maximal de terminaux qui peuvent être raccordés àune interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, àla seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas cinq.

#### ISEDC WARNING

This device complies with Innovation, Science, and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device. Privacy of communications may not be ensured when using this telephone.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

Operation of 5150-5350 MHz is restricted to indoor use only.

#### Avertissement ISEDC

Cet appareil est compatible avec la licence de l'Innovation, la Science et le développement économique du Canada à l'exemption des normes RSS. Le fonctionnement est sujet aux deux (2) conditions suivantes :

- (1) Cet appareil peut ne pas causer de l'interférence, et
- (2) Cet appareil doit accepter l'interférence, incluant de l'interférence qui peut causer un mauvais fonctionnement de cet appareil. La confidentialité des communications peut ne pas être garantie lors de l'utilisation de ce téléphone.

L'appareil est compatible avec les directives de l'exposition RF, les utilisateurs peuvent obtenir les renseignements pour le Canada sur l'exposition RF et sa conformité.

Le fonctionnement de 5150-5350 MHz est limité à une utilisation en intérieur uniquement.

#### Maintenance

#### TAKING CARE OF YOUR TELEPHONE

Your telephone contains sophisticated electronic parts, so it must be treated with care.

#### AVOID ROUGH TREATMENT

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

#### AVOID WATER

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

#### **ELECTRICAL STORMS**

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

#### **CLEANING YOUR TELEPHONE**

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or mild soap. Do not use excess water or cleaning solvents of any kind.

### **Disclaimer and Limitation of Liability**

VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

#### Company: VTech Communications, Inc.

Address: 9020 SW Washington Square Road., Suite 555, Tigard, OR 97223, United States Phone: 1 (888) 907-2007

REMEMBER THAT ELECTRICAL APPLIANCES CAN CAUSE SERIOUS INJURY IF USED WHEN YOU ARE WET OR STANDING IN WATER. IF THE TELEPHONE BASE SHOULD FALL INTO WATER, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND/OR TELEPHONE LINE CORD FROM THE WALL. THEN REMOVE THE TELEPHONE BY THE UNPLUGGED CORDS.

## **Technical specifications**

Analog 1-Line Hidden Base with Cordless Color Handset and Charger - CTM-A2116 Analog 1-Line Hidden Base 1-Line Cordless Color Handset - NGC-C5106 Charger - C5016

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	Handset: 1921.536-1928.448 MHz
	Telephone base: 1921.536-1928.448 MHz
Channels	5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary
	according to environmental conditions at the time of use.
Operating temperature	32-104 °F (0-40 °C)
Power requirement	Handset battery (Model No. 523450AR1000): 3.7V 1000mAH, Li-ion
	Handset charger: supplied power adapter: VT05EUS06045
	Input: 100-240V AC 50/60 Hz Output: 6V DC @ 450mA
	Telephone base: power adapter: S006AKU0500080
	Input: 100-240V AC 50/60Hz Output: 5.0V DC @ 800mA
Speed Dial memory	Handset:
	3 dedicated speed dial hard keys:
	🗠 MESSAGES / 📠 FRONT DESK / 🔁 EMERGENCY
	10 speed dial keys - scroll list through <b>SpdDial</b> soft key menu
	3 soft keys (default: Lang. / RmServ / SpdDial):
	Only the middle soft key ( <b>RmServ</b> ) can be programmed as a speed dial key. The other two soft keys ( <b>Lang. and SpdDial</b> ) are fixed keys.





Specifications are subject to change without notice. Copyright © 2022 VTech Communications, Inc. All rights reserved. 10/22. CTM-A2116\_NGC-C5106\_C5016\_UG\_V1\_CEC\_US\_2022.10.07