Display icons overview

The battery icon flashes when

the battery is low and needs

The battery icon animates when

the battery is charging.

The battery icon becomes

The ECO mode activates

s within range from the

There are new voicemail

elephone base.

service provider

solid when the battery is fully

automatically to reduce power

eceived from your telephone

On when the home line is in use

or there is an incoming home

Flashes when there is an

ncoming home waiting call

There are Bluetooth devices

connected on the cell devices

Flashes when there is an

ncoming cell waiting call.

There are new caller ID log

The handset ringer is off.

laying and total number of

ew/old messages recorded.

The answering system is turned

On when the cell line is in use or there is an incoming cell call.

onsumption when the handset

DECT 6.0 cordless telephone with BLUETOOTH® wireless technology











abbreviated form

Telephones identified with this logo have reduced noise and nterference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the elecommunications Industry Association, Used under

Congratulations

on purchasing your new VTech product.

Before using this product, please read

This abridged user's manual provides you

A limited set of features are described in

Please refer to the online User's manual

for a full set of installation and operation

instructions at www.vtechphones.com.


with basic installation and use instructions.


Important safety instructions.




The ENERGY STAR® rogram (www.energysta ov) recognizes and ncourages the use of roducts that save energy and nelp protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.



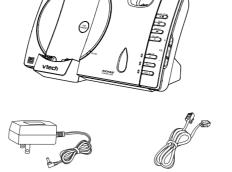

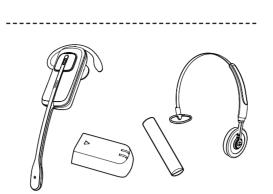

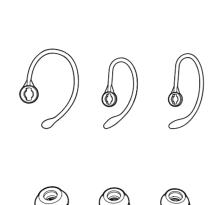

Check the battery level

battery level on the handset screen

setting or operation

charge.

.......

After you have installed the battery, check the

If the battery icon is Q Q or Q then go to


**Before use** section to set the date and

• If the screen is blank, or 11 flashes, then the


the battery section before you do any

time, and set the answering system through

battery needs to be charged. Go to Charge

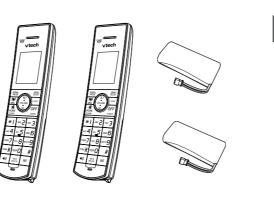



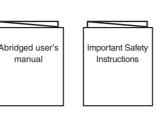

# 9 - IN USE light

8 – Charging cradle

answering a call.

FIND HANDSET

Handset overview

1 – Handset earpiece

2 - LCD display

4 - VOICE

3 - MENU/SELECT

5 - OFF/CANCEL

Hang up a call.

handset is ringing.

Show the menu

While in a menu, press to select an

item, or save an entry or setting.

Press to activate the voice-controlled

application on your connected cell

Silence the ringer temporarily while the

Press and hold to erase the missed call

indicator while the phone is not in use.


On when the handset or headset is in

Flashes when there is an incoming call,

Press to page all system handsets and

or another telephone sharing the same

use, or the answering system is

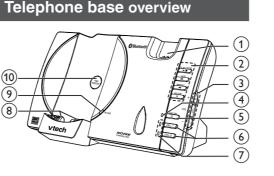

## 1 - Headset charging cradle

2 - ▶/■/PLAY/STOP

 Press to play messages. Press to stop message playback. **≫**/SKIP

· Press to skip to the next message.

 Press to repeat a message Press twice to play the previous X/DELETE

 Press to delete the playing message When the handset is not in use, press

twice to delete all old messages. · Press to adjust the volume during message playback

ringer volume when the handset is not in

Press to adjust the telephone base

4 - U/ANS ON light

· On when the answering system is on. 5 - 也/ANS ON

· Press to turn the answering system on

or off. 6 - CELL 1 and CELL 2

> Press to connect the paired cell Bluetooth device.

• Press and hold to add or replace a Bluetooth device.

7 - CELL 1 and CELL 2 lights

discoverable mode

 On when the telephone base is paired and connected with a Bluetooth device Flashes when the telephone base is in

Rotate the earhook to vertical direction and then pull the earhook until it separates from

.......


Wrap the earhook with the sponge

Adjust the headset to wear on the ear: • Hook the headset on your ear. Adjust the angle of the headset until the microphone is pointing towards your mouth. Firmly grip the headset with one hand whenever adjusting the headset



Over the head band

pre-installed earbud and earhook section to remove the earbud and earhook.

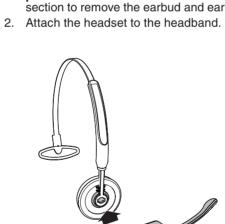

Press to return to the previous menu; or

press and hold to return to idle mode,

Press to add a space when entering

· Press repeatedly to show other dialing

Press to start an intercom conversation

• Mute the microphone during a call.

· Delete the displayed entry while

Make or answer a call using the

· During a call, press to switch between

the speakerphone and the handset.

While you have set the dial mode to

 Press repeatedly to add or remove 1 in front of the caller ID log entry before

Press and hold to set or dial your

Answer an incoming home call when

Answer an incoming cell call when you

Press repeatedly to review the redial

3. Rotate the headset to vertical direction until it

Press and hold to insert a dialing pause

Make or answer a home call.

Make or answer a cell call.

hear a call waiting alert.

while entering a number.

you hear a call waiting alert.

pulse and on a call, press to switch to

dialing or saving it to the phonebook.

call block list or redial list.

handset speakerphone

tone dialing temporarily.

voicemail number

14 - 希/HOME/FLASH

16 - REDIAL/PAUSE

15 - (•)/CELL

Delete digits or characters while using

Silence the ringer temporarily while the

reviewing the phonebook, caller ID log,

options when reviewing a caller ID log

without making changes

or transfer a call.

the dialing keys

handset is ringing.

8 – INT

12 - TONE X

9 - Microphone

10 - MUTE/DELETE




Adjust the head band to fit your head. Adjust and rotate the angle of the headset until the microphone is pointing towards your mouth



To remove the head band from the 1. Press **SELECT** to start the voice guide for the answering system setup. You hear the voice prompt "Hello! This voice guide

1. Hold the headset with one hand and the head band with your other hand. 2. Rotate the headset to horizontal direction

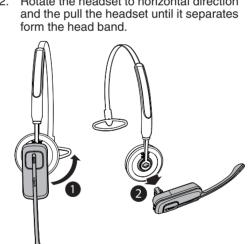

### Review the phonebook when the

VOLUME/▼/ CID

or redial list

leadset overview

18 - CHARGE light

handset is not in use

17 - VOLUME /▲/蚥

handset is not in use.

• Increase the listening volume during a

Scroll up while in a menu, or in the

phonebook, caller ID log, call block list or redial list.

· Decrease the listening volume during a

Scroll down while in a menu, or in the

phonebook, caller ID log, call block list

Review the caller ID log when the

· Move the cursor to the left when

entering numbers or names.

· On when the handset is charging.

 Move the cursor to the right when entering numbers or names.

Press to activate the voice-controlled

application on your connected cell phone when idle

temporarily.

4 - MUTE

2 - ON/OFF light

3 - Microphone

ON/OFF key

 Mute the microphone during a call. · When there is an incoming call, press to silence the ringer in the earpiece


On when the headset is charging.

Press to answer or end a call.

5 – Earpiece

6 - Earhook

### Charger overview

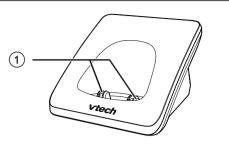

1 – Charging pole

1 - VOL+

Decrease the headset volume.

· Increase the headset volume.

Before use

Set date and time

**⊘**NOTE

 While on a call, <u>press and hold</u> to answer an incoming call when you receive a call waiting alert.

After you install your telephone or power returns

following a power outage and battery depletion,

the handset will prompt you to set the date and

time, and the answering system through voice

• Make sure you set the date and time including

the year correctly; otherwise the answering

I. Use the dialing keys (0-9) to enter the

2. Use the dialing keys (**0-9**) to enter the

After the setting for the date and time, the

handset will display Voice guide to... and set

Set answering system through voice guide

This feature assists you to do the basic setup

voice guide to record your own announcement,

set the number of rings and the message alert

will assist you with the basic setup of your

. Setup your answering system by inputting

the designated numbers as instructed in

of the answering system. You can follow the

Then press **SELECT**.

Press SELECT to save.

up Ans sys? alternatively.

answering system."

the voice guide.

or ▲ to choose AM or PM.

system does not announce the correct day of the

week for your recorded messages time stamp.

month (MM), date (DD) and year (YY).

hour (HH) and minute (MM). Then press ▼

## Check for dial tone:

### Press **%/HOME**. If you hear a dial tone, the nstallation is successful. If you do not hear a dial tone: Make sure the installation procedures

described above are properly done. • It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIF service provider, the telephone line may

need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays Out of range or and no pwr at base If there is a call while the handset is out of

range, it may not ring, or if it does ring, the call may not connect well when you press **私/HOME** or **(\*)/CELL**. Move closer to the telephone base, and then press **A/HOME** or **(•)**/CELL to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception.

move closer to the telephone base.

## **⊘**NOTE

### Make sure your cell phone has a good cell reception near the telephone base To use a Bluetooth enabled cell phone or headset with your **DS6771**, you must first

headset with the telephone base.

pair and connect your Bluetooth cell phone or





Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet). When you pair a Bluetooth cell phone to the telephone base, place your Bluetooth cell phone closer to the telephone base to maintain sufficient signal strength.

 For optimal performance, place your cell phone next to the telephone base while using the cell

devices, place your telephone base far away from devices such as baby monitors, wireless routers, microwaves and computers.

## Pair and connect your Bluetooth enabled

cell phone Choose a slot to pair the cell phone Press and hold CELL 1 or CELL 2 on the telephone base until you hear a confirmation tone, and the CELL 1 or

phone. Once your cell phone finds your VTech phone (VTech DS6771), press appropriate key on your cell phone to continue the pairing process. Your cell phone may prompt you to

2. Turn on the Bluetooth feature of your cell

**CELL 2** light flashes.

enter the PIN of the telephone base The default PIN of the telephone base is When the cell phone is connected to the

elephone base, the corresponding status icon

( 🐧 or 🐧 ) displays on handsets. The sponding device light (CELL 1 or CELL 2) turns on. If the pairing fails, turn off the Bluetooth feature on your cell phone and on the DS6771 by pressing CELL 1 or CELL 2. Then repeat

the steps above to pair and connect again. In

some cases, it may take you a few attempts to

complete the pairing process.

## Connect


You can choose to connect the telephone base for desktop usage. Use only the adapters provided.


• Even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see **Bluetooth**), and use the cell line alone without plugging in a telephone line cord.

service provider for more information.

### If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSL filter (not included) between the telephone line cord and telephone wall jack. Contact your DSL

Connect the telephone base

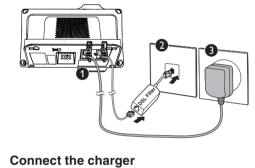

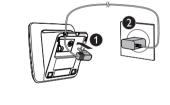

Pair and connect your Bluetooth enabled

1. Press **MENU** when the handset is not in

2. Press ▼ or ▲ to scroll to Bluetooth, and

Press ▼ or ▲ to scroll to Add BT headset,

and then press **SELECT**. The screen

4. Set your headset to discoverable mode.

• Enter the PIN of your headset if

Once your handset finds your headset,

required. The PIN for most Bluetooth

manual of your headset), and then press

devices is **0000** (refer to the user's

When the headset is successfully paired and

displays on handsets. The CELL 2 light turns on.

This application helps you integrate your Android

For more information and application download, scan the QR code on the right, or go to

Download contacts from your Bluetooth

1. Press **MENU** when the handset is not in

3. Scroll to **Download PB**, and then press

4. Scroll to select the desired cell phone, and

For certain cell phones, you may need to press a

The performance of phonebook download

feature depends on the compatibility of your

how that device uses Bluetooth connectivity.

Certain cell phones do not support SIM card

user's manual of your cell phone.

key on your cell phone to confirm the phonebook

Bluetooth cell phone. Refer to the user's manual

of your cell phone for more information about

download. If this is the case, transfer the contacts

from your SIM card to your cell phone memory first.

Then download from your cell phone memory. For

more information on how to transfer contacts from

your SIM card to your cell phone memory, see the

• For Android cell phones, you may also download

2. Scroll to **Bluetooth**, and then press

connected to the telephone base, the 3 icon

VTech Connect to Cell<sup>™</sup> application

displays Search headset ....

then press **SELECT**.

press **SELECT**.

phones with your **DS6771**.

www.vtechphones.com/app\_

then press **SELECT**.

connect to cell.


SELECT.


cell phone

### nstall the battery Install the handset battery

Install the handset battery as shown below.

· If the handset will not be used for a long time disconnect and remove the battery to prevent possible leakage

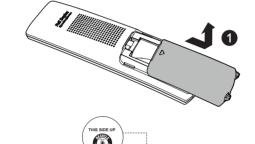

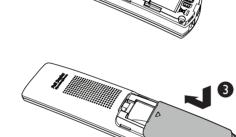

## Install the headset battery

your cell phone contacts to your

DS6771 via the VTech Contact

Share application. Scan the QR

app\_contact\_share for application

emote voice control

(8 or

above)

make sure you checked the following:

If you have connected a cell phone to your

the cell phone, such as Siri®, Google Now™

The remote voice control feature works with:

Google

Android

4 or

above)

Before using the remote voice control feature,

Your cell phone is paired and connected to

your telephone system via Bluetooth.

the background of your cell phone.

No Bluetooth applications are running in

Place your cell phone next to the telephone

Do not lock up your cell phone's screen or

Make sure you have turned on or logged in

Your cell phone's data or Wi-Fi signal is

in full strength and your cell phone can

Try to activate the voice app on your cell

S Voice® is a registered mark of Samsung Electronics

phone to ensure it is in place.

Siri® is a registered trademark of Apple Inc.

Google Now™ is a trademark of Google Inc.

set passcode for activating the voice app.

to the applications on your cell phone that

you will be sending your voice commands,

such as GPS, email and social networking

Android

above)

or S Voice®, via your handset or headset.

DS6771 telephone system, you can activate

the voice-controlled application (voice app) of

code on the right, or go to

www.vtechphones.com/

controlled

application


Operation

(Versions


supported)


accounts.

Use only supplied battery.

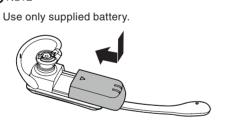

Use only supplied battery.

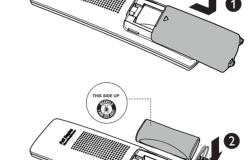

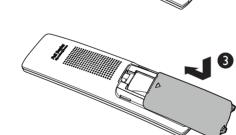

## Install the headset battery as shown below.

date and time, and voice guide.

telephone base or charger when not in use.

To activate remote voice control on

If you have connected one cell phone to

the telephone, the handset shows the device name of the connected cell phone

the telephone, the handset shows Select

at of the connected cell phones. Scroll

a device, followed by the device name

to choose the desired cell phone, and then press **SELECT**.

If the activation fails, the handset displays

Make reply to the voice app's feedback, if

off the speakerphone and listen to the

feedback through the handset earpiece

To end the current remote voice control session, press **CANCEL** on the handset

To activate remote voice control on

• Make sure the CELL 1 slot on the telephone

Press MUTE on the headset.

to operate your cell phone.

voice app.

base is paired and connected with a cell phone.

2. When the headset plays the confirmation

tone as forwarded by the cell phone's

Make reply to the voice app's feedback, if

session, press the ON/OFF key on the

Once you have activated the remote voice control

and the voice app's help topics to find out what

commands you can use and any limitations of the

Please check the cell phone user's manual

Some cell phone manufacturers or network

carriers may customize the phone's operating

f you want to use Google Now, you need to

manually set it as your default voice ann. For

user's manual, or contact your cell phone's

detailed instructions, refer to your cell phone

system and implement their own voice app.

feature, you are using your cell phone's voice app

headset. You can restart by following Steps 1 and 2 mentioned above.

voice app, start speaking toward the

headset, and then wait for feedback

3. To end the current remote voice control

You can restart by following Steps 1-3

Not available. When the screen returns

The handset then shows the remote voice

. When the handset plays the confirmation

tone as forwarded by the cell phone's

voice app, start speaking toward the handset, and then wait for feedback.

to idle, try Step 1 again

1. Press VOICE on the handset.

control icon (1).

**⊘**NOTE

 The handset battery is fully charged after 12 hours of continuous charging. The headset battery is fully charged after three hours of continuous charging. If you place the handset in the telephone base or the charger without plugging in the battery, the

### HANDSET X. Charge the battery Place the handset in the telephone base or the charger to charge. Place the headset on the telephone base to To manually set the date and time and the answering system, refer to Configure your answering system section.

• Press CANCEL or place the handset in the telephone base or charger will bypass the set

 For best performance, keep the handset in the Place the headset on the telephone base when

## Once you have installed the battery, the handset LCD display indicates the battery earhook: status (see the table below). Hold both sides of the earbud. Twist and

### The battery is To keep the place it in the telephone 3. Attach a earhook, and then a suitable earbud charger when

interruption

(at least 30

at least 30

minutes).

telephone and Set your built-in answering To manually initiate the voice guide, refer to Voice guide under Set your built-in

The battery has

little charge. The

handset cannot

The battery has

enough charge

short time.

o be used for a

no charge or very | withou

s blank, or

hows Put in

charger and

The screen

shows **Low** 

The screen

**battery** and

### Position the headset There are four earbuds and four earhooks

You can choose a suitable size of earbud, earhook and an appropriate way to position

provided. One earbud and one earhook have

pull the earbud until it separates from the

## been attached to the headset. Replace the pre-installed earbud and



manufacturer or network carrier. You may also go

to "Google Product Forums" on the Internet and

voice apps, your cell phone may not support the

phone's manufacturer or network carrier, or check

the voice app's help topics if you encounter any

During the remote voice control activation, if your

Android cell phone comes with both a dedicated

use it for just once or always. Select the desired

options. If you do not respond to your cell phone's

voice app and Google Now, it may prompt you

prompt in time, the handset screen will return

to idle, and the ( icon will disappear. You can

restart by following Steps 1-3 mentioned above

If you receive a landline or cell line incoming call

The feature may be ended automatically by your

established via the remote voice control feature

cell phone. For example, a cell call has been

If you need to press dialing keys (0-9. \*\frac{\tau}{1000} \text{tone}. #

1. Press **MENU** when the handset is not in

Press ▼ or ▲ until the screen displays the

3. Press **SELECT** to enter that menu.

To return to the previous menu, press

To return to idle mode, press and hold

) during a cell call, please make the call using

the cell lines of your telephone system instead of

using the voice app via the remote voice control

operation will be ended.

and the call has just ended.

Using the handset menu

desired feature menu

CANCEL.

when you have activated remote voice control on

a connected cell phone, the remote voice control

to select which voice app to use, and whether

remote voice control feature. Contact your cell

Due to the settings of certain cell phones and

check the corresponding help topics.

## To wear on the left ear:

Configure your telephone

used in all screen displays.

**SELECT** twice.

Set date and time

SELECT.

during a call.

Press SELECT to save.

The LCD language is preset to English. You

can select English, French or Spanish to be

1. Press **MENU** when the handset is not in

2. Scroll to **Settings**, and then press

3. Scroll to choose **English**, **Français** or

Make sure you set the date and time including

system does not announce the correct day of the

week for your recorded messages time stamp.

the year correctly; otherwise the answering

1. Press MENU when the handset is not in

2. Scroll to **Set date/time**, and then press

3. Use the dialing keys (0-9) to enter the

4. Use the dialing keys (0-9) to enter the

Then press **SELECT**.

Press SELECT to save.

Temporary tone dialing

During a call, press \*\(\frac{\text{\text{tone}}}{\text{tone}}\).

or ▲ to choose AM or PM.

month (MM), date (DD) and year (YY).

If you have pulse (rotary) service only, you can

switch from pulse to tone dialing temporarily

2. Use the dialing keys to enter the relevant

dialing mode after you end the call.

number. The telephone sends touch-tone

signals. It automatically returns to pulse


hour (**HH**) and minute (**MM**). Then press ▼

to the headset until they fit into place.

To wear on the right ear:



To attach the head band to the headset: 1. Refer to Steps 1 and 2 in Replace the

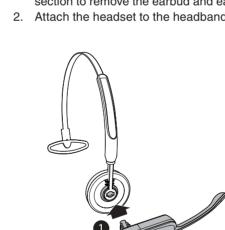

elephone operation

Handset control key panel:

REDIAL PAUSE

HOME FLASH

vtech

VOLUME

CID

MUTE DELETE

ABC 2 | DEF 3

VOICE

OFF

Make a home call Press A/HOME or ◄», and then dial the telephone number.

Enter the telephone number on the

Make a cell call • Press (\*)/CELL on the handset. Enter the

handset, and then press **<sup>®</sup>/HOME** or **<sup>◄</sup>**) to

telephone number, and then press (1)/CELL Enter the telephone number on the handset, and then press (•)/CELL to dial.

 After first pressing (n)/CELL, you may need to cell device when necessary, and then press **SELECT**. choose a cell device. Scroll to select the desired

no physical obstacles between the base and the cell phone, such as large furniture or thick walls. Answer a home/cell call Press A/HOME, (♠)/CELL, ◄), or any dialing

closer to the base, and make sure that there are

· While using the cell line, place your cell phone

Press ON/OFF key on the headset.

handset in the telephone base or charger

Press ON/OFF key on the headset.

Press OFF on the handset, or put the

End a home/cell call

 During a call, press 

on the handset to switch between speakerphone and normal handset use.

 During a call, press ▼/VOLUME/▲ on the handset, or VOL+ or VOL- on the headset to adjust the listening volume.

· The handset earpiece volume setting and speakerphone volume setting are independent.

The mute function allows you to hear the other party but the other party cannot hear you. 1. During a call, press MUTE on the handset.

2. Press **MUTE** again to resume the conversation. The screen displays Microphone on.

### The headset announced "Mute on". 2. Press **MUTE** again to resume the conversation. The headset announced

Join a call in progress You can use up to two system handsets at a time on a home line call. You can buy additional expansion handsets (DS6072) for

When a handset is on a home call, press A HOME or ■ on another handset to join

### Press OFF to exit the call. The call continues until all handsets hang up.

Call waiting When you subscribe to call waiting service from your telephone service provider, you hear

an alert tone if there is an incoming call while you are on another call. Call waiting on the home line:

 Press FLASH to put the current call on hold and take the new call. Press FLASH to switch back and forth

Call waiting on the cell line: Press (•)/CELL to put the current call on hold and take the new call. • Press (p)/CELL to switch back and forth

room for the new entry. Review the redial list

the desired entry displays.

**治/HOME**, (♠)/CELL, or ♠) to dial. Delete a redial list entry

Dial a redial list entry

Press REDIAL when the handset is not in

When the desired entry displays, press

When the desired redial entry displays, press

numbers dialed. When there are already

10 entries, the oldest entry is deleted to make

and headsets. To start paging The handset screen displays **Muted**. Press FIND HANDSET on the telephone base. All idle handsets and headsets ring and handsets display \*\* Paging \*\*. To end paging: Press FIND HANDSET again on the telephone base. 1. During a call, press **MUTE** on the headset.

Find handset

any dialing key on the handset. charger.

Press <sup>A</sup>/HOME, <sup>(n)</sup>/CELL, <sup>4</sup>», CANCEL, or

Use this feature to find all system handsets

headset deregistration.

Each handset stores the last 10 telephone

2. Press **▼**, **△**, or **REDIAL** repeatedly until

 Place the handset in the telephone base or Do not <u>press and hold</u> FIND HANDSET for more this telephone base. You can register up to than four seconds. It may lead to handset and five handsets to the telephone base.

Use the intercom features for conversations between two devices.

base or charger; or press **ON/OFF** key on Press **INT** on your handset when not in use. Use the dialing keys to enter a destination

device number. To answer the intercom call, press A/HOME, (♠)/CELL, ♠), or any dialing key The phonebook can store up to 1000 entries on the destination handset, or ON/OFF which are shared by all handsets. Each entry key on the headset.

place the handset back in the telephon base or charger, or press ON/OFF key on

To end the intercom call, press OFF or

### Answer an incoming call during an If you receive an incoming call during ar

ring. Then press (\*)/CELL.

Call transfer using intercom

Using a headset:

device to another

charger

device number

intercom call, there is an alert tone. Using a handset To answer a home call, press (\*)HOME

call ends and the telephone continues to

intercom call. The telephone continues to

Press **ON/OFF** key to end the intercom call.

The telephone continues to ring. Press

While on an outside call, you can use the

2. Use the dialing keys to enter a destination

The current call is put on hold

before transferring the call.

Delete the announcement

**SELECT** twice.

announcement.

Set number of rings

new messages.

SELECT.

SELECT.

To record, press 7."

1. Press **MENU** when the handset is not in

2. Scroll to **Answering sys** and then press

4. Press 3 to delete your own recorded

You can set the answering system to answer an

incoming call after 2, 3, 4, 5 or 6 rings; or toll saver.

If you choose toll saver, the answering system

answers a call after 2 rings when you have new

messages, or after 4 rings when you have no

1. Press MENU when the handset is not in

Scroll to # of rings then press SELECT.

2. Scroll to **Answering sys** then press

3. Scroll to **Ans sys setup** then press

5. Press **SELECT** to move to the name. The intercom call ends automatically 6. Use the dialing keys to enter the name (up to To end the intercom call without answering the outside call, press **OFF**. The intercom

15 characters). Additional key presses show other characters of that particular key.

7. Press **SELECT** to save.

(up to 30 digits)

Phonebook

Add a phonebook entry

While entering numbers and names, you

### To answer a cell call, press **OFF** to end the

 Press **DELETE** to erase a digit or character. Press and hold DELETE to erase the entire

. To end the call, press **OFF** on the

destination handset or place the

may consist of a telephone number up to

30 digits, and a name up to 15 characters.

1. Press **MENU** when the handset is not in

2. Scroll to **Phonebook** then press **SELECT**.

3. Press SELECT again to choose Add new

4. Use the dialing keys to enter the number

## **ON/OFF** key again to answer the home call.

Press ▼ or ▲ to move the cursor to the left

### Press and hold PAUSE to insert a dialing pause (for entering phone numbers only).

 Press \*\(\frac{1}{2}\) to add \*\(\frac{1}{2}\) (\*\) appears) or # intercom feature to transfer the call from one to add # (₩ appears) (for entering phone numbers only) . Press INT on your handset during a call.

### Entries are sorted alphabetically

 To answer the intercom call, press **浴/HOME**, (♠)/CELL, ♠), or any dialing key Press 
 when the handset is not in use on the destination handset, or press **ON/OFF** key on the destination headset You can now have a private conservation

1. To transfer the call, press **OFF** on the initiating handset or place the initiating **A**/HOME or **♦**) to dial. handset back in the telephone base or

### Delete a phonebook entry destination handset back in the telephone

1. When the desired entry displays, press DELETE.

When the screen displays Delete entry?, press **SELECT**.

### Delete all phonebook entries: . Press **MENU** when the handset is not in

 Scroll to Phonebook, and then press SELECT.

3. Scroll to **Delete all**, and then press

### SELECT.

4. When the screen displays Delete all?, press **SELECT**.

### Edit a phonebook entry When the desired entry displays, press

SELECT. Use the dialing keys to edit the number, and then press SELECT.

3. Use the dialing keys to edit the name, and

### then press **SELECT** to save.

Dial a phonebook entry

### • When the desired entry appears, press

**A**/HOME or **■**) to dial.

### Caller ID

nformation about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log. The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the telephone number has more than

15 digits, only the last 15 digits appear. If the

name has more than 15 characters, only the first

15 characters are shown and saved in the caller

1. Press CID when the handset is not in use.

2. Scroll to browse through the caller ID log.

If you subscribe to caller ID service,

• Press **0** to add a space (for entering names

### Review the phonebook

2. Scroll to browse through the phonebook or use the dialing keys to start a name search (you can enter up to 3 characters for the search). When the desired entry appears, press

Review a caller ID log entry

Options during playback

rings and the message alert tone. 3. The handset announces, "To play, press 2. 1. Press **MENU** when the handset is not in

### system

Scroll to choose 2, 3, 4, 5, 6 or Toll saver. 6. Press **SELECT** to save and you hear a confirmation tone. telephone base flashes.

### If you have muted the first ring, you will hear one

ring less before the answering system answers the incoming calls.

2. Scroll to **Answering sys** then press

Scroll to choose On or Off.

6. Press **SELECT** to save and you hear a confirmation tone

Message alert tone

When the message alert tone is set to on, and there is at least one new message, the

telephone base beeps every 10 seconds. The message alert tone is preset to off. 1. Press **MENU** when the handset is not in

SELECT.

3. Scroll to **Ans sys setup** then press SELECT. 4. Scroll to **Msg alert tone** then press

SELECT.

press **SELECT**.

designated numbers as instructed in the voice guide.

Use your built-in answering

**messages** and the message window on the

Options during playback:

listen to the previous message

message.

Press **SELECT**.

Voice guide This feature is an alternative way for you to your own announcement, set the number of

Press ►/■/PLAY when the handset is not in

Press — /VOL/+ to adjust the speaker

volume.

do the basic setup of the answering system. You can follow the voice guide to record

2. Scroll to **Answering sys**, and then

This voice guide will assist you with the basic setup of your answering system." 4. Setup your answering system by inputting

### New message indication

messages. The handset displays XX new

To playback messages at the telephone

 Press ►/SKIP to skip to the next message. Press **≪REPEAT** to repeat the message

Press X/DELETE to delete the playing

Press ►/■/STOP to stop.

3. Scroll to **Voice guide**, and then press **SELECT**. You hear the voice prompt "Hello!

## When there are new answering system

currently playing. Press **≪/REPEAT** twice to

message. The system advances to the next

To playback messages at the handset: Press MENU to choose Play messages.

the message playback volume.

Press OFF to stop the playback.

Press X/DELETE twice when the handset is

SELECT

3. Scroll to **Delete all old**, and then press **SELECT** twice. You hear a confirmation tone.

2. When the system plays your

commands

Play all messages. 2 Play new messages. (during playback). 33 Delete all old messages. (during playback). 5 Stop.

 Press 4 to repeat the message. Press 4 twice to hear the previous message.

To delete all old messages on a handset: 1. Press **MENU** when the handset is not in

You can use this preset code, or set your own. 1. Dial your telephone number from any

3. You can enter one of the following remote Command

not in use

A two-digit security code is required to access the answering system remotely from any

announcement, enter the two-digit security

Description

program the delay before answering calls in Hear a list of remote

Press VOLUME/▼ or VOLUME/▲ to adjust

speakerphone mode and handset mode.

2. Scroll to **Answering sys**, and then press

voicemail message. Set your answering system to answer calls at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, se your answering system to answer after four rings. Some voicemail service providers may

Press 3 to delete the playing message.

Delete all old messages To delete all old messages at the telephone

Delete the current message Repeat the current message

(during playback). Press 6 to skip to the next message.

touch-tone telephone. The preset code is 19.

Record a nev announcement. End the call. Turn the answering system

Skip to the next message

4. Hang up or press 8 to end the call.

on or off.

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is 19.

Remote access code

SELECT

number.

2. Scroll to **Answering sys** then press SELECT 3. Scroll to **Ans sys setup** then press

4. Scroll to **Remote code**, and then press SELECT 5. Use the dialing keys to enter a two-digit

### 6. Press **SELECT** to save and you hear a confirmation tone.

Scroll to a desired two-digit number.

Use the built-in answering system nd voicemail service You can use your answering system and voicemail service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings. contact your telephone service provider. If you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a

seconds instead of rings. In this case, allow

six seconds per ring when determining the

This warranty is the complete and exclusive

should not rely on any such modification.

appropriate setting.

Other limitations

telephone service providers. It may be included with your telephone service, or may be optional. Fees may apply. Retrieve voicemail

You can set the code from **00** to **99**. 1. Press **MENU** when the handset is not in

2. Scroll to **Settings** and then press SELECT.

SELECT. number (up to 30 digits).

new voicemail indicators, use this feature to turn off the indicators.

2. Scroll to **Settings**, and then press SELECT.

not delete your voicemail messages.

Voicemail is a feature available from most

by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages. Set your voicemail number

3. Scroll to Voicemail # and then press Use the dialing keys to enter the voicemail

rom home, and the handset still displays the

This feature turns off the indicators only, it does

1. Press **MENU** when the handset is not in

## Expand your telephone system

You can add new handsets (DS6072) cordless headsets (IS6200) or speakerphones (AT&T TL80133) to your telephone system. All accessories are sold separately. Your telephone base supports a maximum of five devices.

Save a caller ID log entry to call block list

When the desired entry displays, press

Use the dialing keys to modify the number

if necessary, and then press **SELECT**.

displays, press **DELETE** on the handset.

Your telephone rings once for blocked calls

You can choose to mute the first ring for all

incoming calls, so that there will be no ring for

blocked calls. By default, the first ring is set to

1. Press **MENU** when the handset is not in

3. Scroll to choose First ring:On to keep the

If you have muted the first ring, you will hear

You can choose from different ringer tones.

1. Press **MENU** when the handset is not in

Scroll to choose Key tone, and then press

4. Scroll to choose On or Off, and then press

2. Scroll to **Settings**, and then press

voicemail answer the incoming calls.

one ring less before the answering system and

first ring, or **First ring:Off** to mute the first

4. Use the dialing keys to enter the name,

and then press SELECT to save.

When the desired call block list entry

Delete a call block list entry

2. Press 7464# on the handset

4. Press **SELECT** to save.

Sound settings

SELECT to save.

**O**NOTE

Key tone

Scroll to To Call block then press

SELECT.

SELECT.

Mute first ring

Ringer tone

SELECT.

ringer tone samples.

the ringer of

**6**NOTE

SELECT.

paging tone.

Handset ringer volume

**SELECT** to save.

telephone base when idle

handset displays A

Temporary ringer silencing

rings normally at the preset volume.

You can choose from different ringer tones

Press MENU when the handset is not in

Scroll to choose Home ringtone or Cell

ringtone, and then press SELECT.

If you turn off the ringer volume, you will not hear

You can adjust the ringer volume level, or turn

Press MENU when the handset is not in

3. Scroll to choose Home volume or Cell

volume, and then press SELECT

• If the handset ringer volume is set to off, that

You can adjust the telephone base volume

When the telephone is ringing, you can

temporarily silence the ringer of the handse

without disconnecting the call. The next call

• Press OFF or MUTE on the handset. The

level by pressing – /VOL/+ on the side of the

Telephone base ringer volume

Scroll to adjust the volume, and then press

handset is silenced for all incoming calls except

2. Scroll to Ringers, and then press

4. Scroll to sample each ringer tone, and

2. Scroll to **Ringers**, and then press

then press **SELECT** to save.

General product care

Taking care of your telephone

**Avoid water** 

electronic parts, so it must be treated with care. Avoid rough treatment Place the handset down gently. Save the original

Your telephone can be damaged if it gets wet. Do

not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower. Electrical storms Electrical storms can sometimes cause power surges

### The following are the questions most frequently

asked about the cordless telephone. If you cannot find the answer to your question, visit our website at www.vtechphones.com or call 1 (800) 595-9511 fo customer service. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377

equently asked questions

line cord from your telephone and connect it to another telephone. If there is no dia tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line If changing telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact you telephone service provider. You may be using a new cable or VoIP service, the existing telephone jacks in your home may no longer work. Contact your service provider for

## registered".

and battery is installed and During the registration charged correctly. For optimus process, the LED light daily performance, return the flashes alternatively in red handset to the telephone bas and blue, and turn red after the registration completes This process takes about 60

DS6771.

If you hear a dial tone, the egistration is successful

function of your cell phone

The headset is deregistered

from the telephone base.

Follow the steps below to

. Press and hold FIND

The **IN USE** light turns on

2. Place the headset on the

elephone base to register it

HANDSET for four seconds

register it back.

to the telephone or headset is turned on. See the user's manual of your cel phone or headset for more information. Make sure that the telephone Carefully follow the pairing

for this to work, the telephone

base must be within 15 feet of

the cell phone.

Turn off your cell phone or headset, and then turn it on

## For message recording, your telephone has a

Your answering system has various features read below for the basic settings.

turn the built-in answering system on or off. up to 99 messages. Each message can be up to three minutes in length. The total storage To turn on or off with the handset capacity for the announcement, messages and memos is approximately 23 minutes. The actual recording time depends on individual

message characteristics. SELECT Your answering system allows you to set your announcement, to save and delete messages, activate call screening, to set number of rings SELECT.

before pick up, and to access remotely. Telephone base control key panel: DELETE CELL I CELL 2

Make sure the answering

system is on. When the

**ON** should display on the

answering system is on. ANS

When the answering machine

memory is full, it does not

record new messages until

If you subscribe to voicemail

rings so that your answering

system answers before your

To determine how many rings

activate your voicemail service

voicemail service answers.

service, change the number of

some old messages are

deleted.

## Set your built-in answering system

The answering system can record and store

1. Press **MENU** when the handset is not in 2. Scroll to Answering sys, and then press

3. Scroll to Answer on/off, and then press

4. Scroll to choose **On** or **Off**, and then press **SELECT** to save. You hear a confirmation

Turn the answering system on or off

answer and record messages.

The answering system must be turned on to

To turn on or off with the telephone base

• Press **U/ANS ON** on the telephone base to

### **Default announcement** The telephone is preset with a greeting that answers calls with "Hello, please leave a message after the tone." You can use this preset

in length

2. Scroll to Answering sys and then press

**SELECT** twice. 3. The screen displays Play [2], Del [3], Rec [7], and it announces, "To play, press 2. To record, press 7.

### Play the announcement

Scroll to Answering sys and then press

5. The handset announces, "To play, press 2. To record, press 7." Press 2 to play the announcement.

Make sure your cell phone is paired and connected to your telephone system via Bluetooth. Make sure no Bluetooth

system of your cell phone is

Do not lock up your cell phone's screen or set passcode for activating the voice-controlled application (voice app). Make sure you have turned on

applications are running in th

background of your cell phone

accounts. data or Wi-Fi signal is in full strength and your cell phone can connect to the Internet.

cell phone user's manual and the voice app's help topics to

### cell phones and voice apps vour cell phone may not support the remote voice control feature. Contact vou cell phone's manufacturer of etwork carrier, or check the voice app's help topics if you

of your cell phone may be los Make sure vour cell phone's data or Wi-Fi signal is in full The feature may be ended automa<u>ti</u>cally by your cell phone. For example, a cell ca remote voice control feature and the call has just ended.

persists, contact your cell phone's network carrier.

kevs on the handset or

When you press the dialing

telephone base during a cell call using the remote voice

ntrol fĕature, the telephone

our telephone system for call

vstem may have no respons and the call may be ended

lease use the cell lines of

hat require using the dialing

keys during the call.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with

### Product for a period of either (a) 90 days from the to you or (b) the time remaining on the original oneyear warranty; whichever is longer

replacement to take approximately 30 days.

improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion: or 2. Product that has been damaged due to repair,

> experienced is caused by signal conditions, network reliability, or cable or antenna systems;

### The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free

to the following terms and conditions, when

installed and used normally and in accordance

with the Product operating instructions. This

limited warranty extends only to the Consumer for

return the repaired or replacement Products to you in working condition. You should expect the repair or

This limited warranty does not cover: Product that has been subjected to misuse. accident, shipping or other physical damage,

## 3. Product to the extent that the problem

\_imited warranty What does this limited warranty cover?

from defects in material and workmanship, pursuant

a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will

## What is not covered by this limited warranty?

alteration or modification by anyone other than an authorized service representative of VTech;

### 4. Product to the extent that the problem is caused by use with non-VTech accessories; or

### idle handset to erase the missed call indicator. All the entries are then considered old.

When there are calls that have not been

reviewed in the caller ID log, the handset

Each time you review a caller ID log entry

marked **NEW**, the number of missed calls

When you have reviewed all the missed calls,

the missed call indicator no longer displays.

If you do not want to review the missed calls

one by one, press and hold **CANCEL** on the

Missed call indicator

displays XX missed calls

decreases by one.

Dial a caller ID log entry When the desired entry appears, press **A**/HOME or **I** on the handset to dial.

Call block

SELECT.

SELECT.

SELECT.

SELECT.

(up to 30 digits)

Press SELECT to save

Review call block list

SELECT

SELECT.

SELECT.

certain undesired calls

Block unknown calls

then press **SELECT**.

Add a call block list entry

If you subscribe to caller ID service, you can

The call block list stores up to 20 entries.

1. Press **MENU** when the handset is not in

Scroll to Calls w/o num, and then press

4. Scroll to choose **Unblock** or **Block**, and

1. Press **MENU** when the handset is not in

Scroll to Add new entry, and then press

Use the dialing keys to enter the number

other characters of that particular key

1. Press **MENU** when the handset is not in

2. Scroll to Call block, and then press

3. Scroll to Block list, and then press

Press SELECT to choose Review.

When the desired entry displays, press

Use the dialing keys to edit the number,

3. Use the dialing keys to edit the name, and

Edit a call block list entry

and then press **SELECT**.

then press **SELECT** to save.

6. Press **SELECT** to move to enter the name.

7. Use the dialing keys to enter the name (up to

15 characters). Additional key presses show

2. Scroll to **Call block**, and then press

3. Scroll to **Block list**, and then press

2. Scroll to Call block, and then press

set the telephone to block unknown calls and

### Save a caller ID log entry to the . When the desired caller ID log entry displays, press SELECT.

2. Scroll to To Phonebook then press SELECT Use the dialing keys to modify the number

if necessary, and then press SELECT. 4. Use the dialing keys to enter the name, and then press **SELECT** to save.

Delete a caller ID log entry • When the desired caller ID log entry displays, press **DELETE**.

Delete all caller ID log entries

 Press MENU when the handset is not in use. Scroll to Caller ID log and then press **SELECT**. Scroll to **Delete all** and then press **SELECT** twice.

## etrieve voicemail from elephone service

displays **and New voicemail**. To retrieve, ou typically dial an access number provided

handset for easy access to your voicemail. After you save the voicemail number, you can press and hold 1 to retrieve voicemail.

You can save your access number on each

Press SELECT to save.

3. Scroll to Clr voicemail, and then press

VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized Channels to make modifications to this limited warranty and you State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other

When you received a voicemail, the handset

1. Press **MENU** when the handset is not in

Turn off the new voicemail indicators If you have retrieved your voicemail while away that comes with your new device ECO mode This power conserving technology reduces power

consumption for optimal battery performance. The

ECO mode activates automatically whenever the

nandset is synchronized with the telephone base.

For more details, refer to the user's manual

Your cordless telephone contains sophisticated packing materials to protect your telephone if you ever

harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms Cleaning your telephone Your telephone has a durable plastic casing that

should retain its luster for many years. Clean it only

cloth or cleaning solvents of any kind.

with a dry non-abrasive cloth. Do not use dampened

Make sure the telephone base is installed properly.

solutions. The display The handset is deregistered shows To rom the telephone base. register HS...

and **...see** 

alternately. The

work at all.

handset does not

manual

The headset

cannot pick

up any call. It

announces "Not

Lift the headset, then press **ON/OFF** key on the headset cannot add and | Make sure you have cellular connect my cell coverage and the Bluetooth

About answering system and

built-in answering system, and it also support

service provider (subscription is required, and

ssages are

ored in a

server or syste

ovided bv

rvice.

nay be

vour telephone

our messages

automatically

leted after a

eriod of time.

ontact your

When you

and New

oicemail.

eceived new

essages, the

andset displa

ssages, yo

eed an acces

umber and/

r a passcod

our telephon

service provide

lephone service

ovider for more

voicemail service offered by your telephone

The main differences between them are:

ssages are

lephone base

Your messages

will not be deleted

You have to dele

When you received

new messages.

handset displays

XX new messages

and the message

essages, usually

nere are two ways:

Press ►/■ on the

telephone base;

Access remotely

with an access

window on the

telephone base

o retrieve

flashes.

automatically.

your messages

manually.

stored in the

oicemail service

fee may apply).

Storage

o retrieve

essages

instructions in this manua Make sure that your Bluetooth cell phone or headset is not connected to any other Bluetooth device, and is connected to the telephone base and active on the device list.

message, i.e., more than four incomplete. minutes, part of it may be los when the answering system disconnects the call. If the memory on the answering

The answering

system does

essages.

The answering

system does

not announce

the correct day

of the week

for recorded

essages time

not record

system becomes full during a message, the answering system stops recording and disconnects the call. While the handset is not in use press MENU and then enter **\*364**# to change the handset LCD language back to English

## iÓS 8 or later, or Android 4 o does not work.

The remote voice  $\mathsf{I}$  Make sure the operating

Place your cell phone next to the telephone base

Try to activate the voice app on your cell phone to ensure in place. Once you have activated the remoté voice control feature you are using your cell phone's

on the Internet and check the

The remote voice | Due to the settings of certain control feature does not work. voice contro while it is in use

I cannot press

any dialing keys (**0-9**, <del>X lone</del>, **#** ) when I am on

a cell call using

the remote voice

### encounter any problems. The Bluetooth function of your cell phone may be off, or you nay have moved your cell hone out of Bluetooth range of the telephone base. Make sure the Bluetooth function of your cell phone is turned on and place your cell phone nex to the telephone base. The data or Wi-Fi connection

If you receive a landline or cell line incoming call when you have activated remote voice control on a connected cell phone, the remote voice control operation will be ended. The voice-controlled application of your cell phone may be affected by other cell phone operations in the background. If the problen

## Products purchased and used in the United States of America and Canada.

How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement date the repaired or replacement Product is shipped

> (Product model) and the date of purchase or receipt: and Provide your name, complete and correct mailing address, and telephone number

### . Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible

America or Canada, or used for commercial or

institutional purposes (including but not limited

to Products used for rental purposes); or

purchase (see item 2 on the next page); or

of customer controls, and installation or repair of

To obtain warranty service in the USA, please visit

8. Charges for installation or set up, adjustment

7. Product returned without a valid proof of

systems outside the unit.

How do you get warranty service?

commands

our website at **www.vtechphones.com** or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you

and will request that you authorize the cost of repair

prior to any further repair activity. You must pay for

the cost of repair and return shipping costs for the

What must you return with the Product to get

Return the entire original package and

2. Include a "valid proof of purchase" (sales

malfunction or difficulty; and

repair of Products that are not covered by this limited

contents including the Product to the VTech

receipt) identifying the Product purchased

service location along with a description of the

### 6. Product purchased, used, serviced, or shipped Product. VTech provides no other warranties for this for repair from outside the United States of Product. The warranty exclusively describes all of

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts. so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special incidental, consequential, or similar damages (including, but not limited to lost profits or revenue inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may

Please retain your original sales receipt as

proof of purchase.

### agreement between you and VTech. It supersedes all other written or oral communications related to this

rights, which vary from state to state or province to not apply to you.

### DECT frequency frequency 1921.536-1928.448 MHz

DECT: 5

Bluetooth: 79

Memory Phonebook: Caller ID log: 50 memory locations: up to 24 digits and 15 characters Call block: 20 entries

### Technical specifications

Bluetooth frequency

2402 000-2480 000 MHz

Maximum power allowed by FCC

may vary according to environment

and IC. Actual operating range

conditions at the time of use.

Handset: 2.4V Ni-MH battery requirements Telephone base: Output #1: 6V DC @ 450mA; Output #2: 6V DC @ 300mA Charger: 6V DC @ 400mA 1000 memory locations (shared between home and cell lines); up to 30 digits and 15 characters

### My telephone does not work

The display Disconnect the telephone cannot hear the

after use.

Place the handset in the

telephone base to register

it back. The handset shows

Registered and you hear a

beep when the registration

process completes. This

process takes about 90

seconds to complete.

phone or headset

The cell phone If there is a location in your ouse with better reception ception in my you can leave your cell phone house is poor at that location while you use and I cannot connect it to my the DS6771 cell line. In order

et my LCD anguage to French, and on't know ho to change it back to English.

The messages The maximum length for a

on the answering | message is four minutes. If

## voice app to operate your cell phone. If the voice command: do not work, please check the

implement their own voice Now, you need to manually set it as your default voice phone's manufacturer or network carrier. You may als go to "Google Product Forums" corresponding help topics.

.......

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners. Specifications are subject to change without notice.

Occument order number: 91-010010-050-100

announcement, or replace it with your own Record your own announcement The announcement can be up to 90 seconds 1. Press **MENU** when the handset is not in

4. Press 7 to record. The handset announces, "Record after the tone. Press 5 when you are done." After the tone, speak towards the handset microphone 5. Press 5 when done

1. Press MENU when the handset is not in **SELECT** twice

control feature

or logged in to the application on your cell phone that you will be sending your voice

> find out what commands you can use and any limitations of the voice app. Some cell phone manufacturers or networl carriers may customize the phone's operating system and app. If you want to use Good app. For detailed instructions refer to your cell phone user's manual, or contact your cell

© 2019 VTech Communications, Inc. All rights reserved. 06/19. DS6771\_ACIB\_V4.0

contact your telephone service Make sure you have set the date and time. See Configur your telephone section commands, such as GPS email and social networking