 



Go to www.vtechphones.com to register your product for enhanced warranty support and the latest Vtech product news.

IS8151
IS8151-2
IS8151-3
IS8151-4
IS8151-5
IS8152-5

DECT 6.0 Cordless telephone with BLUETOOTH® wireless technology

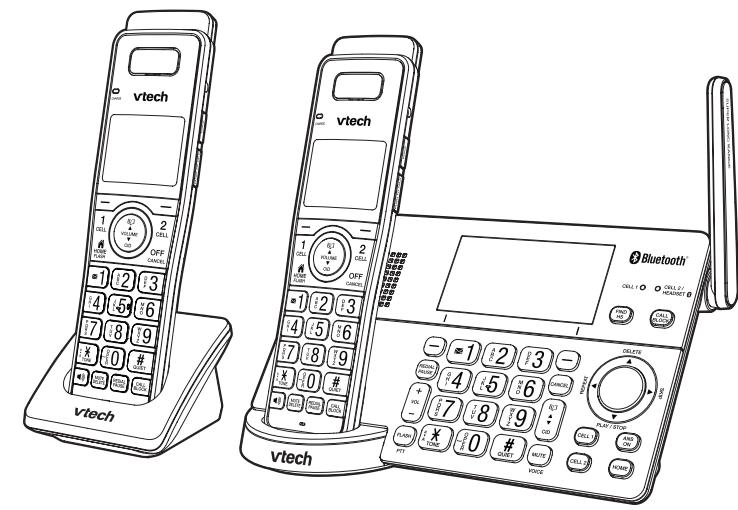

 vtech® Quick start guide



The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Vtech Holdings Limited is under license. Vtech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

The ENERGY STAR program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR label indicating it meets the latest energy efficiency guidelines.

Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliance logo is a trademark of the Telecommunications Industry Association. Used under license.

Call block: 1000 entries	
Memory	Phonebook: 200 memory locations; up to 24 digits and 15 characters; Caller ID log: 50 memory locations; up to 30 digits and 15 characters
Power	Handset: 2.4 VDC, AAA×2, NI-MH battery pack requirement Telephone base: 6V DC @ 600mA Charger: 6V DC @ 400mA
Frequency	Handset: 1921.536MHz - 1928.448MHz Telephone base: 1921.536MHz - 1928.448MHz
Channels	5
Frequency control	Crystal controlled PLL synthesizer

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, nor in a wet basement or shower.
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heater. This product should not be placed in any area where proper ventilation is not provided.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
- Do not overload wall outlets and extension cords.
- Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not plug a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases; cleaning solvents; gasoline vapors; etc.; a leak of natural gas, etc.
- Only put the handset of your telephone next to your ear when it is in normal talk mode.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Battery

- CAUTION:** Use Only Supplied Battery.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

 
 
- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES

- Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

WHAT'S IN THE BOX

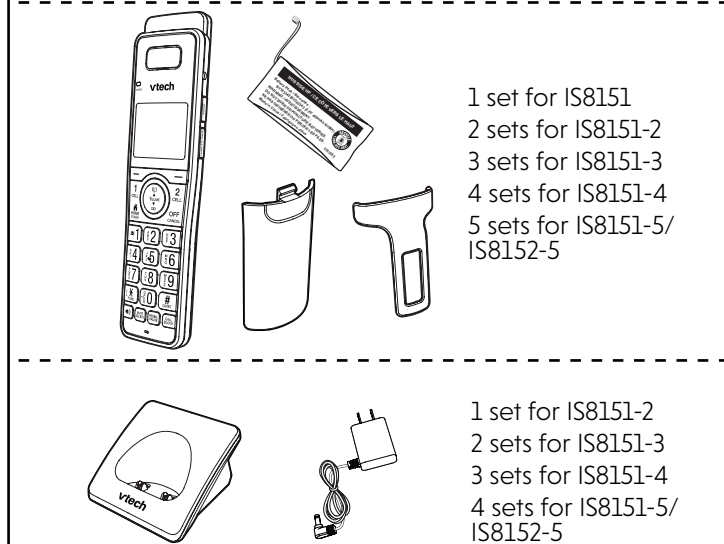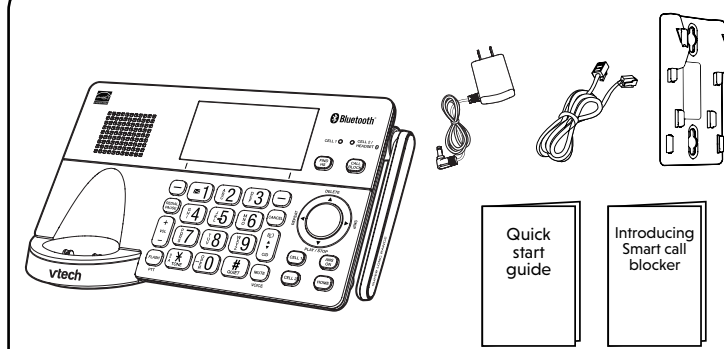

1 set for IS8151
2 sets for IS8151-2
3 sets for IS8151-3
4 sets for IS8151-4
5 sets for IS8151-5/
IS8152-5

 
1 set for IS8151-2
2 sets for IS8151-3
3 sets for IS8151-4
4 sets for IS8151-5/
IS8152-5

CONNECT AND INSTALL

1 Connect the telephone base


If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you connect a DSL filter (not included) to the telephone wall jack.

2 Install the battery

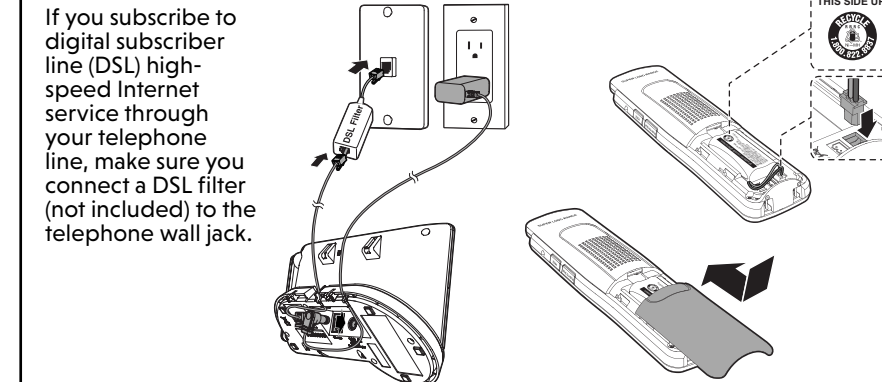

3 Connect the charger

 4 Charge the battery

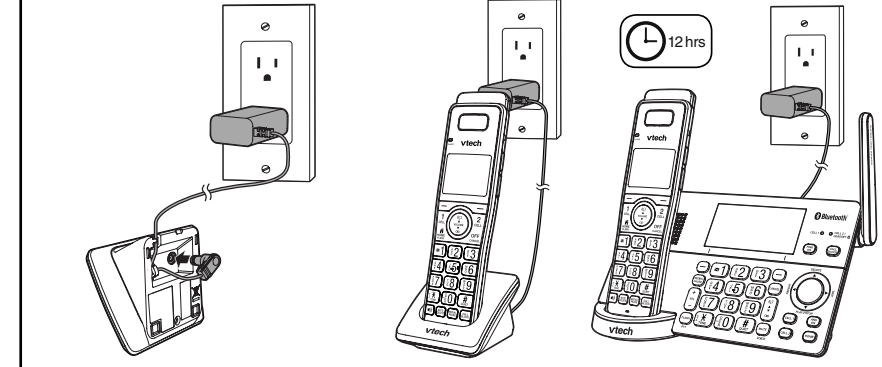


Install belt clip

To attach the belt clip
Snap the belt clip into the slots on both sides of the cordless handset.

To remove the belt clip
Lift either of the belt clip tabs outwards from the handset.

 Improve the telephone signal strength

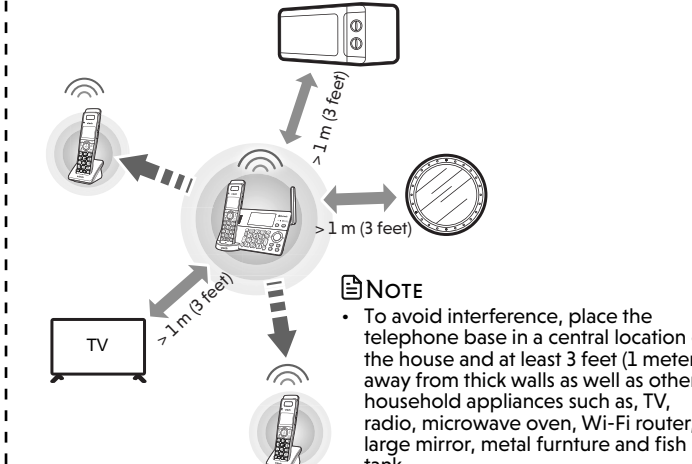


Display

Handset:



 Telephone base:

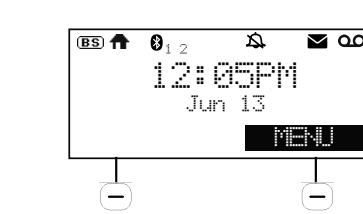


Softkeys	Option displayed above a softkey. Press ← or → to select.
	The handset battery low and needs charging.
	The handset battery is charging.
HS1	Handset indicates the handset number.
	Handset or telephone base ringer is off.
	The HOME line is in use.
	Bluetooth device is active.
	Bluetooth device is in use.
	Answering system is on.
	There are new caller ID log entries and/or new messages.

2 SETUP

After you install your telephone or power returns following a power outage and battery depletion, the handset and telephone base will prompt you to set the date and time, and to configure the Smart call blocker and answering system through voice guide.

Date and time

 
Follow the steps below to set the date and time. For example, if the date is 25 July, 2019, and the time is 12:05 AM:

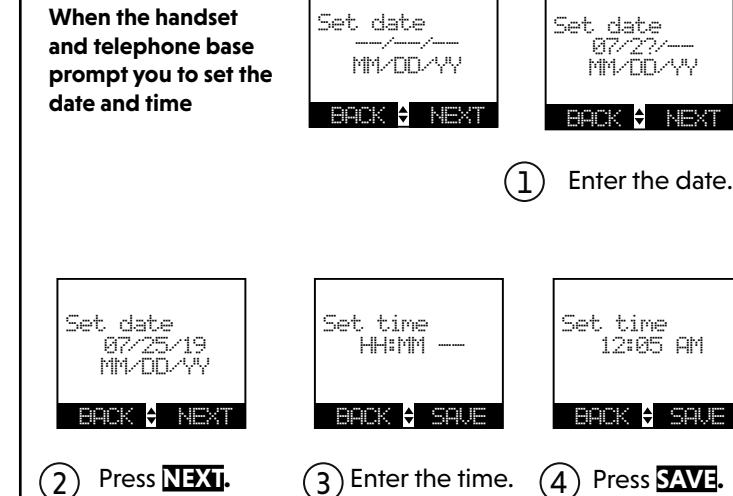


Voice guide for Smart call blocker / Answering system

After setting the date and time, the handset and telephone base will prompt if you want to set Smart call blocker and the answering system. For more details, see **Use voice guide to set Smart call blocker** in the **Introducing Smart call blocker** leaflet and **Use voice guide to set Answering system** in the online help topics.

 When the handset and telephone base prompt you to set up the Smart call blocker via voice guide

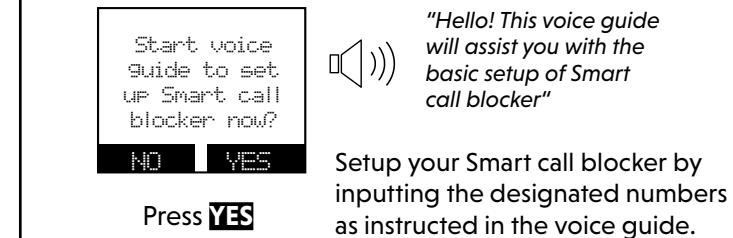

 When the handset and telephone base prompt you to set up the answering system via voice guide

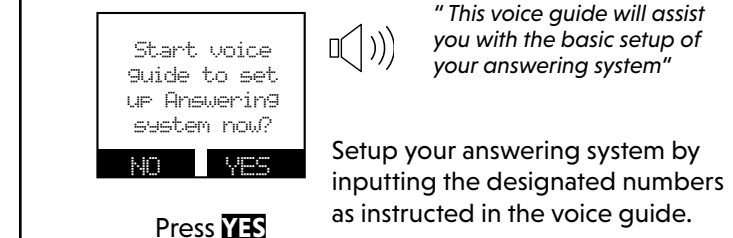


*Includes licenced Gattel™ technology. Gattel™ is a trademark of Truecall Group Limited.


BLUETOOTH

To use a Bluetooth enabled cellular phone with your telephone, you must first pair and connect your Bluetooth cellular phone with the telephone base. Before you begin, make sure that you have cellular coverage and your Bluetooth enabled cell phone is not connected to any other Bluetooth device.

 Add a Bluetooth cell phone

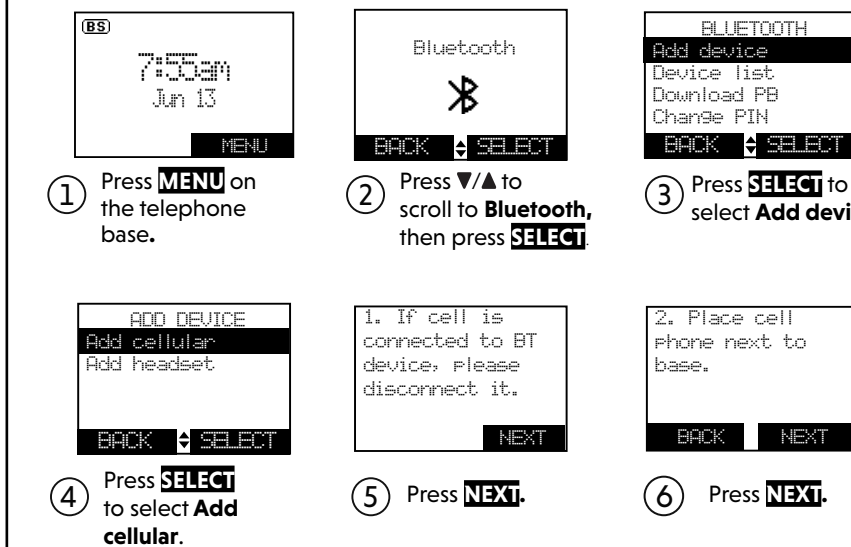


Add a Bluetooth headset

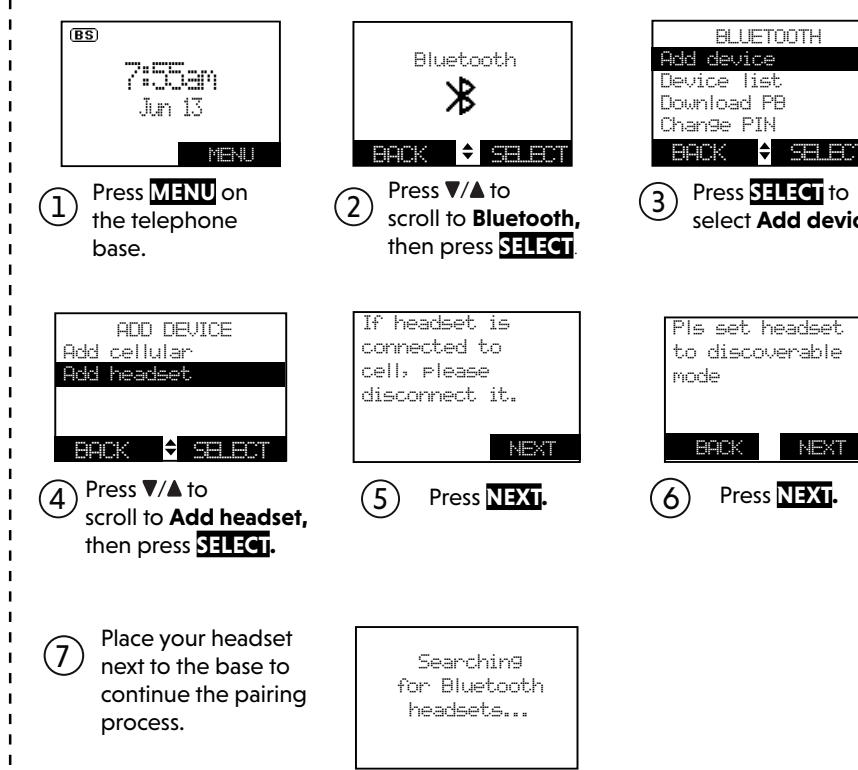 


Download a cell phone directory using the telephone base

 Before downloading a directory, make sure the cell phone is paired, active, and connected to your IS8151.

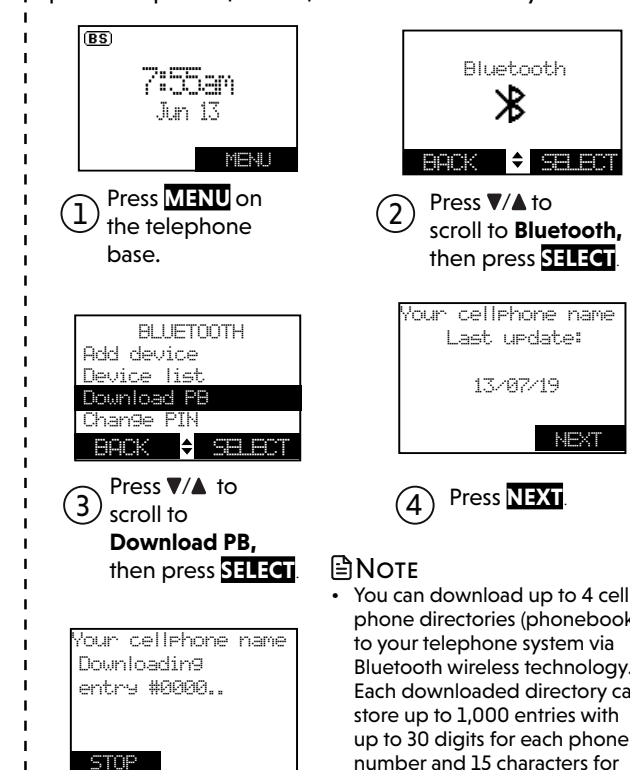

Activate remote voice control

 Make sure your cell phone is paired and connected to your telephone system via Bluetooth.

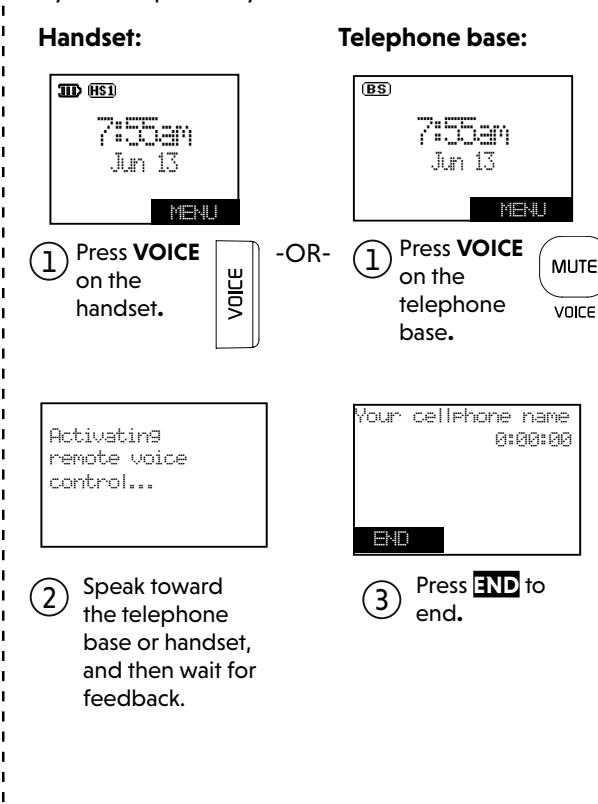



PHONEBOOK

Phonebook

The phonebook can store up to 4200 entries, including downloaded cellphone phonebooks, which are shared by all handsets and the telephone base. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a phonebook entry



1 Enter the phone number.



2 Press **SAVE**.

3 Press **NEXT**.

Delete a phonebook entry



1 Press **DELETE**.

2 Press **YES**.

3 Press **NEXT**.

4 Press **DELETE**.

5 Press **YES**.

6 Press **NEXT**.

7 Press **DELETE**.

8 Press **YES**.

9 Press **NEXT**.

10 Press **DELETE**.

11 Press **YES**.

12 Press **NEXT**.

13 Press **DELETE**.

14 Press **YES**.

15 Press **NEXT**.

16 Press **DELETE**.

17 Press **YES**.

18 Press **NEXT**.

19 Press **DELETE**.

20 Press **YES**.

21 Press **NEXT**.

22 Press **DELETE**.

23 Press **YES**.

24 Press **NEXT**.

25 Press **DELETE**.

26 Press **YES**.

27 Press **NEXT**.

28 Press **DELETE**.

29 Press **YES**.

30 Press **NEXT**.

31 Press **DELETE**.

32 Press **YES**.

33 Press **NEXT**.

34 Press **DELETE**.

35 Press **YES**.

36 Press **NEXT**.

37 Press **DELETE**.

38 Press **YES**.

39 Press **NEXT**.

40 Press **DELETE**.

41 Press **YES**.

42 Press **NEXT**.

43 Press **DELETE**.

44 Press **YES**.

45 Press **NEXT**.

46 Press **DELETE**.

47 Press **YES**.

48 Press **NEXT**.

49 Press **DELETE**.

50 Press **YES**.

51 Press **NEXT**.

52 Press **DELETE**.

53 Press **YES**.

54 Press **NEXT**.

55 Press **DELETE**.

56 Press **YES**.

57 Press **NEXT**.

58 Press **DELETE**.

59 Press **YES**.

60 Press **NEXT**.

61 Press **DELETE**.

62 Press **YES**.

63 Press **NEXT**.

64 Press **DELETE**.

65 Press **YES**.

66 Press **NEXT**.

67 Press **DELETE**.

68 Press **YES**.

69 Press **NEXT**.

70 Press **DELETE**.

71 Press **YES**.

72 Press **NEXT**.

73 Press **DELETE**.

74 Press **YES**.

75 Press **NEXT**.

76 Press **DELETE**.

77 Press **YES**.

78 Press **NEXT**.

79 Press **DELETE**.

80 Press **YES**.

81 Press **NEXT**.

82 Press **DELETE**.

83 Press **YES**.

84 Press **NEXT**.

85 Press **DELETE**.

86 Press **YES**.

87 Press **NEXT**.

88 Press **DELETE**.

89 Press **YES**.

90 Press **NEXT**.

91 Press **DELETE**.

92 Press **YES**.

93 Press **NEXT**.

94 Press **DELETE**.

95 Press **YES**.

96 Press **NEXT**.

97 Press **DELETE**.

98 Press **YES**.

99 Press **NEXT**.

100 Press **DELETE**.

101 Press **YES**.

102 Press **NEXT**.

103 Press **DELETE**.

104 Press **YES**.

105 Press **NEXT**.

106 Press **DELETE**.

107 Press **YES**.

108 Press **NEXT**.

109 Press **DELETE**.

110 Press **YES**.

111 Press **NEXT**.

112 Press **DELETE**.

113 Press **YES**.

114 Press **NEXT**.

115 Press **DELETE**.

116 Press **YES**.

117 Press **NEXT**.

118 Press **DELETE**.

119 Press **YES**.

120 Press **NEXT**.

121 Press **DELETE**.

122 Press **YES**.

123 Press **NEXT**.

124 Press **DELETE**.

125 Press **YES**.

126 Press **NEXT**.

127 Press **DELETE**.

128 Press **YES**.

129 Press **NEXT**.

130 Press **DELETE**.

131 Press **YES**.

132 Press **NEXT**.

133 Press **DELETE**.

134 Press **YES**.

135 Press **NEXT**.

136 Press **DELETE**.

137 Press **YES**.

138 Press **NEXT**.

139 Press **DELETE**.

140 Press **YES**.

141 Press **NEXT**.

142 Press **DELETE**.

143 Press **YES**.

144 Press **NEXT**.

145 Press **DELETE**.

146 Press **YES**.

147 Press **NEXT**.

148 Press **DELETE**.

149 Press **YES**.

150 Press **NEXT**.

151 Press **DELETE**.

152 Press **YES**.

153 Press **NEXT**.

154 Press **DELETE**.

155 Press **YES**.

156 Press **NEXT**.

157 Press **DELETE**.

158 Press **YES**.

159 Press **NEXT**.

160 Press **DELETE**.

161 Press **YES**.

162 Press **NEXT**.

163 Press **DELETE**.

164 Press **YES**.

165 Press **NEXT**.

166 Press **DELETE**.

167 Press **YES**.

168 Press **NEXT**.

169 Press **DELETE**.

170 Press **YES**.

171 Press **NEXT**.

172 Press **DELETE**.

173 Press **YES**.

174 Press **NEXT**.

175 Press **DELETE**.

176 Press **YES**.

177 Press **NEXT**.

178 Press **DELETE**.

179 Press **YES**.

180 Press **NEXT**.

181 Press **DELETE**.

182 Press **YES**.

183 Press **NEXT**.

184 Press **DELETE**.

185 Press **YES**.

186 Press **NEXT**.

187 Press **DELETE**.

188 Press **YES**.

189 Press **NEXT**.

190 Press **DELETE**.

191 Press **YES**.

192 Press **NEXT**.

193 Press **DELETE**.

194 Press **YES**.

195 Press **NEXT**.

196 Press **DELETE**.

197 Press **YES**.

198 Press **NEXT**.

199 Press **DELETE**.

200 Press **YES**.

201 Press **NEXT**.

202 Press **DELETE**.

203 Press **YES**.

204 Press **NEXT**.

205 Press **DELETE**.

206 Press **YES**.

207 Press **NEXT**.

208 Press **DELETE**.

209 Press **YES**.

210 Press **NEXT**.

211 Press **DELETE**.

212 Press **YES**.

213 Press **NEXT**.

214 Press **DELETE**.

215 Press **YES**.

216 Press **NEXT**.

217 Press **DELETE**.

218 Press **YES**.

219 Press **NEXT**.

220 Press **DELETE**.

221 Press **YES**.

222 Press **NEXT**.

223 Press **DELETE**.

224 Press **YES**.

225 Press **NEXT**.

226 Press **DELETE**.

227 Press **YES**.

228 Press **NEXT**.

229 Press **DELETE**.

230 Press **YES**.

231 Press **NEXT**.

232 Press **DELETE**.

233 Press **YES**.

234 Press **NEXT**.

235 Press **DELETE**.

236 Press **YES**.

237 Press **NEXT**.

238 Press **DELETE**.

239 Press **YES**.

240 Press **NEXT**.

241 Press **DELETE**.

242 Press **YES**.

243 Press **NEXT**.

244 Press **DELETE**.

245 Press **YES**.

246 Press **NEXT**.

247 Press **DELETE**.

248 Press **YES**.

249 Press **NEXT**.

250 Press **DELETE**.

251 Press **YES**.

252 Press **NEXT**.

253 Press **DELETE**.

254 Press **YES**.

255 Press **NEXT**.

256 Press **DELETE**.

257 Press **YES**.

258 Press **NEXT**.

259 Press **DELETE**.

260 Press **YES**.

261 Press **NEXT**.

262 Press **DELETE**.

263 Press **YES**.

264 Press **NEXT**.

265 Press **DELETE**.

266 Press **YES**.

267 Press **NEXT**.

268 Press **DELETE**.

269 Press **YES**.

270 Press **NEXT**.

271 Press **DELETE**.

272 Press **YES**.