phones.vtechcanada.com (CA)

and latest VTech product news

for latest VTech product news



support information







Abridged user's manual


LS6331 WHAT'S IN THE BOX

LS6331-2


LS6331-3

LS6331-4

Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service

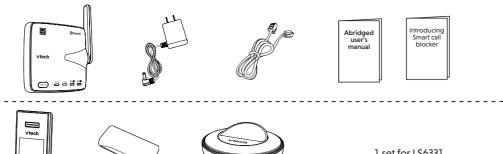

1 set for LS6331 2 sets for LS6331-2 3 sets for LS6331-3

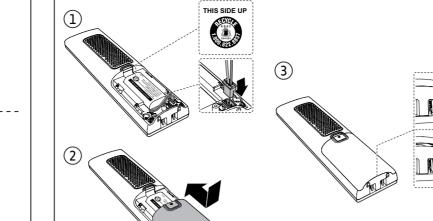


INSTALL AND CONNECT

Install the battery

8 CALL BLOCK

9 MUTE/DELETE

10 🕥

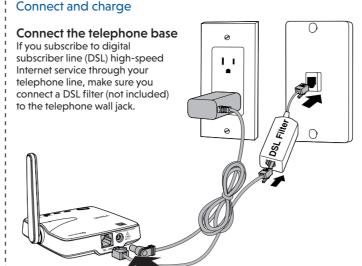

3 POWER light

power supply


pairing mode

7 Telephone line jack


6 Power jack

⁵ **1**(Slot 1) / **2**(Slot 2)

charge the battery

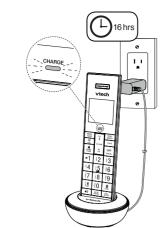

Connect the charger and

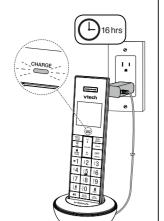



MOUNT (OPTIONAL)


Use a pencil to mark two holes on the wall in parallel. Drill two holes in the wall.

If you drill the holes into a stud, go to the next step. · If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall

anchors are flush with the wall. Insert the screws into the holes and tighten the

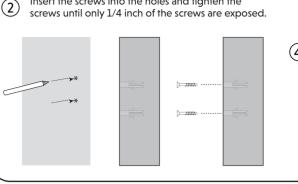

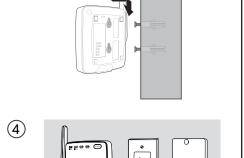

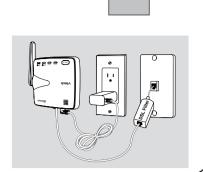

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following Read and understand all instructions

- . Follow all warnings and instructions marked on the
- Use only with UL listed Bluetooth devices
- Unplug this product from the wall outlet before cleaning Do not use liquid or aerosol cleaners. Use a damp cloth
- CAUTION: Do not install the telephone base at a height above 2 meters.
- o. Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces. 8. Avoid placing the telephone system in places with
- extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes. 9. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation.
- o protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided 10. This product should be operated only from the type of
- power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power compan 1. Do not allow anything to rest on the power cord. Do not
- install this product where the cord may be walked on. Never push objects of any kind into this product through the slots in the telephone base or handset because they
- may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product. 13. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect
- eassembling can cause electric shock when the produc is subsequently used. 14. Do not overload wall outlets and extension cords.
- 15. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the
- · When the power supply cord or plug is damaged or
- If liquid has been spilled onto the product.
- If the product has been exposed to rain or water. If the product does not operate normally by following the operating instructions. Adjust only those controls
- in damage and often requires extensive work by an authorized technician to restore the product to normal • If the product has been dropped and the telephone

that are covered by the operation instructions.

Improper adjustment of other controls may result

base and/or handset has been damaged

- If the product exhibits a distinct change in performance. 16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock rom lightning.
- 17. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate
- a leak of natural gas; etc. 18. Only put the handset of your telephone next to your ear
- when it is in normal talk mode. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a
- 20. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily
- patteries in a fire. They may explode. Disposed of used batteries according to the instruction.
- Do not use the battery in following conditions
- Replacement of a battery with an incorrect type that
- » Leaving a battery in an extremely high temperature surrounding environment that can result in an
- that can result in an explosion or the leakage of ammable liquid or gas. 22. Use only the adapter included with this product, Incorrect
- adapter polarity or voltage can seriously damage the 23. The applied nameplate is located at the bottom or near

SAVE THESE INSTRUCTIONS

Use only the battery provided or equivalent. To order a replacement, visit our website at

www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to <u>phones.vtechcanada.com</u> or call Do not dispose of the battery in a fire. Check with

local waste management codes for special disposa

instructions.

- entilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; ndustrial gases (cleaning solvents; gasoline vapors; etc.);
- ceiling, under-the-table or cabinet outlet.
- CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batterie BT162342/BT262342) for the handset. Do not dispose of
- » High or low extreme temperature during use, storage or transportation
- can defeat a safeguard » Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that
- explosion or the leakage of flammable liquid or gas » A battery subjected to extremely low air pressure
 - If interference is experienced, moving the c telephone farther away from the TV or VCR often
 - reduces or eliminates the interference. Rechargeable batteries: Exercise care in handling patteries in order not to create a short circuit with conducting material such as rings, bracelets and keys.
 - The battery or conductor may overheat and cause harm Observe proper polarity between the battery and the battery charger Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type,

if burned or punctured, they could release caustic

This application helps you integrate your Android

For more information and application download,

material which could cause injury.

phones with your LS6331

VTech Connect to Cell™ application

scan the QR code on the right, or go to

Do not open or mutilate the battery. Released to the eyes or skin. The electrolyte may be toxic if Exercise care in handling batteries in order not to create

- a short circuit with conductive materials. Charge the battery provided with this product only
- in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers Cardiac pacemakers (applies only to digital cordless

Wireless Technology Research, LLC (WTR), an independen research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians

Pacemaker patient

- Should keep wireless telephones at least six inches from
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON. Should use the wireless telephone at the ear opposite
- WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.
- Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephon pase and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone

ABOUT CORDLESS TELEPHONES

- conversations as being as private as those on corded Electrical power: The telephone base of this cordless elephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched
- off or if the electrical power is interrupted. Potential TV interference: Some cordless telephones operate at frequencies that may cause interference televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR.

OVERVIEW

Handset **vtech**

4 sets for LS6331-4

- 1 LCD display
- 2 CHARGE light
- MENU/SELECT Display the menu
- Select an item or save an entry or setting while in the menu.

- of one of the connected devices when the system is in idle. If there is no paired device then the handset will prompt Pair cell first to remind you for remote voice control activation.
- 5 OFF/CANCEL
- without making changes · Delete digits while predialing.
- Silence the handset ringer temporarily while the phone is ringing.
- dicator while the handset is not in use. 6 **- OPER 0**

• Enter space character during text editing.

cell phone.

- QUIET #
- When reviewing a caller ID log entry, press repeatedly to view other dialing options.

When a device (1: or 2:) is displayed on the handset screen, press **DELETE** will remove the device.

Auto connection

When an active device moves within Bluetooth range of the telephone base, or is turned on within range, the telephone base tries to connect to the

- Turning off the Bluetooth device.
- telephone base. Connect a paired device
- If you need to connect your paired cell phone to the telephone base manually 1. Press § 1 or § 2 on the telephone base when it
- is not in use, and its light flashes. When the cell phone is connected to the telephone base, the corresponding status icon

Handset display

16 ◀测

Make or answer a home call or cell call

· Turn on or off the handset speakerphone.

HANDET 1

charged.

l0:30_{PM} **೩** 10∕16

The handset battery is low and

The handset battery is charging.

New voicemail received from your

The entry you are reviewing is new

Displays when Home line is in use

Bluetooth device is paired and activ

Bluetooth device / Cell line is in use

onsumption when the handset is

within range of the telephone base

The ECO mode activates

On when the handset is in use, or when the

another telephone sharing the same line is in

Flashes slowly when the telephone base is

telephone base is registering a handset.

Flashes when there is an incoming call, or

automatically to reduce powe

The handset battery is fully

Handset ringer is off.

in the caller ID log.

using the speakerphone

· Show phonebook entries. CID

· Delete digits while predialing

or announcement playback.

Delete the playing message or the

Block the incoming call when the

· When on a call, press to block the call

• Mute the microphone during a call.

Mute the ringer temporarily when the

Show the Smart call blocker menu when idle.

· Delete an individual entry while reviewing

the caller ID log, the phonebook or the

recorded announcement during message

telephone is ringing

handset is ringing.

redial memory.

· Review the caller ID log. **▲**VOLUME**▼**

- · Move the cursor to the left or right while entering names or numbers
- Increase or decrease the listening volume when on a call, or increase or decrease the message playback volume.
- 11 REDIAL/PAUSE Review the redial list.
- Insert a dialing pause while dialing or entering numbers into the phonebook 12 (†) CELL
- Make or answer a cell call.
- · Answer an incoming cell call when you hear a call waiting alert during a cell call. Call back the caller if the caller's number is available while reviewing caller ID log.

13 A HOME/FLASH

- · Make or answer a home call. Answer an incoming home call when you
- hear a call waiting alert Call back the caller if the caller's number is vailable while reviewing caller ID log.

 While reviewing a caller ID log entry, press epeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the phonebook. Press and hold to set or dial your voicemail

- 15 TONE X / a►A Switch to tone dialing temporarily during a
- call if you have pulse service. Change the next letter to upper or lower

case while entering names.

A connected device could also be disconnected by:

Turning off the Bluetooth feature of the device. • The Bluetooth device is not within range of the

Telephone base

Page all system handsets.

1 FIND HS

2 IN USE light

telephone system, you can activate the voicecontrolled application (voice app) of the cell phone. such as Siri®, Google Now™ or S Voice®, via your The remote voice control feature works with:

- above) above) supported) Before using the remote voice control feature.
- No Bluetooth applications are running in the When the handset plays the confirmation tone as forwarded by the cell phone's voice app. background of your cell phone. start speaking toward the handset, and then
- passcode for activating the voice app. Make sure you have turned on or logged in to the applications on your cell phone that you will be sending your voice commands, such as GPS,
- email and social networking accounts. · Your cell phone's data or Wi-Fi signal is in full

On when the telephone base is connected to

• Press and hold to pair a new Bluetooth device

· Press to connect the paired Bluetooth device.

· Light off when no Bluetooth device is paired

or when paired device is not connected.

Light on when the telephone base is paired

Light flashes when the telephone base is in

and connected with a Bluetooth device.

or replace a Bluetooth device.

SETUP

After you install your telephone or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time, and to configure the Smart call blocker through voice guide.

Date and time

Follow the steps below to set the date and time. For example, if the date is 25 April, 2024, and the time is 12:05 PM.

ime: 12:05 F

Date: MM/00//



2 Press **SELECT.**



ime: HH:MM

(3) Enter the time.

Enalish or French:

handset is not in use

le francais.

3. Press **SELECT** again to choose **LCD language**

4. Press ▼ or ▲ to choose English, Français or

Español, and then press **SELECT** twice to save.

NOTE: If you accidentally set the LCD

language to Spanish or French, press

the handset LCD language back to

Change Smart call blocker language

You can set the Smart call blocker voice language to

setting (For Canada version only)

1. Press **AHOME/FLASH** or **N** when the

2. Enter **X364**# to set the voice language to

3. The handset will then return to idle.

· When the voice language is successfully set

the handset prompts "Voice language is set

to English." or "Le langage vocal est réglé sur

English while the handset is not in use

MENU and then enter ¥ 364# to change

If you have skipped the prompt, you can set up again by pressing **MENU**. Scroll to select **Set date/time**, and then press **SELECT**. Then, follow the steps above.

After you have set or skipped setting the date and time, the handset will prompt if you want to set Smart call blocker. For more details, see Use voice guide to set Smart call blocker in the Complete user's manual.

- quide setup The handset prompts, "Hello! This voice guide will assist you with the basic setup of Smart
- 3. Input the designated option numbers as instructed in the voice guide.
- Change LCD language setting

Press MENU when the handset is not in use.

English; or enter **X373**# to set it to French.

2. Press ▼ or ▲ to scroll to **Settings** and then

Please check the cell phone user's manual and the voice app's help topics to find out what commands you can use and any

carriers may customize the phone's contact your cell phone's manufacturer "Google Product Forums" on the Interne and check the corresponding help topics

or above devices. You can pair and connect up to two

Bluetooth cell phones

phone with the telephone base. Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet). When you pair a Bluetooth cell phone to the telephone

If you have trouble pairing your Bluetooth cell phone to the telephone base, try turning off the Bluetooth feature of the

For more details about the Bluetooth

Pair and connect your Bluetooth enabled cell

- 1. Choose a slot to pair the cell phone. Press and hold 3 1 or 3 2 on the telephone base for about 4 seconds until the 3 1 or 3 2 light flashes.
- from the cell devices list.

your cell phone to continue the pairing process. All cell phones that are connected to the telephone base are disconnected temporarily

connected, the corresponding status icon (8) or 🚯 2) displays on the handset. The correspo device light on the telephone base (\$\mathbb{1}\) or \$\mathbb{3}\) 2)

Before you begin, make sure that you have cellular coverage and your Bluetooth enabled cell phone is not

cell phone user's manual to learn how To use a Bluetooth enabled cell phone with your telephone system, you must first pair and connect your Bluetooth cell

nearby devices that your cell phone has previously paired

feature, read the online Complete user's

slot, the existing cell phone will be erased Turn on the Bluetooth feature of your cell phone

until the pairing process is complete.

During the remote voice control activation. both a dedicated voice and and Good

Steps 1-3 mentioned above. If you receive a landline or cell line ncoming call when you have activated remote voice control on a connected cell phone, the remote voice control operation will be ended.

The feature may be ended automatically by your cell phone. For example, a cell call s been established via the remote voice

If you need to press dialing keys (0-9, ¥, #) during a cell call, please make the call using the cell lines of your telephone system instead of using the voice app via the remote voice control feature.

S Voice® is a registered mark of Samsung Electronics Co., Ltd. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.



Viech product news.

VTech product news.

F26331-X_ACIB_US-CAN_V1_240408 4ll rights reserved. U4/24.

© 2024 VTech Technologies Canada Ltd.

Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings

product for enhanced warranty support and latest

Download contacts from your Bluetooth cell The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by

3. Press ▼ or ▲ to scroll to **Download PB**, then press **SELECT**. 4. Scroll to select the desired cell phone, and then

For certain cell phones, you may need to

press **SELECT**.

the phonebook download.

www.vtechphones.com/app_connect_to_cell.

1. Press **MENU** when the handset is not in use. Press ▼ or ▲ to scroll to Bluetooth, then press

1. Press $\boldsymbol{\mathsf{MENU}}$ when the handset is not in use.

SELECT. 3. Press SELECT again to choose Device list.

memory, see the user's manual of your

from your cell phone memory. For more

information on how to transfer contacts

from your SIM card to your cell phone

The telephone system will remove

therefore, the number of entries

downloaded from your cell phone

of entries stored in your cell phone.

any duplicate entries, and any entries

that contain unrecognizable symbols:

phonebook may be less than the number

Review the device list Up to two devices can be paired to the telephone base. All paired devices are shown on the device list. To use a paired device, it must be connected and in an active slot (1: or 2:) on the device list. Only one active device can be on a call at a time.

2. Press **▼** or **▲** to scroll to **Bluetooth**, then press

(1) or (3) 2) displays on the handset screen. The corresponding device light (§ 1 or § 2) turns on.

If you have connected a cell phone to your **LS6331**

REMOTE VOICE CONTROL

Voice-controlled | Siri Google S Voice application Android Android Operation iOS

make sure you checked the following: Your cell phone is paired and connected to you telephone system via Bluetooth.

press OFF/CANCEL on the handset. You can

feedback, if necessary

through the handset earpiece. 4. To end the current remote voice control session,

restart by following Steps 1-3 mentioned above.





Voice guide for Smart call blocker

When the handset prompts you to set up the Smart call blocker via voice guide: 1. Press **MENU** on the handset to start voice

call blocker'

To skip the voice guide, press OFF/CANCEL.

You can select English, French, or Spanish to be used in all screen displays

NOTES: strength and your cell phone can connect to the Once you have activated the remote voice Try to activate the voice app on your cell phone control feature, you are using your cell

press **SELECT**.

limitations of the voice app. Some cell phone manufacturers or network operating system and implement their ow voice app. If you want to use Google Now you need to manually set it as your default refer to your cell phone user's manual, or

Now, it may prompt you to select which voice app to use, and whether use it for iust once or always. Select the desired options. If you do not respond to your cell phone's prompt in time, the handse screen will return to idle, and the (9) icon will disappear. You can restart by following

control feature and the call has just ended.



· If there is already a cell phone paired to the

When a device is successfully paired and

© 2024 VTech Communications, Inc. | Specifications are subject to change without notice.

Oo to phones.vfechcanada.com (Canada) for the latest

press a key on your cell phone to confirm

VOICE · Activate the voice-controlled application

· Hang up a call Return to the previous menu or idle mode

Press and hold to erase the missed call

Press and hold to set and turn on the QUIET mode, or turn it off.

Certain cell phones do not support SIM 가는 TIP: card download. If this is the case, transfer the contacts from your SIM card to your cell phone memory first. Then download

System (Versions | (8 or (4 or

Place your cell phone next to the telephone Do not lock your cell phone's screen or set

• If you have connected one cell phone to the telephone, the handset shows the device name of the connected cell phone directly. · If you have connected two cell phones to the

To activate remote voice control on handset:

telephone, the handset shows Select a device,

followed by the device name list of the

connected cell phones. Scroll to choose the

desired cell phone, and then press **SELECT**.

to ensure it is in place.

 
1. Press **VOICE** on the handset.

control icon (9). · If the activation fails, the handset displays Not available. When the screen returns to idle, try

. The handset then shows the remote voice

 You can press ■)) on the handset to turn off the speakerphone and listen to the feedback

wait for feedback. Make reply to the voice app's



Due to the settings of certain cell phones and voice apps, your cell phone may not support the remote voice control feature Contact your cell phone's manufacturer o network carrier, or check the voice app's help topics if you encounter any problems



connected to any other Bluetooth device Make sure you turn on the Bluetooth feature of your cell phone. Refer to your

base, place your Bluetooth cell phone closer to the telephone base to maintain sufficient signal strength.

and search for or add new devices. Once your cell phone finds your VTech phone (VTech DECT 6.0), press the appropriate key on

Siri® is a registered trademark of Apple Inc Google NowTM is a trademark of Google Inc.

Oo to www.vtechphones.com (US) to register your

Use the handset menu

- 1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ until the screen displays the
- desired feature menu 3. Press **SELECT**.
- To return to the previous menu, press OFF/CANCEL
- To exit completely, <u>press and hold</u> OFF/CANCEL.
- Make a home call
- Press
 [↑]HOME/FLASH or
 [↑]), and then dial the telephone number

Enter the telephone number on the handset

- and then press **↑HOME/FLASH** or **♦**) to dial. Make a cell call
- 1. Press (CELL on the handset. The handset displays Select a device.
- If you have only one cell phone connected to the telephone base, press **SELECT** to select

the only device.

- If you have two cell phones connected to the telephone, press **▼** or **△** to select a cell
- phone and then press **SELECT**. 2. Enter the telephone number, then press (9) CELL

You can turn on the quiet mode for a period of time.

During this period, all tones (except paging tone) and

1. Press and hold QUIET # on the handset when it

2. Use the dialing keys (0-9) to enter the duration.

To turn off the quiet mode, press and hold

telephone service providers. It may be included

with your telephone service, or may be optional.

If you subscribe to a voicemail service offered by your

telephone service provider, the handset displays

and New voicemail when you received a voicemail.

To retrieve, you typically dial an access number

provided by your telephone service provider, and

then enter a security code. Contact your telephone

service provider for instructions on how to configure

voicemail messages, the indicators on the

You can save the voicemail number to \mathbb{Z}^1 on each

handset for easy access. When you want to retrieve

telephone service provider for more information

and assistance about your voicemail service.

4. Use the dialing keys to enter the voicemail

Clear the new voicemail indicators

Press MENU when the handset is not in use.

voicemail messages, <u>press and hold</u> 1. Contact your

2. Press ∇ or \triangle to scroll to **Settings** and then press

3. Scroll to choose Voicemail #, then press SELECT.

number (up to 30 digits), then press **SELECT**.

If you have retrieved your voicemail while away from

indicators, use this feature to clear the indicators.

NOTE: This feature clears the indicators only, it does not delete vous valence:

1. Press **MENU** when the phone is not in use.

SELECT.

home, and the handset still displays the new voicemail

it does not delete your voicemail messages.

the voicemail settings and listen to messages.

NOTE: After you have listened to all new voicemail messages their "

handset turn off automatically.

Set speed dial voicemail number

QUIET # on the handset when it is not in use.

and then press **SELECT** to save.

RETRIEVE VOICEMAIL FROM

Voicemail is a feature available from most

TELEPHONE SERVICE

Fees may apply.

Retrieve voicemail

- OR -Enter the telephone number
- 2. Press (p) CELL to dial.
- If you have only one cell phone connected to the telephone base, it is automatically
- selected to make cell calls.

call screening are muted.

Quiet mode

- If you have two cell phones connected to the telephone base, the handset displays Select a device. Press ▼ or ▲ to select a cell phone and then press **SELECT**

Answer a home/cell call

dialing keys. End a home/cell call

Press
 [↑]HOME/FLASH, (•) CELL, ■) or any

• Press **OFF/CANCEL** or put the handset back in the charger.

between speakerphone and handset earpiece.

Speakerphone

During a call, press ■ on the handset to switch

During a call, press VOLUME ▲ and

VOLUME ▼ to adjust the listening volume.

The mute function allows you to hear the other party but the other party cannot hear you 1. During a call, press MUTE/DELETE. The handset

- displays Muted 2. Press MUTE/DELETE again to resume the
- conversation. The handset displays Microphone on briefly

Join a call in progress You can use up to two handsets at a time on an

outside call. When a handset is already on a call, press

- ↑ HOME/FLASH or
 ↑ on another handset to join the call. To exit the call, press **OFF/CANCEL** on the
- handset or place it in the telephone base or charger. The call continues until all handsets hang up

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are Call waiting on the home line:

- Press HOME/FLASH to put the current call on hold and take the new call.
- Press HOME/FLASH at any time to switch back and forth between calls.

Call waiting on the cell line: • Press (CELL to put the current call on hold and

Taking care of your telephone

This power conserving technology reduces power

mption for optimal battery performance. The

Press (P) CELL at any time to switch back and forth between calls.

ECO mode activates automatically whenever the ou d'électrocution, suivez toujours ces mesures préventives de handset is synchronized with the telephone base. base lorsque vous utilisez votre téléphone Lisez et comprenez bien toutes les instructions GENERAL PRODUCT CARE

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care. **Avoid rough treatment**

ECO MODE

packing materials to protect your telephone if you ever need to ship it.

Place the handset down gently. Save the original

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower Electrical storms

Flectrical storms can sometimes cause power surges

nful to electronic equipment. For your own safety, take caution when using electrical appliances Cleaning your telephone

Your telephone has a durable plastic casing that

should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind

NEED HELP? For operations and guides to help you using your

ports, go and check the online help topics and online FAQs. Use your smartphone or mobile device to access our

online help. Go to https://help.vtechphones.com/LS6331 (US);

OR https://phones.vtechcanada.com/en/support/ <u>general/manuals?model=LS6331</u> (Canada) • Scan the QR code on the right.

Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help. If the QR code is not clearly

displayed, adjust your camera's focus by moving your device closer or

further away until it is clear. You can also call our Customer Support at 1 (800) 595-9511 [in US] or

1 (800) 267-7377 [in Canada] for help. Recycle this product when you are done

with it

2. Press ▼ or ▲ to scroll to **Settings** and then press 3. Scroll to **CIr voicemail** and then press **SELECT**

> right or visit www.vtechphones.com/recycle (For the US only)

Scan the QR code on the

Delete a redial list entry Search for or review the redial list entries (see Review and dial a redial list entry

Answer an incoming cell call while on a home call If you are on a home call and you receive an incoming cell call, you hear a beep and (9) displays on the handset. All other handsets ring

• To answer the incoming cell call. Press (9) CELL.

To end the cell call, press OFF/CANCEL. The

To resume the home call on hold, press

To answer the incoming home call, Press

Use this feature to find the system handset.

home line is still on hold

handset. All other handsets ring

AHOME/FLASH.

placed on hold.

Find handset

To start paging

** Paging **

Press FIND HS again.

To end paging:

REDIAL LIST

cell line is still on hold

The home call is automatically placed on hold.

Answer an incoming home call while on a cell call

If you are on a cell call and you receive an incoming

home call, you hear a beep and 希 displays on the

****HOME/FLASH**. The cell call is automatically

To end the home call, press OFF/CANCEL. The

To resume the cell call on hold, press (1) CELL

• Press **FIND HS** on the telephone base when not

• Press AHOME/FLASH, (P) CELL, OFF/CANCEL,

NOTE: Do not press and hold FIND HS

Each handset stores the last 10 telephone numbers

entry is deleted to make room for the new entry.

Press REDIAL when the handset is not in use.

2. Press ∇ , \triangle or **REDIAL** repeatedly until the

3. Press **↑HOME/FLASH** or **▼**® to dial with the

home line, or press (p) CELL to dial with the cell

dialed. When there are already 10 entries, the oldest

for more than 4 seconds. It may lead to

(a) or any dialing keys on the handset

andset deregistration.

Review and dial a redial list entry

desired entry displays

in use. All idle handsets ring and display

MUTE/DELETE.

INTERCOM Use the intercom features for conversations

2. When the desired redial entry displays, press

between two devices Press MENU when the handset is not in use.

 Press ▼ or ▲ to scroll to Intercom, then press The screen displays Intercom to:.

. Use the dialing keys to enter a device number To answer the intercom call, press

↑HOME/FLASH, (♠) CELL, or ♠) on the estination handset Both handsets shows Intercom

5. To end the intercom call, press OFF/CANCEL or place the handset back in the charge

Answer an incoming home call during an intercom call If you receive an incoming home call during an

ntercom call, there is an alert tone. Handsets flash and display the caller ID. If you receive an incoming cell call during an ntercom call, you will hear an alert tone. Handsets

flash (\P) and display the caller ID. To answer a home call, press HOME/FLASH. The intercom call ends automatically.

To end the intercom call without answering the outside call, press **OFF/CANCEL**. The telephone continues to ring

Call transfer using intercom

While on an outside call, you can use the intercom feature to transfer the call from one handset to Press MENU when on an outside call.

- Press ▼ or ▲ to scroll to Intercom, then press **SELECT**. The call is automatically put on hold.
- The screen displays Intercom to: 3. Use the dialing keys to enter a device number **(1-5**).
- To answer the intercom call, press **AHOME/FLASH**, (**•**) CELL, or **■**) on the destination handset. • The outside call is still on hold. Both handsets
- shows Intercom. 5. From this intercom call, you have the following
- options: You can let the destination handset join you on the outside call in a three-way

16. Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant

- Si le produit a été échappé et que le socle et/ou le Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux mbiné a été endom conducteurs. Si le produit affiche une nette diminution de sa
- un orage. Les éclairs peuvent être à l'origine d'une Stimulateurs cardiaques implantés dans l'organisme Les simulateurs cardiaques (s'applique uniquement aux N'utilisez pas le téléphone pour rapporter une fuite de éléphones numériques sans fil) gaz à proximité de la fuite. En certaines circo 'organisme 'Wireless Technology Research, LLC (WTR)', une irme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans l portatifs et les stimulateurs cardiaques implantés dans organisme. Appuyée par l'Administration des aliments et

ammèche pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combine associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de le socle, si le téléphone se trouve à proximité d'un endroi comportant des concentrations de gaz inflammables, à dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre s endroits où l'on utilise de l'oxygène médical sans rentilation adéquate; des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.); une fuite de gaz

18. Ne placez que le combiné de votre téléphone près de votre oreille lorsqu'en mode de conversation

19. Ces adaptateurs ont été concus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas concues pour maintenir l'adaptateur en place si celui-c est barnché dans une prise au plafond ou sous une table.

20. Pour le MATERIEL RACCORDE PAR PRISE DE COURANT, le socle de prise de courant doit etre installe a proximite du materiel et doit etre aisement accessible. MISE EN GARDE: Il peut y avoir un risque

d'explosion si vous utilisez le mauvais type de piles pour le éléphone. N'utilisez que les piles rechargeable inclus ou les piles de rechange (RT162342/RT262342). N'incinérez pa les piles. Celles-ci risqueraient d'exploser. Mettre au rebu les batteries usagées conformément aux instructions du fabricant. Débrancher les lignes téléphoniques avant le Évite d'utiliser la batterie dans les conditions suivantes:

 des températures extrêmes faibles ou élevées elles une batterie peut être soumise pendan l'utilisation, le stockage ou le transport. remplacement d'une batterie par un type incorrect

mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une maintien d'une batterie dans un environnement

à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz

22. N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tensior serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.

23. La plaque signalétique appliquée est située au bas ou à **CONSERVEZ CES INSTRUCTIONS**

Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus auprès des autorités locales N'ouvrez pas et ne mutilez pas la pile. L'électrolyte qui s'en

ou des blessures aux yeux ou à la peau. L'électrolyte est

Delete a phonebook entry

SELECT.

Edit a directory entry

press **SELECT**.

Dial a directory entry

saved in the caller ID log.

characters for the name.

Missed call indicator

SELECT.

CALLER ID

Review a phonebook entry).

Review a phonebook entry).

conversation. Press **HOME/FLASH** on the

destination handset is then connected to the

The destination handset can end the intercom

call by pressing OFF/CANCEL, or by placing

he handset back in the charger. The outside

call continues with the originating handset.

The phonebook can store up to 1,000 entries, which

are shared by all handsets. Each entry may consist of

1. Enter the number when the phone is not in use.

Press **MENU** when the phone is not in use, then

press ∇ or \triangle to choose **Phonebook** and press

SELECT. Press SELECT again to choose Add new

Copy a number from the redial list by pressing

repeatedly to select a number. Press **SELECT** to

Additional key presses show other characters of

Use the dialing keys to enter the number.

REDIAL and then press **▼**, **△** or **REDIAL**

Press **SELECT** to move on to enter the name.

Use the dialing keys to enter the name.

While entering names and numbers, you can:

Press MUTE/DELETE to backspace and erase a

Press ▼ or ▲ to move the cursor to the left or

Press and hold PAUSE to insert a dialing pause

Press TONE * to change the next letter to upper

phonebook, or use the dialing keys to start a

Rechargez la pile incluse avec cet appareil, selon les

instructions et limites spécifiées dans ce guide d'utilisation

drogues (FDA) des États-Unis, la firme WTR recommande aux

Ils doivent tenir le téléphone sans fil à une distance d'au

Ils ne doivent PAS placer le téléphone sans fil directement

sur le stimulateur cardiaque, tel que dans une poche de

Ils doivent utiliser le téléphone sans fil en l'appuya

sur l'oreille qui se trouve dans la direction opposée au

étude effectuée par l'organisme WRS n'a pas identifié de

risque pour les détenteurs de simulateurs cardiaques causé

Confidentialité: Les mêmes caractéristiques qui constituen

donc la possibilité que vos conversations téléphoniques il soient interceptées par des équipements de réception

adio se trouvant dans la portée du combiné sans fil. Pour

Alimentation électrique : Le socle de ce téléphone sans fil

cette raison, vous ne devez pas percevoir les communications téléphoniques sans fil comme étant aussi confidentielles que

électrique ne doit pas être contrôlée par un interrupteur mural.

es appels ne pourront pas être effectués du combiné sans fil

si le socle est débranché ou mis hors tension ou si le courant est

Possibilité d'interférences aux téléviseurs : Certains téléphones

onseillé d'éloigner le téléphone sans fil du téléviseur ou du nagnétoscope afin de réduire possiblement les interférences.

Piles rechargeables: Manipulez les piles avec soin afin de ne

pas les court-circuiter avec des baques, bracelets ou clés. Les

Respectez la polarité adéquate entre la pile et le chargeur.

Les bloc-piles rechargeables à l'hydrure métallique de nickel

les incinérez pas et ne les percez pas. Tel que les autres piles

des blessures corporelles si elles sont brûlées ou percées.

de ce type, elles pourraient dégager une matière toxique qui

iles ou le conducteur peut surchauffer et causer des blessures

ans fil fonctionnent sur des fréquences pouvant causer

es interférences aux téléviseurs et aux magnétoscopes.

Pour réduire ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil près ou sur un téléviseur

ou magnétoscope. S'il y a présence de parasites, il est

par les gens qui utilisent un téléphone sans fil à proximité de

es avantages pour les téléphones sans fil affichent également

des restrictions. Les appels téléphoniques sont transmis entr

e combiné sans fil et le socle par le biais d'ondes radio : il y a

Avis aux détenteurs de stimulateurs cardiaques

moins six pouces du stimulateur cardiaqu

chemise, lorsque celui-ci est en marche

stimulateur cardiaque.

À propos des téléphones sans fil

nc la possibilité que vos co

celles des téléphones à cordons

THE RBRC SEAL

Press 0 to add a space (for entering names only).

Press and hold MUTE/DELETE to erase the entire

You can transfer the call. Press OFF/CANCEL,

or place your handset back in the charger.

originating handset

outside call.

PHONEBOOK

Add a phonebook entry

copy the number

that particular key.

digit or characte

or lower case

name search.

Review a phonebook entry

Entries are sorted alphabetically.

Press when the phone is not in use.

. Press ∇ or \triangle to browse through the

Press **SELECT** to save

Press MENU, then go to Step 3.

to 15 characters.

Search for or review the directory entries (see

Review a phonebook entry). When the desired entry displays, press

MUTE/DELETE. When the handset displays **Delete entry?**, press

Search for or review the directory entries (see

2. When the desired entry displays, press **SELECT**

3. Use the dialing keys to edit the number, then

Search for or review the directory entries (see

AHOME/FLASH or **◄**) to dial with the home

line, or press (9) CELL to dial with the cell line.

When the desired entry appears, press

If you subscribe to caller ID service, information

second ring. If you answer a call before the caller

The caller ID log stores up to 50 entries. Each entry

has up to 24 digits for the phone number and 15

If the telephone number has more that 15 digits,

only the last 15 digits appear. If the name has more

Press ▼ or ▲ to browse through the caller ID log.

When there are calls that have not been reviewed

Each time you review a caller ID log entry marked

When you have reviewed all the missed calls, the

If you do not want to review the missed calls one

by one, press and hold OFF/CANCEL on the idle

handset to erase the missed call indicator. All the

rized VTech product service centers. Please call

and disposal bans/restrictions in your area. VTech's involve

in this program is part of its commitment to protecting our

1 (800) 8 BATTERY® for information on Ni-MH battery recycling

The RBRC Seal and 1 (800) 8 BATTERY® are registered trademark

missed call indicator no longer displays.

entries are then considered old.

NEW, the number of missed calls decreases by one

in the caller ID log, the handset displays XX Missed

than 15 characters, only the first 15 characters are

shown and saved in the caller ID log

1. Press CID when the phone is not in use

Review a caller ID log entry

information appears on the screen, it will not be

about each caller appears after the first or

4. Use the dialing keys to edit the name, then press

Dial a caller ID log entry

1. Search for or review the call ID log entries (see Review a caller ID log entry). 2. When the desired entry appears, press

★HOME/FLASH or **◄**) to dial with the home line, or press (ullet) CELL to dial with the cell line.

Save a caller ID log entry to the phonebook 1. Search for or review the call ID log entries (see

- Review a caller ID log entry). 2. When the desired caller ID log entry displays, press **SELECT**.
- 3. Press ▼ or ▲ to scroll to To Phonebook and then press **SELECT**.
- 4. Use the dialing keys to edit the number, if
- necessary. Then press **SELECT**. 5. Use the dialing keys to edit the name, if
- necessary. Then press **SELECT**

Delete the caller ID log entries 1. Search for or review the call ID log entries (see

- Review a caller ID log entry). When the desired caller ID log entry displays,
- press MUTE/DELETE.

To delete all caller ID log entries: 1. Press **MENU** when the phone is not in use.

- 2. Press ▼ or ▲ to scroll to Caller ID log and then press **SELECT**.
- 3. Scroll to **Delete all** and then press **SELECT** twice.

SMART CALL BLOCKER *§

If you have subscribed to caller ID service, then you can use the Smart call blocker feature to filter incoming home calls from unknown callers.

Turn Smart call blocker on or off Smart call blocker is set to on, and to allow all

incoming calls by default. To turn on or off Smart call blocker 1. Press **CALL BLOCK** when the phone is not in use.

Press **SELECT** to choose **SCB On/Off**. 3. Press lacktriangle or lacktriangle to choose lacktriangle or lacktriangle of lacktriangle to choose lacktriangle or lacktriangle or lacktriangle

SELECT.

Smart call blocker is on, once you install your telephone. It allows all incoming calls to get ough and ring by default. You can change the Smart call blocker settings to screen incoming home calls from numbers or names that are not yet saved in your phonebook, allow list, block list, or star name list. You can easily add incoming phone numbers to you allow list and block list. This allows you to build up your lists of allowed and blocked numbers, and Smart call blocker will know how to dea with these calls when they come in again.

calls will get through and ring. If you want to block a cell call, add the number to the Block Scenario 3

Quick setup using the "Set profile" option

The screening feature of Smart call blocker is


applicable to home calls only. All incoming cel

set up Smart call blocker, as described in the four scenarios below 1. Press CALL BLOCK when the phone is not in use.

You can perform the following steps to quickly

- 2. Press ▼ or ▲ to scroll to **Set profile** and then press **SELECT**
- 3. Scroll to one of the four options and then press **SELECT** to choose.
- Screen unknowi Screen robot
- Allow unknown (default setting)
- Block unknown

Choose the Smart call block configuration that best suits your needs

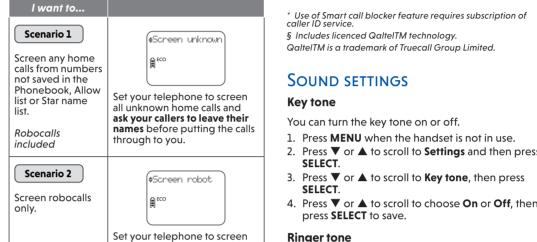

ask the callers to press the #

key before putting the calls

nrough to you.

When the phone successfully enters the CEC battery chargin

esting mode, all handsets display To register HS... and ...see

When the phone fails to enter this mode, repeat Step 1 through

1. Unplug the telephone base power adapter from the power

Press and hold FIND HS on the telephone base for about

outlet, and then plug it back in. Then the telephone base is

The handset shows **Registered** and you hear a beep when the registration process completes. This process takes about

The manufacturer of this VTech product, VTech Communication

c. ("VTech"), warrants to the holder of a valid proof of purchase

from material defects in materials and workmanship during the

During the limited warranty period, VTech's authorized service

epresentative will replace at VTech's option, without charge Materially Defective Product. If we choose to replace the

Product, we may replace it with a new or refurbished Product

products to you in working condition. VTech will retain defective

VTech's option, is your exclusive remedy. You should expect the

he limited warranty period for the product extends for ONE (1)

Refurbished*). This limited warranty also applies to replacemen

Refurbished products purchased from our online store carry a

shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire,

Product that has been damaged due to repair, alteration

Product whose warranty/quality stickers, Product serial

Product purchased, used, serviced, or shipped for repair

from outside the United States, or used for commercia

or institutional purposes (including but not limited to

number plates or electronic serial numbers have been

emoved, altered or rendered illegible; or

Products used for rental purposes); or

Products for a period of either (a) 90 days from the date the

on the original one-year limited warranty (90-day limited

varranty on products that are purchased as Refurbished*),

Product that has been subjected to misuse, accident.

parts, modules, or equipment, Replacement of the Product, at

of the same or similar design. VTech will return replacement

How long is the limited warranty period?

What is not covered by this limited warranty?

water or other liquid intrusion: or

90-day replacement warranty.

This limited warranty does not cover

imited warranty period ("Materially Defective Product")?

To deactivate the CEC battery charging testing mode:

manual alternately.

powered up as norma

What does this limited warranty cover?

Step 3 above.

2. Press ▼ or ▲ to scroll to **Ringers** and then press SELECT. 3. Press ∇ or \triangle to scroll to **Cell ringtone** and then press **SELECT**. Set your telephone to allow 4. Scroll to sample each ringer tone, then press all unknown home calls to ring **SELECT** to save. without screening them. (♦Block unknown You can adjust the handset ringer volume level for

Set your telephone to block al

inknown home calls.

To learn more about how each profile setting

can be used and how to add numbers to

the Block list and perform the necessary

Smart call blocker leaflet included in your

Use of Smart call blocker feature requires subscription of aller ID service.

Includes licenced QalteITM technology

Sound settings

press **SELECT** to save

incoming home and cell calls

Set ringer tone for home line:

then press **SELECT**.

How do you get warranty service?

SELECT.

SELECT.

SELECT

below); or

 
QalteITM is a trademark of Truecall Group Limited

Press MENU when the handset is not in use.

You can choose from different ringer tones for

Press ▼ or ▲ to scroll to **Settings** and then press

Allow unknown



SELECT to save

Set ringer tone for cell line:

1. Press **MENU** when the handset is not in use.

3. Press ∇ or \triangle to scroll to **Cell volume** and then press **SELECT**.

4. Scroll to choose a volume level. A sample of each ringer volume plays as you scroll through the choices.

5. Press **SELECT** to save.

NOTES:

If you turn off the volume, the handset will be silenced and displays

When the ringer volume is set to Off, the handset still rings when you press FIND HS at the telephone base.

silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

• Press MUTE/DELETE or OFF/CANCEL. The handset displays Ringer muted

Technical specifications

Crystal controlled PLL synthesizer Frequency control Transmit

ease visit our website at <u>www.vtechphones.com</u> or call (800) 595-9511 for instructions regarding where to return the frequency Product. In Canada, go to phones.vte 1 (800) 267-7377.

NOTE: Before calling for service, please review the user's nual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk

and telephone number.

of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of Product(s) to the service location. VTech will eturn replaced product under this limited warranty to yo ransportation, delivery or handling charges prepaid. VTech assumes no risk for damage or loss of the Product in transit.

To obtain warranty service in the United States of America.

What must you return with the Product to get warranty service? Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty;

Include "valid proof of purchase" (sales receipt) identifying purchase or receipt; and Provide your name, complete and correct mailing address

Other limitations his warranty is the complete and exclusive agreemen between you and VTech. It supersedes all other written or

o other warranties for this product. The warranty exclusively describes all of VTech's responsibilities regarding the produc There are no other expressed warranties. No one is authorized to make modifications to this warranty and you should not rely on any such modification. State Law Rights: This warranty gives you specific legal rights,

Limitations: Implied warranties, including those of fitness for a

at the product is fit for ordinary use) are limited to one year om date of purchase. Some states do not allow limita w long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the product, or

Please retain your original sales receipt as proof of

nearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

with the ENERGY STAR label indicating

Press **MENU** when the handset is not in use.

3. Press ▼ or ▲ to scroll to Home ringtone and

Handset: 1921.536-1928.448 MHz Telephone Base: 1921.536-1928.448

DECT channel: 5

Maximum power allowed by FCC effective range and IC. Actual operating range may vary according to environmental

Channels

Handset: 2.4V Ni-MH battery requirement

Phonebook: 1000 memory locations up to 30 digits and 15 characters Caller ID log: 50 memory locations

LIABILITY

Address: 9020 SW Washington Square Road - Ste 555 Tigard OR 97223, United States

other associated equipment, the cost of substitute equipment product. Some states do not allow the exclusion or limitation of cidental or consequential damages, so the above limitation or exclusion may not apply to you.



have reduced noise and interference when used with most T-coil equipped



it meets the latest energy efficiency auidelines.

FOR C-UL COMPLIANCE ONLY Afin de réduire les risques d'incendie, de blessures corpore

2. Observez toutes les instructions et mises en garde inscrites 3. N'utiliser qu'avec des dispositifs Bluetooth homologués

4. Débranchez ce téléphone de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol N'utilisez qu'un chiffon doux et légèrement humecté. **ATTENTION**: Ne pas installer le socle téléphonique à une

N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la

Ne déposez pas ce téléphone sur un chariot, support

ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé. Évitez d'installer le système téléphonique dans les endroits soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphone tre les sources d'humidité, la poussière, les vapeurs et les

en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas d'aération adéquate 10. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si

d'aération situées à l'arrière ou en dessous. Afin d'empêcher

la surchauffe, ces ouvertures ne doivent pas être obstrué

9. Le boîtier de l'appareil est doté de fentes et d'ouvertures

11. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne rra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire 12. N'insérez iamais d'obiets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points de tension dangereux ou court-circuiter des pièces, ce ui constituerait un risque d'incendie ou d'électrocution

vous ne connaissez pas le voltage de votre maison, consulter

N'échappez pas de liquides dans l'appareil. Afin de réduire les risques d'électrocution, ne démonte pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle vous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être igine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux 14. Ne surchargez pas les prises de courant et les rallonges.

15. Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants : Lorsque le cordon d'alimentation est endommagé ou

Si du liquide a été échappé dans l'appareil

que la pluie ou l'eau.

 Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans le les nstructions de fonctionnement. Les réglages incorrects des autres commandes pourraient prov

dommage qui pourrait exiger un travail exhausti

ement normal de l'appareil.

de la part d'un technicien autorisé afin de rétablir le

Si l'appareil a été exposé à une source d'humidité telle

N'utilisez que la pile incluse ou l'équivalent.

Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out

of service within the United States and Canada The program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or unicipal waste, which may be illegal in your area. Tech's participation makes it easy for you to drop off the spent pattery at local retailers participating in the RBRC program or at

The RBRC seal on the nickel-metal hydride

pattery indicates that VTech Communications

FCC, ACTA and IC regulations FCC Part 15 NOTE: This equipment has been tested and found to comply

serving natural resources.

with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These quirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency nergy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to corre the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. WARNING: Changes or modifications to this equipment no

expressly approved by the party responsible for compliant could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is

Increase the separation between the equipment and

subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be To ensure safety of users, the FCC/ISEDC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found omply with the FCC/ISEDC criteria. The handset may be safely held against the ear of the user. The telephone base sha

than the hands are maintained at a distance of approximately 20

CAN ICES-3 (B)/NMB-3(B). FCC Part 68 and ACTA This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other thing oduct identifier in the format US:AAAEQ##TXXXX. This dentifier must be provided to your telephone service provid

This Class B digital apparatus complies with Canadian

hone cord and modular plug is provided wi this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally instructions in the user's manual. The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters follo US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0)

Part 68 rules and technical requirements adopted by ACTA. A

This equipment must not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment do not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer. If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. placement to this telephone equipment can only be made

by the manufacturer or its authorized agents. For replace

rocedures, follow the instructions outlined under the Limited If this equipment is causing harm to the telephone network 3 Press QUIET # on the handset and it shows Registering. the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible u will be given the opportunity to correct the problem a the telephone service provider is required to inform you of LIMITED WARRANTY your right to file a complaint with the FCC. Your telephone ervice provider may make changes in its facilities, equipmer operation, or procedures that could affect the prope functioning of this product. The telephone service provider is

is hearing aid compatible. If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire medical) in these locations. If you do store or test emergency

required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it

Perform such activities in off-peak hours, such as early morning

This device contains licence-exempt transmitter(s)/receiver(s) t comply with Innovation, Science and Economic velopment Canada's licence-exempt RSS(s). Operation is subject to the following two condition (1) This device may not cause interference

Privacy of communications may not be ensured when using this The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were The Ringer Equivalence Number (REN) for this terminal be installed and used such that parts of the user's body other

or late evening.

Industry Canada

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications

functions, except battery charging, will be disabled. To activate the CEC battery charging testing mode:

batteries before proceeding. 2. While you press and hold FIND HS on the telephone base plug the telephone base power adapter back to the power

or modification by anyone other than an authorized This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended fo service representative of VTech; or Product to the extent that the problem experienced is California Energy Commission (CEC) compliance testing only. When aused by signal conditions, network reliability or cable or antenna systems; or Product to the extent that the problem is caused by use with non-VTech electrical accessories; or

or less. For more information, please contact your telephone

("Consumer" or "you") that the Product and all accessories provided by VTech in sales package ("Product") are free from naterial defects in material and workmanship, pursuant to ving terms and conditions, when installed and use normally and in accordance with operating instructions. This imited warranty extends only to the Consumer for Products nased and used in the United States of America and Remain on the line and briefly explain the reason for the call before hanging up. What will VTech Communications do if the Product is not free

(2) This device must accept any interference, including

equipment is 0.1. The REN indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five.

CALIFORNIA ENERGY COMMISSION **BATTERY CHARGING TESTING** INSTRUCTIONS The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable

> 1. Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged

3. After about 10 seconds, release FIND HS and immediately press it again within 2 seconds.

7. Product returned without valid proof of purchase (see 2

 
If you turn off Smart call blocker, all incoming calls will ring, including numbers saved in your

Allow all calls except the peop on the Block list (Default setting) Scenario 4

Phonebook, Allow

list or Star name

NOTE:





NOTE: If you turn off the ringer volume, you will not hear ringer tone samples.

Ringer volume

incoming home and cell calls, or turn the ringer off. Set ringer volume for home line

Scroll to sample each ringer tone, then press

1. Press **MENU** when the handset is not in use.

1. Press **MENU** when the handset is not in use.

2. Press lacktriangledown or lacktriangledown to scroll to **Ringers** and then press SELECT. 3. Press **SELECT** again to choose **Home volume**

each ringer volume plays as you scroll through preparations before use, read the Introducing the choices.

5. Press **SELECT** to save. Set ringer volume for cell line:

2. Press ▼ or ▲ to scroll to **Ringers** and then press

Charges for installation or set up, adjustment of custome ontrols, and installation or repair of systems outside the

Telephone base: 6V DC @ 0.4A Charger: 6V DC @ 0.4A

up to 24 digits and 15 characters Call block list: 1000 entries

this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties

responsibility for any damage or loss resulting from the use of

VTech Communications, Inc. and its suppliers assume no

The ENERGY STAR program (www. energystar.gov) recognizes and



Telephones identified with this logo





encourages the use of products that save energy and help protect our environment We are proud to mark this product

Temporary ringer silencing When the telephone is ringing, you can temporarily

To silence the handset ringer: 2. Press ▼ or ▲ to scroll to **Ringers** and then press

conditions at the time of use

DISCLAIMER AND LIMITATION OF

Company: VTech Communications, Inc.

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada

