Go to www.vtechphones.com (US)

to register your product for enhanced warranty support and latest VTech

product news.

Go to phones.vtechcanada.com (CA) for latest VTech product news.



Quick start quide





LS6425-X (US) LS6425-X (CA)

Scan the QR code for

support information

LS6425

LS6425-2

LS6425-3

LS6425-4

LS6426-3

LS6426-4

LS642V-1E

_S642V-1F

LS642V-1G

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the

Unplug this product from the wall outlet before cleaning. Do not use liquid

- Read and understand all instructions. Follow all warnings and instructions marked on the product.
- or aerosol cleaners. Use a damp cloth for cleaning
- **CAUTION**: Do not install the telephone base at a height above 2 meters. Do not use this product near water such as near a bath tub, wash bowl,
- kitchen sink, laundry tub or a swimming pool, nor in a wet basement or
- 6. Do not place this product on an unstable table, shelf, stand or other unstable
- Avoid placing the telephone system in places with extreme temperature,
- direct sunlight, or other electrical devices. Protect your phone from moisture dust, corrosive liquids and fumes. Slots and openings in the back or bottom of the telephone base and handset
- are provided for ventilation. To protect them from overheating, these ings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided
- 9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
- 10. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on. 11. Never push objects of any kind into this product through the slots in the
- telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product
- 12. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used. 13. Do not overload wall outlets and extension cords
- 14. Unplug this product from the wall outlet and refer servicing to an authorized
- service facility under the following conditions
- When the power supply cord or plug is damaged or frayed. · If liquid has been spilled onto the product.
- If the product has been exposed to rain or wate
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation

- instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
- If the product has been dropped and the telephone base and/or handset has been damaged. · If the product exhibits a distinct change in performance.
- 15. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning
- 16. Do not use the telephone to report a gas leak in the vicinity of the leak Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environmen could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents: aasoline vapors: etc.); a leak of natural gas; etc.
- 17. Only put the handset of your telephone next to your ear when it is in normal
- 18. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet. 19. For pluggable equipment, the socket-outlet shall be installed near the
- equipment and shall be easily accessible
- 20. **CAUTION**: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used. Use only the supplied rechargeable batteries or replacement batteries. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the instruction. Disconnect the telephone line from the equipment before open the battery door.
- Do not use the battery in following conditions
- » High or low extreme temperature during use, storage or transportation. » Replacement of a battery with an incorrect type that can defeat a
- » Disposal of a battery into fire or a hot oven, or mechanically crushing
- or cutting of a battery, that can result in an explosion. » Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of
- flammable liquid or gas. » A battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.
- 21. Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- 22. The applied nameplate is located at the bottom or near of the product.

SAVE THESE INSTRUCTIONS

- · Use only the batteries provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada. go to phones vtechcanada.com or call 1 (800) 267-7377
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions. Do not open or mutilate the battery. Released electrolyte is corrosive and
- may cause burns or injury to the eyes or skin. The electrolyte may be toxic if Exercise care in handling batteries in order not to create a short circuit with
- conductive materials. Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless elephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON. Should use the wireless telephone at the ear opposite the pacemake
- WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES


- **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- **Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handse if the telephone base is unplugged, switched off or if the electrical power is
- Potential TV interference: Some cordless telephones operate at requencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base

of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.

- Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

Telephone base and charger installation

Install the telephone base and charger as shown below.

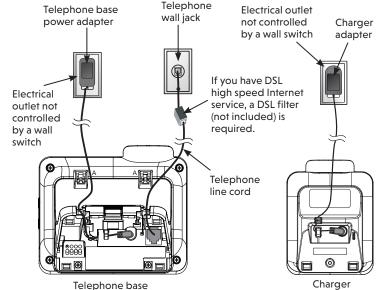

Battery installation and charging

Install the battery as shown below. Once you have installed the battery, you may be able to make and receive short calls. For best performance, charge the handset battery continuously for at least 10 hours.

1. Plug the battery connector securely into the socket inside the handset battery compartment, matching the color-coded label.



3. Slide the battery compartment cover towards the center of the handset until it clicks into place.

telephone base or charger to charge.



2. Place the battery with the

label THIS SIDE UP facing

up and the wires inside the

battery compartment.

Place the handset in the



On when the handset is

Handset overview

CHARGE light

\$\psi/\alpha\\\VOLUME

Review the directory when

the telephone is not in use.

Scroll up while in a menu.

Move the cursor to the right

when entering numbers or

Increase the listening

message playback.

MUTE/DELETE

during a call.

volume during a call or

names in the directory.

Mute the microphone

ID log or redial list.

temporarily while the

Make or answer a call.

Answer a call waiting call

Press repeatedly to add

or remove 1 in front of the

caller ID log entry before

dialing or saving it to the

Switch to tone dialing

handset speakerphone

■®/SPEAKER

REDIAL /PAUSE

temporarily while on a call.

Make or answer a call using the

and the handset during a call.

Press to review the redial list.

Switch between the speakerphone

Delete digits or characters

while using the dialing keys.

handset is ringing.

Silence the ringer

TALK/FLASH

during a call.

directory.

Delete the displayed entry

while in the directory, calle

Review the caller ID log when the telephone is not in use. Scroll down while in a menu. Decrease the listening volume during a call or message Move the cursor to the left when entering numbers or names.

CID/▼/VOLUME

or setting while in a menu. PUSH TO TALK (PTT) Begin a one-to-one or one-to-group broadcast. vtech

MENU/SELECT

Show the menu.

OFF/CANCEL lang up a call. Silence the ringer emporarily while the handset is ringing. Press and hold to delete the missed call indicator while the telephone is not in use.

Choose an item, or save an entry

ress to return to the previous menu, or press and hold to return to idle mode without making

Dialing keys Enter numbers or characters.

(pound kev) Press repeatedly to show other dialing options

when reviewing a caller ID log entry. Switch the name order when saving the caller ID log entries to the directory.

Ť†↓EQ

X/DELETE

Pars7 Tuv8 Wxyz9

Change the audio quality to best suit vour hearing during an outside call, intercom call, message or announcement playback.

Telephone base overview

Press and hold to insert a dialing pause

while entering numbers in the directory.

IN USE light Delete the message currently Flashes when there is an incoming call, or another telephone sharing the same Press twice to delete all old line is in use. messages when the telephone is not in use. Flashes when the handsets are being deregistered. Message window On when the Shows the number handset is in use of messages and or the answering other answering system is answering | system information a call. ►/SKIP On when a handset is being registered. Skip to the next nessage (b)/ANS ON/OFF FIND HANDSET

Page all system handsets

≪/REPEAT Repeat a message or press twice to play the previous message.

►/■/PLAY/STOP Plav messages

Stop message playback.

Turn the answering

system on or off.

Using the menu

To enter the handset menu:

- 1. Press **MENU**/**select** when the telephone is not in use.
- 2. Press ▼ or ▲ until the screen displays the desired feature menu.
- 3. Press MENU/SELECT to enter that menu.
- To return to the previous menu, press off/CANCEL.
- To return to idle mode, press and hold off/CANCEL.

Telephone settings

Default settings are indicated by asterisks (*).

Screen display	Function	Options
LCD language	Set the screen display language.	English* Français Espaňol
Annc Caller ID	Enable the telephone base and/or the handset to announce the incoming caller ID information.	On* Off
Clr voicemail	Turn off the voicemail indicators.	Turn off indicator?
Rename handset	Change the name of each registered handset.	HANDSET
Key tone	Adjust the key tone volume whenever a key is pressed, or turn it off.	Off
CID time sync	Enable the date and time to be set by incoming caller ID information.	On* Off
Home area code	Enter your home area code if you dial only seven digits for local calls.	
Dial mode	Set the telephone to be tone or pulse dialing.	Tone* Pulse
Voice language (Canada version only)	Set the voice prompts in your answering system or caller ID announce feature.	English* Français

Telephone operation

- Press ¬ALK/FLASH or ■)/SPEAKER, and then dial telephone number.
- · Predial by first dialing the telephone number and then press TAIR/FLASH Or ■)/SPEAKER.

Answer a call

• Press TATE/FLASH, ■)/SPEAKER or any dialing key (0-9, TONE

• Press **OFF/cancel** or put the handset to the telephone base or charge

Redial list

Each handset stores the last 10 telephone numbers dialed

To review and dial numbers from the redial list:

- 1. Press **REDIAL/PAUSE** when the handset is not in use.
- 2. Press ▼, ▲ or **REDIAL/PAUSE** repeatedly until the desired entry displays.
- 3. Press ¬¬¬ FLASH or ¬¬)/SPEAKER to dial.

To delete a redial entry:

When the desired redial entry displays, press MUTE/DELETE.

Use the intercom feature for conversation between two system handsets. • Only one intercom call can be established with two handsets at

• If there is an incoming call while the originating handset is making an intercom request, the intercom request will be stopped. To initiate an intercom call:

When the handset is not in use, press MENU/SELECT. Scroll to >Intercom, then press MENU/SELECT.

 If you have more than two handsets, scroll to select a destination handset, or use the dialing keys to enter a handset number.

To answer an intercom call:

Push-to-talk (PTT)

PUSH TO TALK.

To add a directory entry:

Press MENU/SELECT.

phone numbers only).

To review and dial from the directory:

1. Press ♥ /▲ when the handset is not in use.

Entries are sorted alphabetically.

start a name search.

To edit a directory entry:

3. Press MENU/SELECT.

5. Press MENU/SELECT to save.

To delete a directory entry:

To store a speed dial entry:

Speed dial

Directory

handsets.

Press ★★/FLASH, ♥)/SPEAKER or any of the dialing keys on the destination handset.

To end an intercom call:

Press OFF/cancel or place the handset back in the telephone base or charger.

You can directly broadcast messages from one handset to the

When the connection is made, both the caller and the destination

handsets display Press and hold [PTT] to talk and beep once. Only

The directory can store up to 50 entries, which are shared by all system

4. Use the dialing keys to enter the phone number (up to 30 digits).

6. Use the dialing keys to enter the name (up to 15 characters).

Press MUTE/DELETE to backspace and erase a digit or character.

• Press and hold MUTE/DELETE to erase the entire entry.

Press ▼ or ▲ to move the cursor to the left or right.

1. When the desired entry displays, press MENU/SELECT.

1. When the desired entry displays, press MUTE/DELETE.

1. Press **MENU**/**SELECT** when the handset is not in use.

2. Scroll to >Directory, then press MENU/SELECT.

3. Scroll to >Speed dial, then press MENU/SELECT.

• Press **0** to add a space (for entering names only).

Copy a number from the redial list by pressing REDIAL/PAUSE and

then press ∇ , \triangle or **REDIAL/PAUSE** repeatedly to select a number.

Additional key presses show other characters of that particular key.

• Press and hold REDIAL/PAUSE to insert a dialing pause (for entering

2. Scroll to browse through the directory, or use the dialing keys to

3. When the desired entry appears, press ★★★/FLASH or ♠》/SPEAKER to

2. When the screen displays **EDIT NUMBER**, use the dialing keys to

4. When the handset displays **EDIT NAME**, use the dialing keys to edit.

2. When the handset displays **Delete contact?**, press **MENU/SELECT**.

You can copy up to 10 directory entries into the speed dial locations

so that you can dial these numbers using fewer keys than usual.

4. Scroll to a desired speed dial location, then press MENU/SELECT.

speakerphone of one or multiple handsets. Press and hold

PUSH TO TALK to begin two-way communication.

one handset can talk at a time. To do so, press and hold

1. Press **MENU**/**SELECT** when the handset is not in use.

2. Scroll to >Directory, then press MENU/SELECT.

5. Press **MENU/SELECT** to move to the name.

While entering names and numbers, you can:

7. Press MENU/SELECT to store the entry.

3. Scroll to >Add contact, then press MENU/SELECT.

Caller ID

This product supports caller ID services provided by most telephone service providers. Depending on your service subscription, you may see the caller's name, number, date and time of calls that are sent by your telephone service provider after the first or second ring.

Caller ID log

caller information appears, it will not be saved in the caller ID log.

- If you want to erase the missed call indicator, press and hold
- off/CANCEL on the idle handset.

To review and dial a number in the caller ID log:

have not been reviewed in the caller ID log.

- 2. Scroll to browse through the call log. When the desired entry appears:
- Press 1 repeatedly to add or remove 1 in front of the telephone number.
- 3. Press ¬¬¬FLASH or ¬¬¬¬SPEAKER to dial the displayed number.

- 1. When the desired caller ID log entry displays, press
- 2. When the handset displays **EDIT NUMBER**, use the dialing keys to
- 3. Press MENU/SELECT.
- 4. When the handset displays **EDIT NAME**, use the dialing keys to
- 5. Press **MENU/SELECT** to save.

To delete the caller ID log entries:

- Delete one entry: When the desired caller ID log entry displays, press **MUTE/DELETE**.
- **Delete all entries:** Press **MENU/SELECT** when the handset is not in use. Scroll to >Caller ID log and then press MENU/SELECT. Scroll to

Your telephone has separate indicators for two different types of

- message window on the telephone base flashes, there are messages recorded on the built-in answering system. The total recording time is approximately 14 minutes. It can record and store up to 99 messages and the recording time of each
- service provider is indicating that it has new voicemail for you. Contact your telephone service provider for more information on how to access your voicemail.

5. Scroll to a desired directory entry, then press MENU/SELECT

To dial a speed dial entry:

• Press and hold a speed dial key (0-9) of the desired entry when the handset is not in use, the number will be dialed automatically.

To delete a speed dial entry:

• When the desired entry displays, press MUTE/DELETE.

The caller ID log stores up to 50 entries. If you answer a call before the

• The handset displays XX Missed calls when there are calls that

- 1. Press CID/▼ when the handset is not in use.
- Press # (pound key) repeatedly to show different dialing options.

To save a caller ID log entry to the directory:

- MENU/SELECT.
- modify the number if necessary.
- modify the name if necessary.

- >Del all calls and then press MENU/SELECT twice.

About answering system and voicemail

voice messages: those left on the built-in answering system and those left at your telephone service provider's voicemail. Each alerts you to new messages separately If XX New messages and a display on the handset and the

- message depends on the message length you set.
- If **New Voicemail** and Misplay on the handset, your telephone

Answering system settings

Default settings are indicated by asterisks (*).

Screen display	Function	Options
Call screening	Set whether you hear the callers while they are leaving messages to you.	On* Off
# of rings	Set the number of times the telephone rings before the answering system answers.	6; 5; 4*; 3; 2; Toll saver
Remote code	Set a two-digit security code to access the answering system remotely from any touch-tone telephone.	19*
Msg alert tone	Set to alert you when you have new messages.	On Off*
Recording time	Set the recording time for each incoming message.	3 minutes* 2 minutes 1 minute

Answering system operation

Turn the answering system on or off

The answering system must be turned on to answer and record messages. When it is turned on, the **U/ANS ON/OFF** light on the telephone base turns on and ANS ON displays on the handset.

• Press **U/ANS ON/OFF** on the telephone base to turn the built-in answering system on or off.



Record your own announcement

You can use the preset announcement to answer calls, or replace it with your own recorded announcement. It can be up to 90 seconds in

- 1. Press **MENU**/**SELECT** when the handset is not in use.
- 2. Scroll to >Answering sys. Press MENU/SELECT twice.
- 3. Scroll to >Record annc. Press MENU/SELECT. The system announces, "Record after the tone. Press 5 when you are done."
- 4. After the tone, speak towards the handset microphone. Press 5
- 5. The answering system automatically plays back the newly recorded announcement, then returns to the previous menu.

Message playback

To play messages with the telephone base:

Press ►/■/PLAY/stop when the telephone is not in use.

Options during playback:

- Press ▲/VOL or ▼/VOL to adjust the speaker volume.
- Press ►/SKIP to skip to the next message.
- Press ≪/REPEAT to repeat the message currently playing. Press **≪/REPEAT** twice to listen to the previous message.
- Press X/DELETE to delete the current message. The system advances to the next message
- Press ►/■/PLAY/STOP to stop.

To play messages with a handset:

Press MENU/SELECT twice when the telephone is not in use.

Options during playback:

- Press MENU/SELECT to pause the playback, and display the caller ID information if it is available, then press TALK/FLASH or ■)/SPEAKER to call back the caller. If you do not press TALK/FLASH within 10 seconds, message playback resumes.
- Press TALK/FLASH to stop the playback and the handset displays Call back? then press MENU/SELECT, TALK/FLASH or ◄))/SPEAKER to call back the caller.
- Press ▼/VOLUME or ▲/VOLUME to adjust the speaker volume.
- Press †† LEQ to adjust the handset message playback audio quality.

- Press 6 to skip to the next message.
- Press 4 to repeat the message currently playing. Press 4 twice to listen to the previous message.
- Press **MUTE/DELETE** to delete the current message. The system announces, "Message deleted," and advances to the next message.

Delete all old messages

To delete all old messages at the telephone base:

Press X/DELETE twice when the telephone is not in use.

To delete all old messages with a handset:

- 1. Press **MENU/select** when the handset is not in use. 2. Scroll to >Answering sys and then press MENU/SELECT.
- 3. Scroll to >Delete all old and then press MENU/SELECT twice.

Call screening

Call screening at the telephone base:

If the answering system and call screening are on, the announcement and the incoming message broadcast at the telephone base when a call is answered by the answering system.

Options while recording a message:

- Press ▲/VOL or ▼/VOL on the telephone base to adjust the call screening volume.
- Press ►/■/PLAY/STOP to temporarily silence the call screening.

Call screening at the handset:

If the answering system is on, the announcement and the incoming message broadcast at the telephone base when a call is answered by the answering system. The handset shows

To screen call, press [SELECT]. Press MENU/SELECT to screen the call on your handset and the handset displays the caller ID information. If you do not subscribe to caller ID service, the handset shows Screenina...

Call intercept

If you want to talk to the person whose message is being recorded, press TALK/FLASH or ♥)/SPEAKER on the handset.

Access the answering system remotely

- 1. Dial your telephone number from any touch-tone telephone.
- 2. When the system plays your announcement, enter the two-digit remote code. The preset code is **19**.
- 3. You can enter one of the following remote commands.

Command	Function	
1	Play all messages.	
2	Play new messages.	
3	Delete a message (during playback).	
33	Delete all old messages.	
4	Repeat the current message (during playback).	
44	Listen to the previous message (during playback).	
5	Stop.	
*5	Hear a list of remote commands.	
6	Skip to the next message (during playback).	
*7	Record a new announcement.	
8	End the call.	
0	Turn the answering system on or off.	

4. Hang up or press 8 to end the call.

If you have difficulty with your telephone, please refer to the user's manual for a full set of installation and operation instructions. For customer service, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or call

NEED HELP?

For operations and guides to help you using your telephone, and for latest information and supports, go and check the online help topics and online FAQs. Use your smartphone or mobile device to access our

• Go to https://help.vtechphones.com/LS6425; OR LS6425-X (US)

• Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.

- If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear. You can also call our Customer Support at 1 (800)

595-9511 [in US] or

1 (800) 267-7377 [in Canada] for help.

FOR C-UL COMPLIANCE ONLY

Afin de réduire les risques d'incendie, de blessures corporelles ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre

- Lisez et comprenez bien toutes les instructions
- Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- Débranchez ce téléphone de la prise murale avant de le nettoyer. N'utilisez pas e nettoyeurs liquides ni en aérosol. N'utilisez qu'un chiffon doux et légèremen
- 4. **ATTENTION**: Ne pas installer le socle téléphonique à une hauteur supérieure à
- 5. N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
- Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. appareil pourrait tomber et être sérieusement endommag
- Évitez d'installer le système téléphonique dans les endroits soumis à une npérature extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphone contre les sources d'humidité, la poussière, les vapeurs et les liquides corrosifs.
- Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité rale ou un cabinet fermé qui ne possède pas d'aération adéquate.
- 9. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.
- 10. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire. 11. N'insérez iamais d'obiets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points de tension dangereux ou court-circuiter des pièces, ce qui constituerait un risque d'incendie ou d'électrocution. N'échappez
- pas de liquides dans l'appareil. 12. Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangereuses ou autres dangers ires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux.
- . Ne surchargez pas les prises de courant et les rallonges.
- 14. Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants :
- Lorsque le cordon d'alimentation est endommagé ou écorché. Si du liquide a été échappé dans l'appareil.
- Si l'appareil a été exposé à une source d'humidité telle que la pluie ou l'eau.
- Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans le les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un tr commandes pourraient provoquer un dommage qui pourrait exiger un trava exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnemen
- Si le produit a été échappé et que le socle et/ou le combiné a été Si le produit affiche une nette diminution de sa performance.
- 15. Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.
- 16. N'utilisez pas le téléphone pour rapporter une fuite de gaz à proximité de la fuite. En certaines circonstances, une flammèche pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combine est déposé sur le socle. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le hone se trouve à proximité d'un endroit comportant des de az inflammables, à moins que la ventilation soit adéquate. Une flammèche dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre: des endroits où l'on utilise de l'oxygène médical sans ventilation adéquate; des gaz industriels (dissolvants de nettoyage des vapeurs d'essence, etc.); une fuite de gaz naturel, etc. 17. Ne placez que le combiné de votre téléphone près de votre oreille lorsqu'en
- mode de conversation. 18. Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés
- au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci est barnché dans une prise au plafond ou sous une table/armoire. 19. Pour le MATERIEL RACCORDE PAR PRISE DE COURANT, le socle de prise de
- urant doit etre installe a proximite du materiel et doit etre aisement accessible 20. MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le

mauvais type de piles pour le téléphone. N'utilisez que les piles rechargeable inclus ou les piles de rechange. N'incinérez pas les piles. Celles-ci risqueraient d'exploser. Mettre au rebut les batteries usagées conformément aux instructions du fabricant. Débrancher les lignes téléphoniques avant le remplacement des

Évite d'utiliser la batterie dans les conditions suivantes:

sérieusement le produit et mettre votre sécurité en péril.

- » des températures extrêmes faibles ou élevées auxquelles une batterie Reorient or relocate the receiving antenna. peut être soumise pendant l'utilisation, le stockage ou le transport; • Increase the separation between the equipment and receiver.
- » Remplacement d'une batterie par un type incorrect pouvant supprime une protection
- » mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une explo
- » maintien d'une batterie dans un environnement à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz
- » batterie soumise à une pression de l'air extrêmement faible pouvant
- llowing two conditions: (1) this device may not cause harmful interference, and (2) provoquer une explosion ou la fuite de liquide ou de gaz inflammables. this device must accept any interference received, including interference that ma 21. N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur cause undesired operation. Privacy of communications may not be ensured when dont la polarité ou la tension serait inadéquate risque d'endommager using this telephone
- 22. La plaque signalétique appliquée est située au bas ou à proximité du produit.

CONSERVEZ CES INSTRUCTIONS

LS6425-X (CA)

- N'utilisez que la pile incluse ou l'équivalent.
- Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus
- N'ouvrez pas et ne mutilez pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est toxique si avalé.
- Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits
- Rechargez la pile incluse avec cet appareil, selon les instructions et limites spécifiées dans ce quide d'utilisati

Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (s'applique uniquement aux téléphones numériques sans

L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche épendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Inis la firme WTR recommande aux médecins

Avis aux détenteurs de stimulateurs cardiaques

- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche
- Ils doivent utiliser le téléphone sans fil en l'appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les tenteurs de simulateurs cardiaques causés par les gens qui utilisent un téléphone

À propos des téléphones sans fil

Confidentialité: Les mêmes caractéristiques qui constituent des avantages pour les téléphones sans fil affichent également des réstrictions. Les appels téléphoniques sont transmis entre le combiné sans fil et le socle par le biais d'ondes radio ; il y a donc la possibilité que vos conversations téléphoniques sans fil soient interceptée ar des équipements de réception radio se trouvant dans la portée du combiné ans fil. Pour cette raison, vous ne devez pas percevoir les communications éléphoniques sans fil comme étant aussi confidentielles que celles des téléphones

prise électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un errupteur mural. Les appels ne pourront pas être effectués du combiné sans fil si e socle est débranché ou mis hors tension ou si le courant est coupé. Possibilité d'interférences aux téléviseurs : Certains téléphones sans fil fonctionnen sur des fréquences pouvant causer des interférences aux téléviseurs et aux

Alimentation électrique: Le socle de ce téléphone sans fil doit être branché à une

magnétoscopes. Pour réduire ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil près ou sur un téléviseur ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possiblement les interférences. Piles rechargeables: Manipulez les piles avec soin afin de ne pas les court-circuite avec des baques, bracelets ou clés. Les piles ou le conducteur peut surchauffer et

auser des blessures. Respectez la polarité adéquate entre la pile et le chargeur. Les bloc-piles rechargeables à l'hydrure métallique de nickel : Jetez ces blocs-piles le manière écologique et sécuritaire. Ne les incinérez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées.

THE RBRC SEAL



The RBRC seal on the Ni-MH battery indicates that VTech communications, Inc. is voluntarily participating in an industry program to ollect and recycle these batteries at the end of their useful lives, when ken out of service within the United States and Canada.

The program provides a convenient alternative to placing used Ni-MH batteries into the trash or municipal waste, which may be illegal in your

VTech's participation makes it easy for you to drop off the spent battery at local retailers participating in the program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY® for information on Ni-MH battery recycling and disposal bans/ restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources

The RBRC Seal and 1 (800) 8 BATTERY® are registered trademarks of Call2recycle, Inc.

NOTE: This equipment has been tested and found to comply with the requirements

for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable

protection against harmful interference in a residential installation. This equipmen

enerates, uses and can radiate radio frequency energy and, if not installed and

FCC, ACTA and IC regulations CHARGING TESTING INSTRUCTIONS This telephone is set up to comply with the energy-conserving standards right out of the

Industry Canada

box. These instructions are intended for California Energy Commission (CEC) compliance testing only. When the CEC battery charging testing mode is activated, all telephone functions, except battery charging, will be disabled. To activate the CEC battery charging testing mode:

1. Unplug the telephone base power adapter from the power outlet. Make sure all

used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in

or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the

Connect the equipment into an outlet on a circuit different from that to which the

WARNING: Changes or modifications to this equipment not expressly approved by

the party responsible for compliance could void the user's authority to operate the

This device complies with Part 15 of the FCC rules. Operation is subject to the

To ensure safety of users, the FCC/ISEDC has established criteria for the amount

of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC/ISEDC criteria. The handset may be safely held

against the ear of the user. For body worn operation, this handset has been tested

and meets the ECC/ISEDC RE exposure guidelines when used with the accessories

supplied or designated for this product. Use of other accessories may not ensure

ompliance with FCC/ISEDC RF exposure quidelines. The telephone base shall

maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian requirement:

be provided to your telephone service provider upon request.

single line. See the installation instructions in the user's manual.

The REN for this product is encoded as the 6th and 7th characters follo

This equipment complies with Part 68 of the FCC rules and with technical

be installed and used such that parts of the user's body other than the hands are

ACTA). The label on the back or bottom of this equipment contains, among other

The plug and jack used to connect this equipment to premises wiring and the

telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug i

provided with this product. It is designed to be connected to a compatible modula

The Ringer Equivalence Number (REN) is used to determine how many devices you

may connect to your telephone line and still have them ring when you are called

in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact

This equipment must not be used with Party Lines. If you have specially wired alarm

dialing equipment connected to your telephone line, ensure the connection of this

what will disable alarm equipment, consult your telephone service provider or a

If this equipment is malfunctioning, it must be unplugged from the modular jack

can only be made by the manufacturer or its authorized agents. For replacement

If this equipment is causing harm to the telephone network, the telephone service

provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance

otice is not practical, you will be notified as soon as possible. You will be given t

provider may make changes in its facilities, equipment, operation, or procedures

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with

Privacy of communications may not be ensured when using this telephone

Innovation, Science and Economic Development Canada's licence-exempt RSS(s),

(2) This device must accept any interference, including interference that may cause

The term "IC:" before the certification/registration number only signifies that the

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN

indicates the maximum number of devices allowed to be connected to a telephone

interface. The termination of an interface may consist of any combination of devices

This product meets the applicable Innovation, Science and Economic Development

CALIFORNIA ENERGY COMMISSION BATTERY

subject only to the requirement that the sum of the RENs of all the devices not

If this product is equipped with a corded or cordless handset, it is hearing aid

opportunity to correct the problem and the telephone service provider is required

inform you of your right to file a complaint with the FCC. Your telephone service

procedures, follow the instructions outlined under the Limited warranty.

provider is required to notify you if such changes are planned.

Operation is subject to the following two conditions:

Industry Canada technical specifications were met

(1) This device may not cause interference

undesired operation of the device

Canada technical specifications.

ment does not disable your alarm equipment. If you have questions about

ack that is also compliant. An RJ11 jack should normally be used for connecting to a

nings, a product identifier in the format US:AAAEQ##TXXXX. This identifier mus

ents adopted by the Administrative Council for Terminal Attachments

Consult the dealer or an experienced radio/TV technician for help.

a particular installation. If this equipment does cause harmful interference to radio

ollowina measures:

receiver is connected.

CAN ICES-3 (B)/NMB-3(B)

your telephone service provider.

FCC Part 68 and ACTA

handsets are plugged with charged batteries before proceeding.

- 2. While you press and hold /FIND HANDSET, plug the telephone base power
- HANDSET and then press it again within two seconds. The process takes up to one minute to complete. When the phone successfully enters the CEC battery charging testing mode, the IN USE light turns off and all handsets display Put HS on BASE to

If the phone fails to enter this mode, repeat all the steps mentioned above. The telephone base will be powered up as normal if you fail to press **/FIND HANDSET** within two seconds in Step 3.

To deactivate the CEC battery charging testing mode:

- 1. Unplug the telephone base power adapter from the power outlet, and then plug it back in. Then the telephone base is powered up as normal
- 2. Place the handset in the telephone base to register it back. The handset displays Registering... Please wait and the red IN USE light on the telephone base turns on. If the registration is successful, the handset screen displays HANDSET X registered and beeps. The handset is registered with the telephone base.

Limited Warranty

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of

purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are frée from defects in material and workmanship, pursuan to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period. VTech's authorized service representative will replace at VTech's option, without charge, a Materially Defective Product. If we replace the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar lesian. We will retain defective parts, modules, or equipment, Replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the replacement Products to you in working condition. You should expect the replacement to take approximately 30 days. How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of

This limited warranty does not cover:

purchase. If VTech replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the replacement Product for a period of either (a) 90 days from the date the replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer What is not covered by this limited warranty?

Product that has been subjected to misuse, accident, shipping or other physical

damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion. Product that has been subjected to contact with liquid, water, rain, extreme numidity or heavy perspiration, sand, dirt or the like; but then only to the exten he damage was not caused by incorrectly securing the waterproof handset's protective elements, for example, failing to properly close a seal), or such protective elements are damaged or missing (e.g. a cracked battery door), or subjecting a Product to conditions beyond its stated specifications or limits (e.g.

- 30 minutes in 1 meter of fresh water). Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech:
- Product to the extent that the problem experienced is caused by signal Product to the extent that the problem is caused by use with non-VTech
- Product whose warranty/quality stickers, product serial number plates or
- lectronic serial numbers have been removed, altered or rendered illegible Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes);
- Product returned without a valid proof of purchase (see item 2 below); or Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?

To obtain warranty service in the United States of America, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones, vtechcanada.com or dial 1 (800) 267-7377.

NOTE: Before calling for service, please review the user's manual - a check of the roduct's controls and features may save you a service call Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred n the transport of the Product(s) to the service location. VTech will return replaced

Product under this limited warranty. Transportation, delivery or handling charges are

VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of replacement prior to any further replacement activity. You must pay for the cost of replacement and return shipping costs for the replacement of Products that are

Return the entire original package and contents including the Product to the

- Include a "valid proof of purchase" (sales receipt) identifying the Product
- Provide your name, complete and correct mailing address, and telephone

provides no other warranties for this Product. The warranty exclusively describes all of

VTech's responsibilities regarding the Product. There are no other express warranties No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. 3. After about 20 seconds, when the **IN USE** light starts flashing, release **/FIND**

Limitations: Implied warranties, including those of fitness for a particular purpose and nerchantability (an unwritten warranty that the Product is fit for ordinary use) are limited o one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you n no event shall VTech be liable for any indirect, special, incidental, consequential, or imilar damages (including, but not limited to lost profits or revenue, inability to use the oduct or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not illow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase

TECHNICAL SPECIFICATIONS

Frequency control Crystal controlled PLL synthesizer Transmit frequency Handset: 1921.536MHz - 1928.448MH Telephone base: 1921.536MHz - 1928.448MHz Channels Nominal effective Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the range Handset: 2.4V Ni-MH battery $\triangle \square$ Telephone base: DC 6V @ 0.4A Power requirement Charger: DC 6V @ 0.4A Directory: 50 memory locations: up to 30 digits and 15 characters



interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

Telephones identified with this logo have reduced noise and

Caller ID log: 50 memory locations;

up to 24 digits and 15 characters

Disclaimer and Limitation of Liability

VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product.

Address: 9020 SW Washington Square Road - Ste 555 Tigard, OR

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada

Company: VTech Communications, Inc.

97223, United States

not covered by this limited warranty What must you return with the Product to get warranty service?


- VTech service location along with a description of the malfunction or difficulty;
- purchased (Product model) and the date of purchase or receipt; and
- Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It

supersedes all other written or oral communications related to this Product. VTech



© 2022 VTech Communications, Inc. © 2022 VTech Technologies Canada Ltd

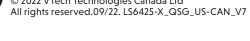

Specifications are subject to change without notice