


×





Press and hold

TALK

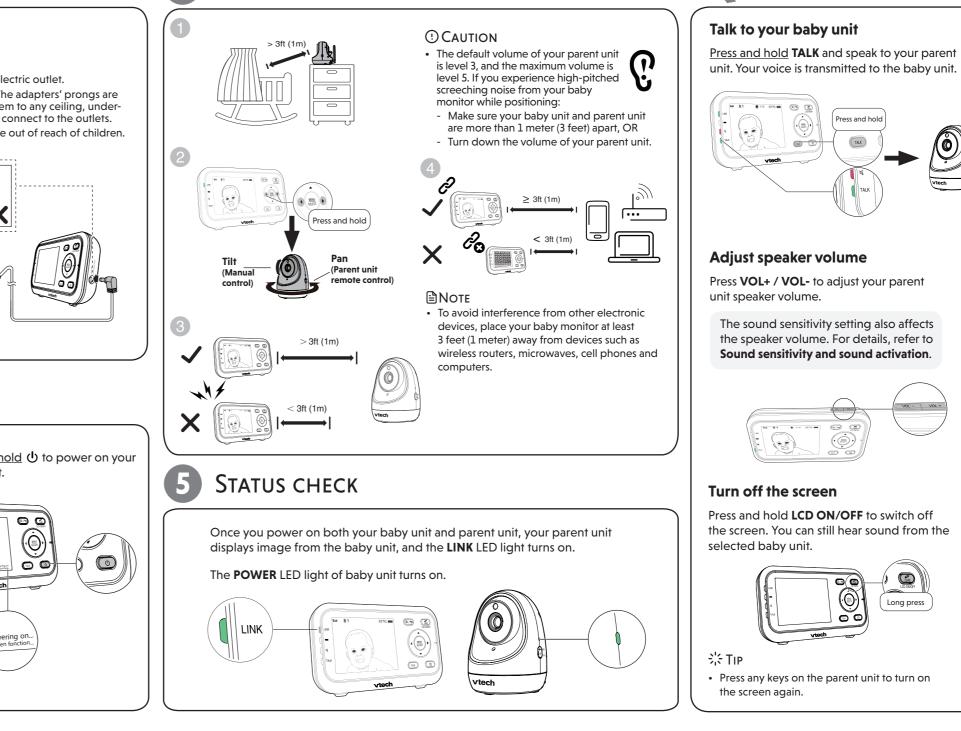

Basic operation - Parent unit



Use the menu

Press **MENU** to enter the menu, or save a setting. You can use the parent unit for advanced settings or operations, such as to play or stop the baby unit lullaby, or to adjust the baby unit sound sensitivity.

While in the menu:

- Press ◀ or ► to scroll among the menu options.
- Press **SELECT** or ▲ to enter the desired submenu.
- Press \blacktriangle or \triangledown to select an item.
- Press SELECT to confirm your selection.




Pan, tilt, zoom

Press \oplus to zoom in or out.

16a1 B 1 D

<u>Press and hold</u> \triangleleft or \triangleright to pan or tilt the image leftward or rightward.

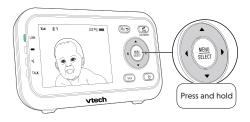


EII 22°C (III)

ø

C()




Overview - Parent unit

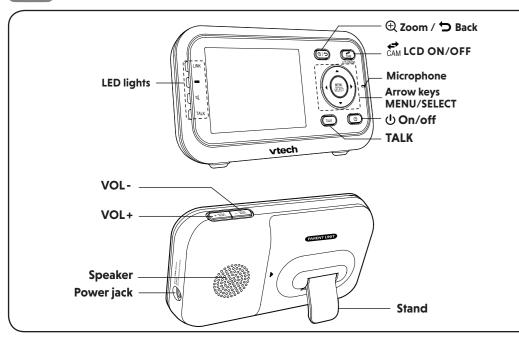

Sound sensitivity and sound activation


Adjust sound detection sensitivity

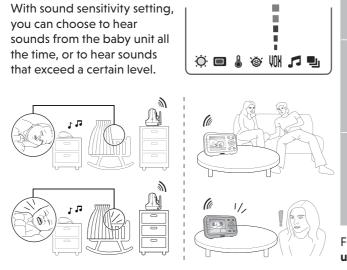

Parent unit setting	What happens	You may experience	What you co
Speaker volume: Low Sensitivity: Highest [Default]	Hear all sounds all the time, including background sounds.	Difficulty in hearing your baby's soft sounds if the background sounds are louder.	 Increase pail speaker volit lower sound If you are us white noise or sound ma its volume to relocate it to background
Speaker volume: MAX Sensitivity: Low / Medium	Only hear sounds that exceed the selected sound sensitivity level.	No sound; or sounds that cut in and out at times as the baby unit may not detect extra soft sounds.	Increase the so sensitivity, and volume level i

For details, please see Adjust the sound sensitivity of the baby unit in the User's manual.

Overview - Baby Unit

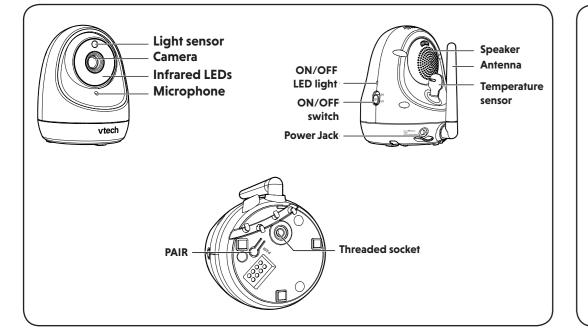

NIGHT VISION



The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and 🕥 appears on the screen.

🖹 Notes

- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment.
- When the infrared LEDs are on, the images are in black and white. This is normal.

Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.


NOTES

6



Status check - Two baby units


If you are viewing baby unit **1**, the **POWER** LED light of baby unit **1** turns on. As baby unit **2** is not being viewed, its **POWER** LED light flashes.

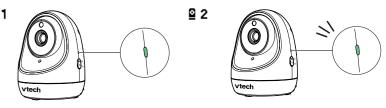

■NOTE


Change different views - Patrol

Press **MENU** when the parent unit is idle. Press \triangleleft or \triangleright to choose \blacksquare , then press **SELECT** or \blacktriangle . Press ∇ or \blacktriangle to choose \square , then press **SELECT** to confirm your selection.

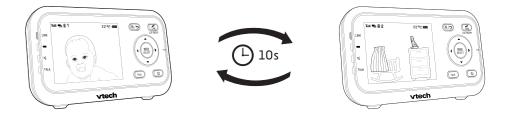






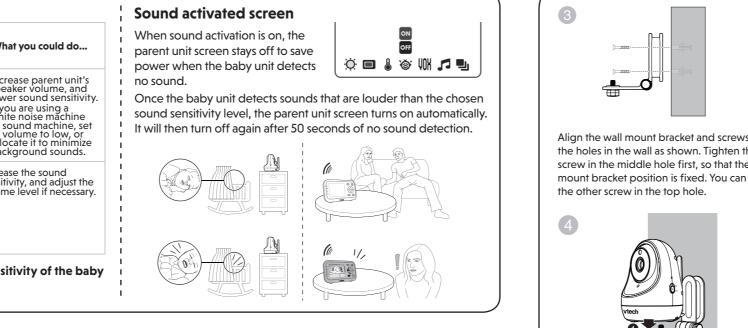


MOUNT THE BABY UNIT (OPTIONAL)

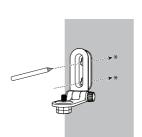

 Check for reception strength and camera angle before drilling the holes. • The types of screws and anchors you need depend on the composition of the wall.

Use a pencil to mark two holes in parallel. Make sure they are the same distance apart as the wall mount holes on the baby unit.

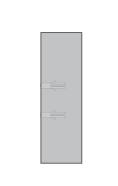

If you drill the holes into a stud, go to step 3. -OR-


If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.

Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten



Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.

5

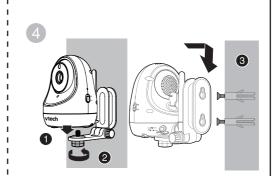


Insert the screws into the holes and tighten

exposed.

the screws until only 1/4 inch of the screws are

Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit. Align the holes I on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.

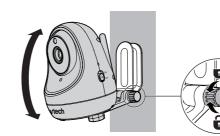

You can maximize your baby unit's viewing angles by tilting the wall mount bracket. Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket.

Tilt your baby unit up or down to adjust to your preferred angle.

Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.

• If you power on only one baby unit, your parent unit may display 🔓 and the LINK LED light flashes. Press 🚮 to switch to the baby unit you have powered on.

Change different views - Single-cam

Press CAM to switch to another camera in **SINGLE-CAM** mode.

