


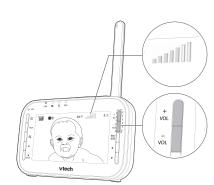

Adjust speaker volume


Press VOL or VOL to adjust your parent unit speaker volume. It determines the volume of sound transmitted from your baby unit.



Zoom


Press

to zoom in or out.

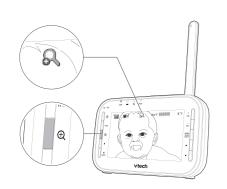


Press and hold TALK and speak to your parent unit. Your voice is transmitted to the baby unit.

Talk to your baby unit

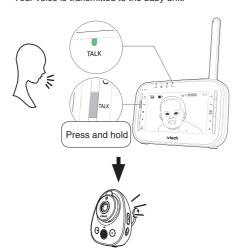


Basic operation - Baby unit


Adjust speaker volume

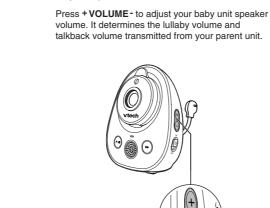

Lullaby

 
Press ▶/■ to play lullaby on the baby unit. Press ➤ to play the next lullaby.



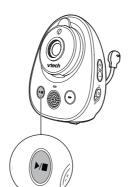


Turn off the baby unit

Slide the **ON/OFF** switch to **OFF** to power off your baby unit.

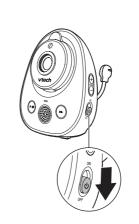

Night vision

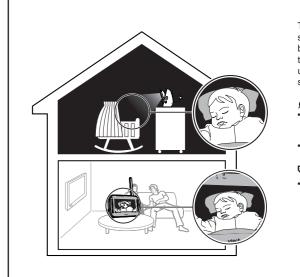


The baby unit has infrared LEDs that allow you to see your baby at night or in a dark room. When the baby unit detects low light levels, the infrared LEDs turn on automatically. The images from the baby unit are in black and white, and J appears on

- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark
- When the infrared LEDs are on, the images are in black and white. This is normal.

 Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds the display resolution may vary. Adjust the baby unit's angle, or place the baby unit at a higher level to prevent glare and blurry display.

Turn off the screen

Press and hold LCD ON/OFF to switch off the screen. You can still hear sound from the selected baby unit.

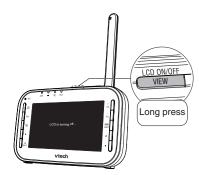


Press any keys on the parent unit to turn on the

Use the menu


Press MENU/SELECT to enter the menu, choose a menu item, or save a setting. You can use the parent unit menu for the advanced settings or operations, such as to play or stop the baby unit lullaby, or to adjust the baby unit sound sensitivity

While in the menu:


- Press ▲ or ▼ to scroll up or down.
- screen.

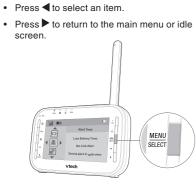

Turn off the parent unit

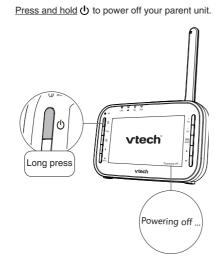

Mount the baby unit (optional)

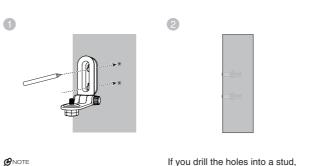


 Check for reception strength and amera angle before drilling the holes

Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).

go to step 3.

If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.

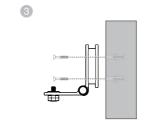


Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.




Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.



Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

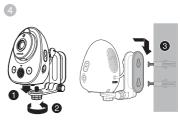

Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.

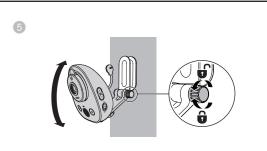

You can maximize your baby unit's viewing angles by tilting the wall mount bracket.

Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.



© 2018 VTech Communications, Inc. All rights reserved. 04/18. VM342-2_QSG_V5. Document order number: 96-011186-040-100