







vtech®


Quick start guide

VM343

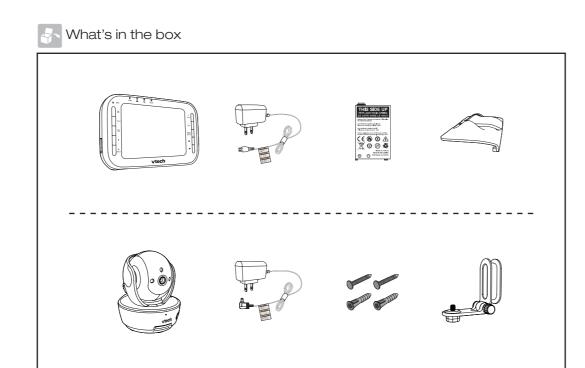


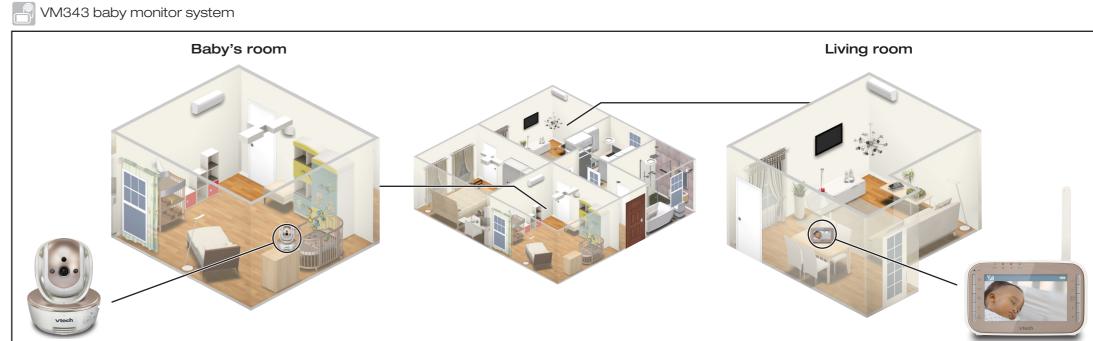




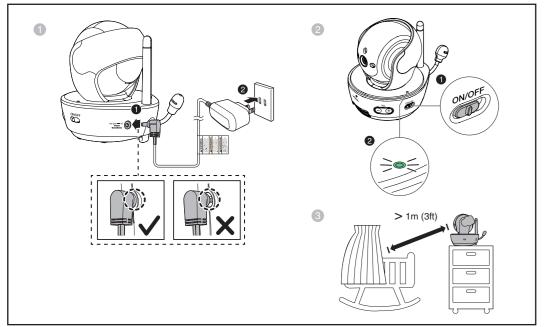

Install the battery

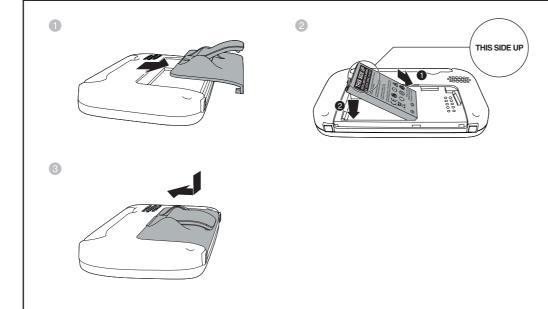


Connect and power on - Parent unit

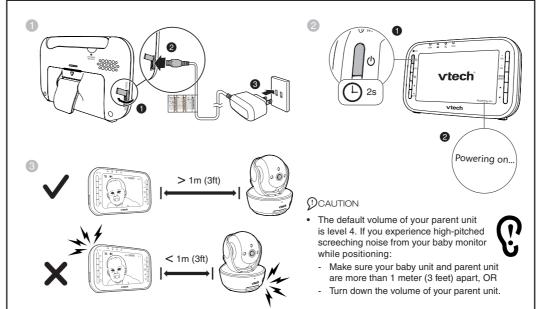


4 Status check






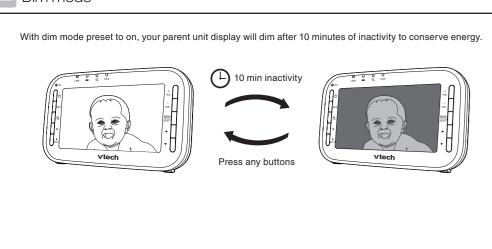



Sound activation

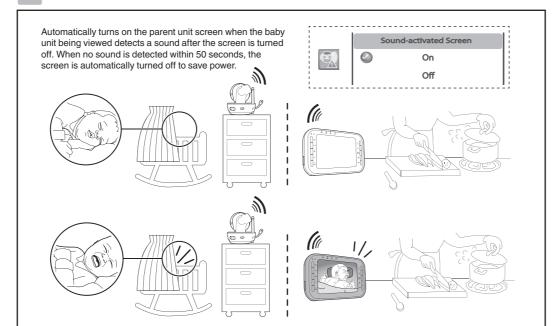

Night vision

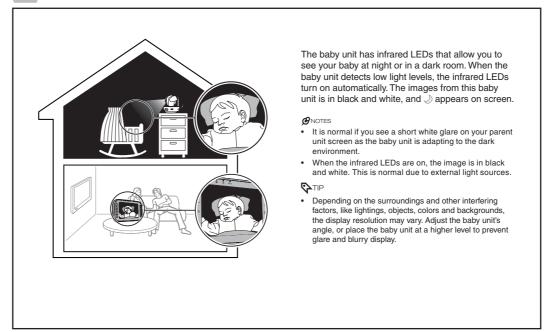

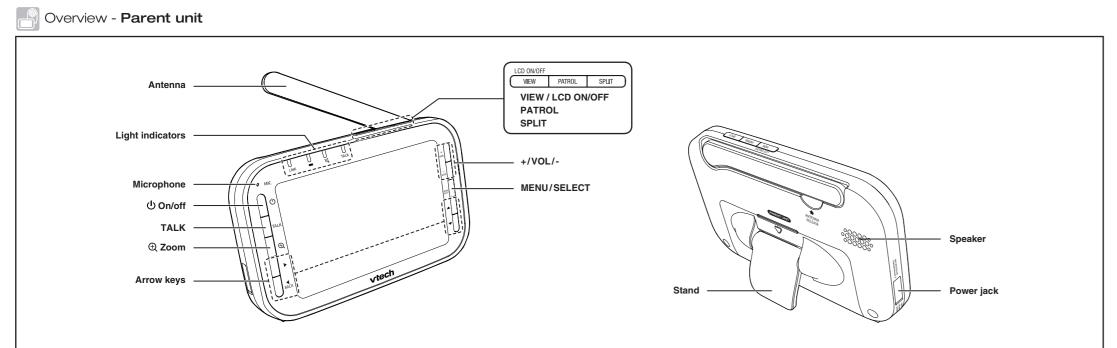

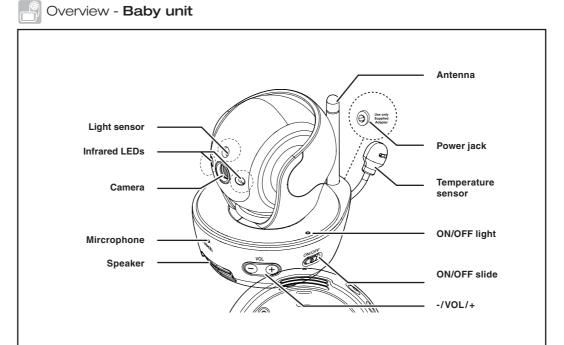



You can view from different baby units if you have more than one baby units in your system (VM305 purchased separately).



Press $\boldsymbol{\text{VIEW}}$ to switch between the images of the baby units.







Press **PATROL** to alternately view the image from the baby units every 10 seconds.








Press SPLIT to view the images from all baby units at once.



Basic operation - Parent unit

Adjust speaker volume

Press +/VOL/- to adjust your parent unit speaker volume. It determines the volume of sound transmitted from your baby unit.

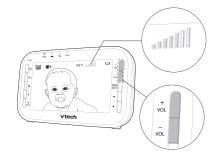


Pan, tilt, zoom

Press and hold \blacktriangle , \blacktriangledown , \blacktriangleleft or \blacktriangleright to move the camera.




Press ⊕ to zoom in or out.

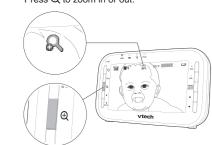



Talk to your baby unit



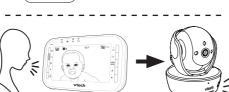

Press and hold TALK and speak to your parent unit. Your voice is transmitted to the baby unit.

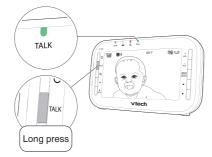


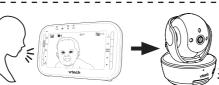

Mount the baby monitor (optional)

Turn off the screen

Press and hold LCD ON/OFF to switch off the screen. You can still hear sound from the selected baby unit.

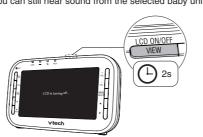



Adjust speaker volume

Basic operation - Baby unit

Press +/VOL/- to adjust your baby unit speaker volume. It determines the talkback volume transmitted from your parent unit.



Slide the ON/OFF switch to OFF to power off your baby unit.

Turn off the baby unit



Use the menu

Press MENU/SELECT to enter the menu, choose a menu item, or save a setting.


While in the menu:

- Press ▲ or ▼ to scroll up or down.
- Press ► to select an item.
- Press BACK to return to the main menu or idle screen.







Turn off the parent unit

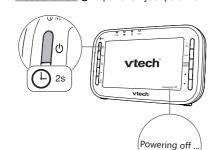

Press and hold \circlearrowleft to power off your parent unit.

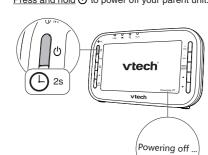

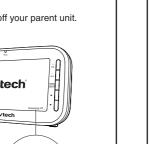


 Check for reception strength and camera angle before drilling the holes.

Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).

If you drill the holes into a stud, go to step 3.


If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.

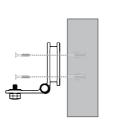


Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.




Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.

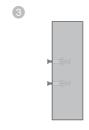

Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

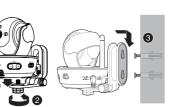

Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.

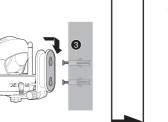

The default angle of the wall mount bracket is 90 degrees. You can maximize your baby unit's viewing angles by tilting the wall mount bracket.

Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.