



vtech

Quick start guide

Scan the QR code for support information

Important safety instructions

- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
- 1. Read and understand all instructions.
- 2. Follow all warnings and instructions marked on the product.
- 3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 4. CAUTION: Do not install the telephone base at a height above 2 meters.
- 5. Do not use the product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 7. Avoid placing the telephone base or handset in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
- 8. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. The product should not be placed in any area where proper ventilation is not provided.
- 9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
- 10. Do not allow anything to rest on the power cord. Do not walk on this product where the cord may be walked on.
- 11. Never attempt to repair this kind of product. Contact your telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on this product.
- 12. To reduce the risk of electric shock, do not disassemble the telephone base, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 13. Do not overload wall outlets and extension cords.
- 14. Under no circumstances should you attempt to repair this product. Refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.
- 15. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
- 16. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment where explosive vapors or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors, etc.); a leak of natural gas; etc.
- 17. Only put the handset of your telephone next to your ear when it is in normal talk mode.
- 18. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- 19. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- 20. **CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT183642/87283642) for the handset. Do not dispose of batteries in a fire. They may explode. Disposed of used batteries according to the instruction.
- Do not use the battery in following conditions:
 - High or low extreme temperature during use, storage, or transportation.
 - Recharge of a battery with an incorrect type that can defeat a safeguard.
 - Dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.
- 21. Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- 22. The applied nameplate is located at the bottom or near of the product.

SAVE THESE INSTRUCTIONS

Battery

- Use only the batteries provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511.
- In Canada, go to phones.vtechcanada.com or call 1 (800) 267-7377.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

- Cardiac pacemakers (apply only to digital cordless telephones): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
 - Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
 - Should use the wireless telephone at the ear opposite the pacemaker.
- WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

About cordless telephones

- Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power: The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or the electrical power is interrupted.
- Potential TV Interference: Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base or the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conductive material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

ECO mode

- This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

For C-UL compliance only

Mesures de sécurité importantes

- Afin d'éviter tout risque de choc électrique ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone :
- 1. Lisez et comprenez bien toutes les instructions.
- 2. Observer toutes les instructions et mises en garde inscrites sur l'appareil.
- 3. Débranchez le téléphone de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol. N'utilisez qu'un chiffon doux et égoutté humide.

ATTENTION: Ne pas installer le socle téléphonique à une hauteur supérieure à 2 mètres.

- 5. N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un endroit humide ou où il peut être déversé.
- 6. Ne déposez pas ce téléphone sur un chariot, support ou table chantante. L'appareil pourrait tomber et être sérieusement endommagé.

7. Évitez d'installer le système téléphonique dans les endroits soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphone contre les sources d'humidité, la poussière, les vapeurs et les liquides corrosifs.

- 8. Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'é empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées. Ne placez pas cet appareil proche d'un élément de chauffage ou d'une plaque électrique. De plus, ne l'installez pas à proximité d'une source de chaleur.

8. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur le cordon d'alimentation ni le cordon téléphonique modulaire.

- 11. N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient causer des points de tension dangereux ou court-circuit des pièces, qui pourraient constituer un risque d'incendie ou d'électrocution. N'échangez pas les piles avec celles d'autre appareil.

12. Attachez l'appareil à la ligne téléphonique lorsque vous appuyez sur la touche de remise à zéro de la serviette de sécurité. Un remontage inadverté peut être à l'origine d'une décharge électrique.

- 9. Ne faites fonctionner cet appareil qu'avec une source d'alimentation recommandée par le fabricant. Utilisez une source d'alimentation recommandée par le fabricant.

10. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur le cordon d'alimentation ni le cordon téléphonique modulaire.

- 13. Ne surchargez pas les prises de courant et les rallonges.

14. Débranchez cet appareil de la prise de courant et communiquiez avec le département de service à la clientèle de VTech dans les cas suivants:

- Lorsque le cordon d'alimentation est endommagé ou écorché. Si du liquide a été échappé à l'appareil.

15. Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.

- 16. Ne déplacez pas le téléphone lorsque la pile est presque耗尽. Une fermeture de circuit peut se produire si le combiné est déposé sur le socle. C'est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant des concentrations de gaz inflammables, moins que la ventilation soit adéquate. Une flamme dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre des endroits où l'utilisation de l'oxygène médical sans ventilation adéquate; des gaz industriels dissolvants de nettoyage, des vapeurs d'essence, etc.;

17. Ne déposez pas de piles dans vos déchets ménagers.

- 18. Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur dans ce cas.

19. Pour le MATERIEL RACCORDÉ PAR PRISE DE COURANT, le socle de prise de courant doit être installé à proximite du matériel et doit être aisement accessible.

- 20. **ATTENTION:** Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour le téléphone. N'utilisez que les piles rechargeables ou les piles de recharge (BT183642/87283642). N'incinérez pas les piles. Celles-ci risquent d'explorer. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

• Évitez d'utiliser la batterie dans les conditions suivantes:

- Des températures extrêmes faibles ou élevées auxquelles une batterie peut être soumise pendant l'utilisation, le stockage ou le transport;

- Remplacement d'une batterie par un type incorrect pouvant supprimer une protection;
- mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une explosion;
- maintien d'une batterie dans un environnement à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammable;
- batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammable;
- N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension seraient inappropriées risque d'endommager sérieusement le produit et mettre votre sécurité en péril.
- 22. La plaque de noms appliquée se trouve au bas ou près du produit.

CONSERVEZ CES INSTRUCTIONS

Pile

- N'utilisez que la pile incluse ou l'équivalent. Pour commander une pile de recharge, visitez notre site Web au www.vtechphones.com, ou composez le 800-595-9511.
- Au Canada, allez sur phones.vtechcanada.com ou composez le 800-267-3737.
- Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus auprès des autorités locales.
- N'ouvrez pas et ne manipulez pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est toxique si avalé.
- Soyez prudent lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux conducteurs.
- Recharger la pile incluse avec ce appareil, selon les instructions et limites spécifiées dans ce guide d'utilisation.

Stimulateurs cardiaques implantés dans l'organisme

- Les stimulateurs cardiaques (applicable uniquement aux téléphones numériques sans fil): L'organisme "Wireless Technology Research, LLC (WTR)", une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues des États-Unis, la firme WTR recommande aux médecins:

Avis aux détenteurs de stimulateurs cardiaques

- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.
- Ils doivent utiliser le téléphone sans fil en l'appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

A propos des téléphones sans fil

- Alimentation électrique: Les deux caractéristiques qui constituent les avantages pour les téléphones sans fil affichent également des restrictions. Les téléphones sans fil transmettent et reçoivent les signaux radio dans le socle de l'unité radio. Il y a donc la possibilité que vos conversations téléphoniques soient suivies par des équipements de réception radio trouvés dans la partie du combiné sans fil. Pour cette raison, nous ne devons pas percevoir les communications téléphoniques sans fil comme étant aussi confidentielles.
- Alimentation électrique: Le socle de ce téléphone sans fil doit être branché à une prise électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne pourront pas être effectués du combiné sans fil si le socle est débranché ou mis hors tension ou si le courant est coupé.
- Possibilité d'interférence aux téléviseurs: Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux autres appareils électroniques. Pour éviter ou prévenir de telles interférences, ne placez pas le socle du téléphone sans fil près sur un téléviseur ou un magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possiblement les interférences.
- Piles rechargeables: Manipulez les piles avec soin afin de ne pas les court-circuiter avec des bagues, bracelets ou clés. Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité adéquate entre la pile et le chargeur.
- Bloc-piles rechargeables à l'hydride métallique de nickel: Jetez ces blocs-piles de manière écologique et sécuritaire. Ne les incinérez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées.

The RBRC® seal

- The RBRC® seal on the nickel-metall hydride battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada. The RBRC® program provides a convenient alternative to placing nickel-metall hydride batteries in the trash or municipal waste, which may be illegal in your area.
- VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY® for information on Ni-MH battery recycling and disposal bans/restrictions in your area.
- VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC® and 1 (800) 8 BATTERY® are registered trademarks of Call2recycle, Inc.

FCC, ACTA and IC regulations

FCC Part 15

- This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CELL 1	<ul style="list-style-type: none"> Light on when the bluetooth device is paired and active. Flashes when bluetooth is activated and ready to pair. 	<ul style="list-style-type: none"> Press VOL- to decrease the listening volume during a call or message playback. Press VOL+ to decrease the telephone base ringer volume when the base is not in use.
	<ul style="list-style-type: none"> Light on when the bluetooth device is paired and active. Flashes when bluetooth is activated and ready to pair. 	<ul style="list-style-type: none"> Press REPEAT to repeat the playing message. Press twice to play the previous message.
CELL 2	<ul style="list-style-type: none"> Press PLAY/STOP to skip to the next message. 	<ul style="list-style-type: none"> Press PLAY/STOP to play messages. Press PLAY/STOP to stop playing messages.
REPEAT		

Handset display icons

	The handset battery is low and needs charging.
	The handset battery is charging.
	The handset battery is fully charged.
	The ECO mode activates automatically to reduce power consumption when the handset is within range of the telephone base.
	New voicemail received from your telephone service provider.
	Displays when Home line is in use.
	Bluetooth device is paired and active.
	Bluetooth device / Cell line is in use.
	There are new caller ID log entries
	Answering system is on.
	Time with AM and PM.
	Handset ringer is off.

NOTES

- If you have subscribed to caller ID service, then you can use the Smart call blocker feature to screen incoming calls.
- The screening feature of Smart call blocker is applicable to incoming home calls only. All incoming cell calls will get through and ring. If you want to block a cell call, add the number to the block list.

Turn Smart call blocker on or off

Smart call blocker is set to on and allows all incoming calls by default. To turn on or off Smart call blocker:

- Press **MENU SELECT** to enter the main menu in idle.
- Press **▲/▼** to scroll to **Smart call blk**, and then press **MENU SELECT**.
- Press **▲/▼** to scroll to **SCB On/Off**, and then press **MENU SELECT**.
- Press **▲/▼** to scroll to **On** or **Off**, and then press **MENU SELECT**.

If you turn off Smart call blocker, all incoming calls will ring, including those in your block list.

Set up allow list/ block list/ start name list

Add numbers manually

- Press **MENU SELECT** to enter the main menu in idle.
- Press **▲/▼ → Smart call blk → MENU SELECT**

Adding a new number to the block list	<ol style="list-style-type: none"> Press ▲/▼ → Block list → MENU SELECT Press ▲/▼ → Add new entry → MENU SELECT Enter a telephone number (up to 30 digits), and then press MENU SELECT Enter a name (up to 15 characters), and then press MENU SELECT Repeat Step 4 to add another contact.
Adding a new number to the allow list	<ol style="list-style-type: none"> Press ▲/▼ → Allow list → MENU SELECT Press ▲/▼ → Add new entry → MENU SELECT Enter a telephone number (up to 30 digits), and then press MENU SELECT Enter a name (up to 15 characters), and then press MENU SELECT Repeat Step 4 to add another contact.
Adding a new name to the star name list	<ol style="list-style-type: none"> Press ▲/▼ → Star name list → MENU SELECT Press ▲/▼ → Add new entry → MENU SELECT Enter a name (up to 15 characters), and then press MENU SELECT Repeat Step 4 to add another contact.

MSG # 10/16	<ul style="list-style-type: none"> Handset displays the current message number being played and the total number of new/old messages recorded.
Base display	
IN USE	<ul style="list-style-type: none"> Flashes quickly when there is an incoming call. Flashes when another telephone sharing the line is in use. On when the line is in use.
CHARGE	<ul style="list-style-type: none"> On when the handset is charging in the telephone base or charger.
8.8.	<ul style="list-style-type: none"> Shows the number of messages, and other information of the answering system or telephone base.

Configure your phone

Set the date and time

- Press **MENU SELECT** to enter the main menu in idle.
- Press **▲/▼** to scroll to **Set date/time**, and then press **MENU SELECT**.
- Press **▲/▼** to scroll to select the month, and then press **MENU SELECT**.
- Press **▲/▼** to scroll to select the date, and then press **MENU SELECT**.
- Press **▲/▼** to scroll to select the year, and then press **MENU SELECT**.
- You can also use dialing keys to enter 2-digit number for month, date, and year.
- Press **▲/▼** to scroll to select the hour, and then press **MENU SELECT**.
- Press **▲/▼** to scroll to select the minute, and then press **MENU SELECT**.
- Press **▲/▼** to scroll to select **AM** or **PM**.
- Press **MENU SELECT** to save the settings.

Set handset LCD language

- Press **MENU SELECT** to enter the main menu in idle.
- Press **▲/▼** to scroll to **Settings**, and then press **MENU SELECT**.
- Press **MENU SELECT** again to select **LCD language**.
- Press **▲/▼** to scroll to **English, Français or Español**, and then press **MENU SELECT**.
- Press **MENU SELECT** to save your selected language.

If you accidentally change the LCD language to French or Spanish, you can reset it to English easily by pressing **MENU** then entering ***364#**.

Set handset ringer

- Press **MENU SELECT** to enter the main menu in idle.

Add numbers from caller ID log

- Press **cid** to enter the caller ID log in idle.
- Press **▲/▼** to locate the desired entry → **MENU SELECT**.

Adding CID log entry to block list	3. Press ▲/▼ → To Block list → MENU SELECT 4. Press MENU SELECT twice.
Adding CID log entry to allow list	3. Press ▲/▼ → To Allow list → MENU SELECT 4. Press MENU SELECT twice.
Adding a new name to the star name list	3. Press ▲/▼ → To Star name list → MENU SELECT 4. Press MENU SELECT twice.

Call controls

Call categories		Call control and options
Unwelcome calls	Numbers saved in block list.	The telephone blocks these calls from ringing through.
Welcome calls	<ul style="list-style-type: none"> Numbers saved in allow list. Numbers saved in phonebook. Numbers not found in block list. Caller ID names saved in start name list. 	<ul style="list-style-type: none"> The telephone allows these calls to get through and ring. All incoming cell calls will get through and ring by default. If you want to block a cell call, then you need to add its number to the block list.

- Press **▲/▼** to scroll to **Ringers**, and then press **MENU SELECT**.

- Press **▲/▼** to scroll through **Home volume, Home ringtone, Cell volume, and Cell ringtone**.

Ringer volume

After you selected **Home volume** or **Cell volume**:

- Press **▲/▼** to adjust the volume level, and then press **MENU SELECT**.
- If you want the Ringer off, press **▼** all the way till you see

Ringtone

After you selected **Home ringtone** or **Cell ringtone**:

- Press **▲/▼** to select your preferred ringtone among 10 melodies.
- Press **MENU SELECT** to save.

Bluetooth Setup

To use a Bluetooth enabled cell phone with your VS122-16, you must first pair and connect it with the telephone base. The VS122-16 telephone base and all system handsets can be used to make or answer calls on the cell phone line. Bluetooth wireless technology operates within a short range (a maximum of approximately 30 feet). When you pair a Bluetooth cell phone to the telephone base, make sure your Bluetooth cell phone is close to the telephone base to maintain sufficient signal strength. For optimal performance, keep your cell phone within 15 feet of the telephone base while using the cell line.

Add a cell phone

- Press and hold or on the base to activate Bluetooth pairing.

The light starts flashing when the base is ready to pair.

- Turn on the Bluetooth of your cell phone to scan for **VTech DECT 6.0**.

Your cell phone will prompt and ask you whether to pair with it. Press **OK** to confirm.

- Once paired, the light of or on the base illuminate, and or displays on the handset.

The steps for the pairing process may vary for different cell phones. If this happens, follow the prompts on your cell phone and your VS122-16 to complete the pairing process.

Auto connection

Cell phone(s) may disconnect from the base when:

- Your cell phone's Bluetooth feature is off.
- Your cell phone is power off.
- Your cell phone is out of range from the telephone base.

Make sure your cell phone and its Bluetooth feature is on, then move it closer to the base. The base will reconnect automatically.

Review cell device list

- Press **MENU SELECT** to enter the main menu in idle.

- Press **▲/▼** to scroll to **Bluetooth**, and then press **MENU SELECT**.

- Press **▲/▼** to scroll to **Download PB**, and then press **MENU SELECT**.
- Select a device displays briefly.
- Press **▲/▼** to scroll to your preferred device, and then press **MENU SELECT**.
- During the download, the handset flashes **Downloading...**.
- When the process is complete or when the memory is full, the handset displays **Entries added: XXX**.

TIPS

- Certain cell phones do not support SIM card download. If this is the case, try transferring the contacts from your SIM card to your cell phone memory first, then download from your cell phone memory. For more information on how to transfer contacts from your SIM card to your cell phone memory, see the user's manual of your cell phone.
- When downloading the directory from your Bluetooth enabled cell phone, some data may not transfer. For example, if you have home, mobile and work numbers for a particular contact, the three categories may not transfer to your VS122-16.
- For certain cell phones, you may need to press a key on your cell phone to confirm the directory download.

Smart call blocker* (SCB)

Smart call blocker filters robocalls and unwanted calls for you, while allowing welcome calls to get through. For other unknown home calls, you can block, screen, or forward these calls to the answering system.

With Call screening active, Smart call blocker screens and filters all incoming home calls from numbers or names that are not saved in your Phonebook, Block list, or Star name list. You can easily add incoming phone numbers to your Block list. This allows you to build up your lists of allowed and blocked numbers, and Smart call blocker will know how to handle these calls when they call again.

Set profile

There are 5 profile setting options, which allows you to quickly set up Smart call blocker.

- Press **MENU SELECT** to enter the main menu in idle.
- Press **▲/▼ → Smart call blk → MENU SELECT**.
- Press **▲/▼ → Set profile → MENU SELECT**.

Set profile

Screen unknown	Steps
Screen unknown	4. Press ▲/▼ → Screen unknown → MENU SELECT .
Screen robocall	4. Press ▲/▼ → Screen robocall → MENU SELECT .
Allow unknown	4. Press ▲/▼ → Allow unknown → MENU SELECT .
Unknown to Ans.S	4. Press ▲/▼ → Unknown to Ans.S → MENU SELECT .
Block unknown	4. Press ▲/▼ → Block unknown → MENU SELECT .

Add a screened number to the block list or allow list

If you select Screen unknown or Screen robocall in Set profile, the telephone plays a screening announcement to the caller, and asks the caller to respond before the call rings through to you. After the caller responds, the telephone rings and you can then pick up the call. The telephone then asks whether you want to answer or reject the call, or to forward the call to the answering system. The telephone announces "To answer the call, press 1. To answer and always allow this number, press 2. To block this number, press 3. To send this call to the answering system, press 4.".

- <table border="1" style="width: 100%; border-collapse: