vtech

USB 7200 Quick Start Guide

Dual Line PC Internet Phone



Parts Checklist

Remember to save your sales receipt and original packaging in case you ever need to ship your telephone for warranty service. Check to make sure the telephone packaging includes the following:

- 1. Telephone Base
- 2. Telephone Handset
- 3. Battery Compartment Cover
- 4. Batteries
- 5. Belt Clip

- 6. AC Adapter
- 7. USB Cable
- 8. Telephone Cable
- 9. VTech CDROM Software and User Documentation
- 10. Quick Start Guide









Battery compartment cover





vtech

Batteries (2)



Telephone handset





Quick S tart Guide

Installing Handset Batteries

1. Insert the supplied batteries in to the handset.




Caution: Do not use alkaline batteries.

Use only the batteries that came with your telephone. To purchase replacement batteries, visit us on the web at www.vtechphones.com or call our Customer Support Center at 888-347-2005.

- 2. Replace the battery cover by sliding it upwards.
- 3. Place the handset in the base to charge the batteries. Charge the batteries for at least 15 hours before first use.


Note: The LCD will be blank until the batteries are charged enough to activate it.

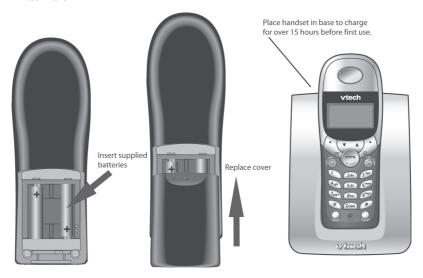

Installing the Telephone Base

Install the base as shown in the diagram below. Choose a location away from electrical equipment, such as television sets or microwave ovens. Avoid excessive heat, cold, dust or moisture.

After connecting the telephone base to an available USB port on your computer, Windows® will automatically detect and install the appropriate drivers.

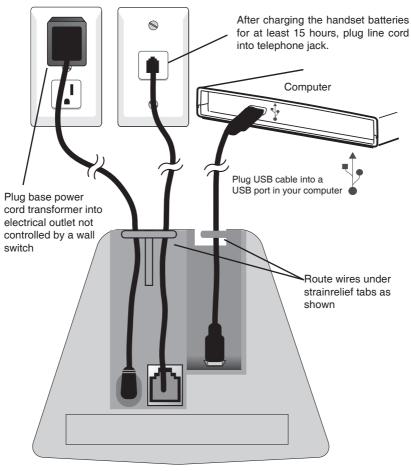


Underside of telephone base

Installing the Software

Before continuing, make sure the batteries in the handset are fully charged.


- Insert the CDROM and wait for the opening screen to be displayed.
 If the software installation program does not automatically start, you will need to launch it manually. From your desktop, double click My Computer, double click your CD-ROM Drive, and then double click "vtech_broad band 7200.exe".
- 2. Click the Begin Installation button.

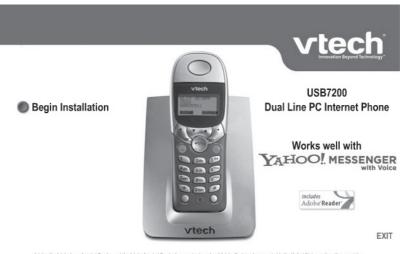

Adobe, the Adobe logo, Acrobat Reader, and the Adobe Acrobat Reader logo are trademarks of Adobe Systems Incorporated in the United States and/or other countries. Yahoo! and the Yahoo! logo are registered trademarks of Yahoo! Inc.

© 2005 VTech Communications, inc. All rights reserved. V1.0

- 3. Click the button to download and install Yahoo! Messenger with Voice (Internet access is required.) Instructions to download the software and start the installation are provided on the web page. Follow the instructions in the Setup Wizard to complete the installation. The first time Yahoo! Messenger is launched you will have the option to create an account, if you don't already have one.
- 4. After completing the Yahoo! Messenger with Voice installation, click the button to download and install the VTech Cordless Phone Suite software (Internet access is required.) Instructions to download the software and start the installation are provided on the web page.

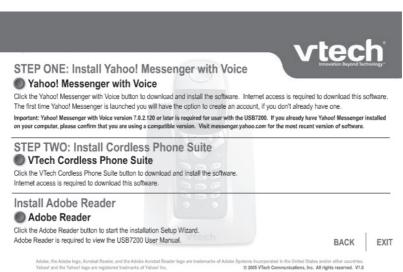

Adobe Reader is required to view the USB7200 User Manual. It is likely


Adobe Reader is required to view the USB7200 User Manual. It is likely that you already have it installed on to your computer. If you don't, click the Adobe Reader button to start the Setup Wizard. Follow the instructions on screen to complete the installation.

5. Click **Exit** to close the Installation CD screen.

Once the applications have been installed, Yahoo! Messenger with Voice will alert you that the USB phone connected to it. You can click the X to close this window, or wait a few seconds for it to close automatically.



The Cordless Phone Suite Software will display the status of the USB7200. All items checked means the phone is ready to use. From the Cordless Phone Suite software, you can find the user manual and check for software updates.

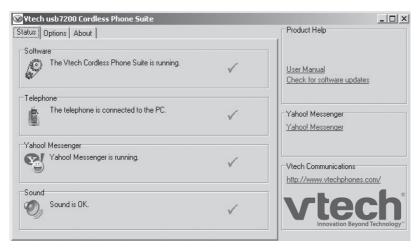

Handset Quick Reference Guide



During a call, press to hang up. While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.