





## Mount the baby monitor

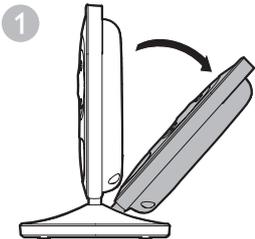


Adjust the baby unit angle.

**note** Check for reception strength and camera angle before drilling the holes.

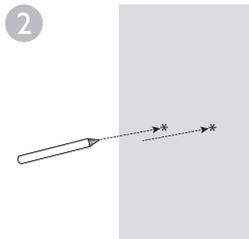


Use a pencil to mark two holes in parallel. Make sure they are the same distance apart as the wall mount at the bottom of the baby unit.

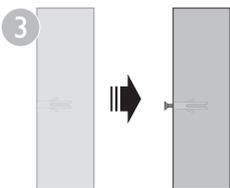

Drill two holes in the wall (7/32" drill bit). If you drill the holes into a stud, insert the screws into the holes.

Tighten the screws until only 1/4 inch of the screws are exposed.

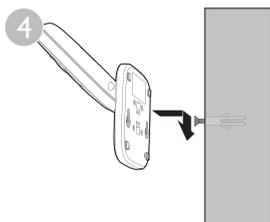

Align the holes on the wall mount with the screws on the wall.

Slide the wall mount down until it locks into place.

Go to [www.vtechphones.com](http://www.vtechphones.com) to register your product for enhanced warranty support and latest VTech product news.

VM311  
VM311-13  
VM311-2  
VM311-23  
VM310  
VM310-13



# vtech®


Installation guide



Specifications are subject to change without notice.  
© 2014 VTECH TELECOMMUNICATIONS LTD.  
All rights reserved. 02/14. VM311\_IG\_V2.0  
Document order number: 96-009904-010-100



## Parts checklist

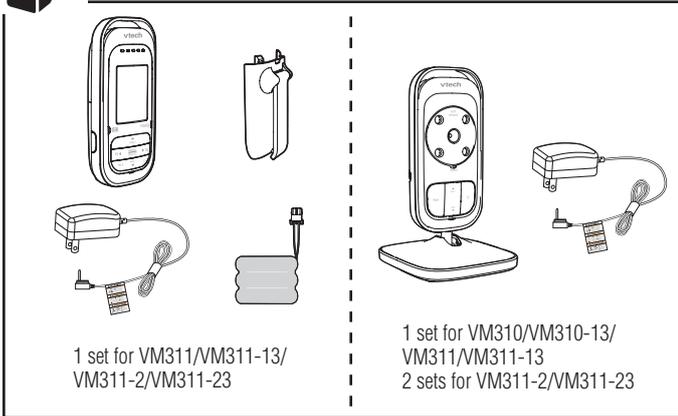

## Required parts and tool



x 2



x 2




x 1

**note** *Parts and tool are not included, and are required to purchase separately.*



## Place the baby monitor

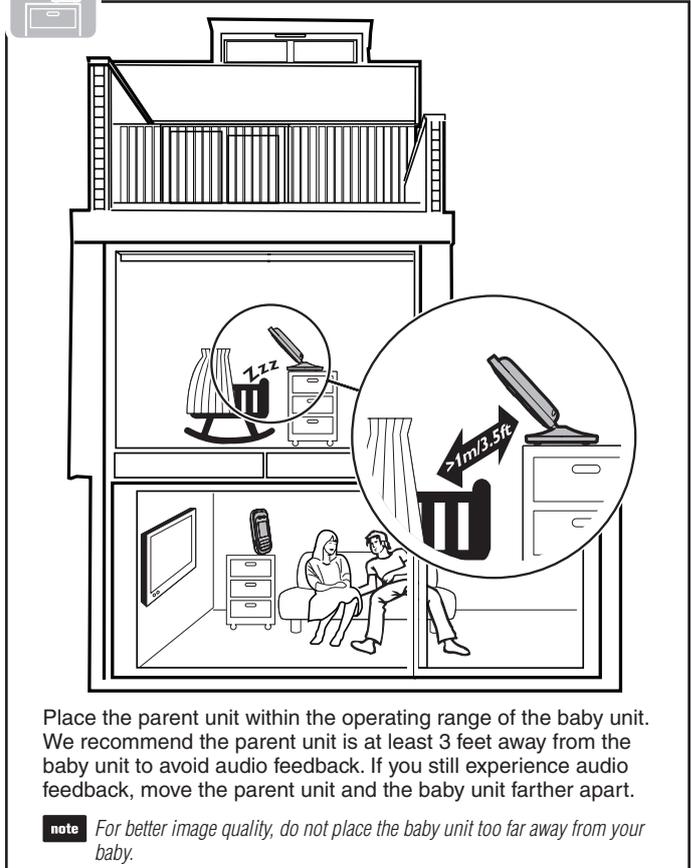

Place the parent unit within the operating range of the baby unit. We recommend the parent unit is at least 3 feet away from the baby unit to avoid audio feedback. If you still experience audio feedback, move the parent unit and the baby unit farther apart.