

Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

VM342
VM342-2

Full Color Video Monitor
with Wide-Angle Lens

BC



vtech
User's manual


CONGRATULATIONS



on purchasing your new VTech product. Before using this product, please read **Important safety instructions**.

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature-rich VTech product.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.

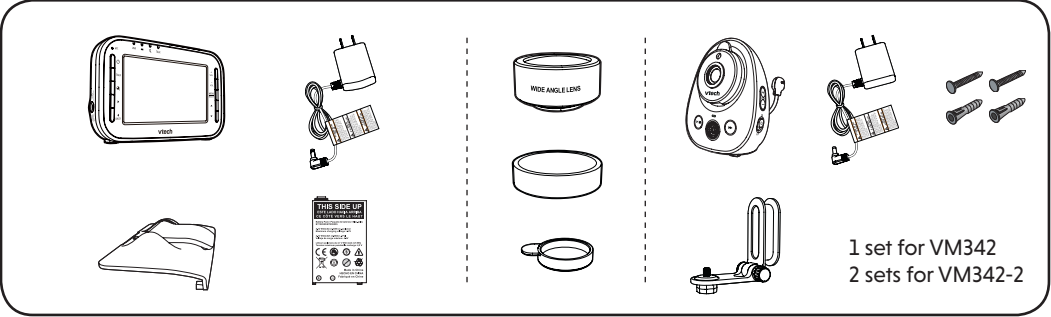WHAT'S IN THE BOX



		Document order number: 91-010040-090-100 © 2007 VTech Communications, Inc. C18 V9 All rights reserved. All other trademarks are the property of their respective owners. Specifications are subject to change without notice.
		
Credits:		
The <i>Background Noise</i> sound file was created by Caroline Ford, and is used under the Creative Commons license.		
The <i>Stream Noise</i> sound file was created by Caroline Ford, and is used under the Creative Commons license.		
The <i>Crickets At Night</i> sound file was created by Mike Koenig, and is used under the Creative Commons license.		
The <i>Heard Bear</i> sound file was created by Zarabeden, and is used under the Creative Commons license.		
Channels		32
LCD		4.3" Color LCD (WQVGA 480 x 272 pixel)
Nominal effective range		Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirements		Parent unit: 3.7V Li-polymer battery Baby unit power adapter: Output: 6V DC @ 600mA Parent unit power adapter: Output: 5V DC @ 1A
Frequency control		Crystal controlled PLL synthesizer Baby unit: 2405 - 2475 MHz Parent unit: 2405 - 2475 MHz

TECHNICAL SPECIFICATIONS

STORAGE

- Make sure the baby unit and parent unit are dry before you connect them to the mains again.
- DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.
- Clean with a soft cloth.
- Avoid dropping the product or treating it roughly.
- DO NOT expose it to direct sunlight or moisture.
- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).

To keep this product working well and looking good, follow these guidelines:

GENERAL PRODUCT CARE


1 CONNECT AND CHARGE THE BATTERY

Install the parent unit battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, keep the parent unit connected to AC power. With the battery alone, the parent unit can cordlessly run for a short time only.

NOTES

- Use only the battery supplied with this product.
- If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

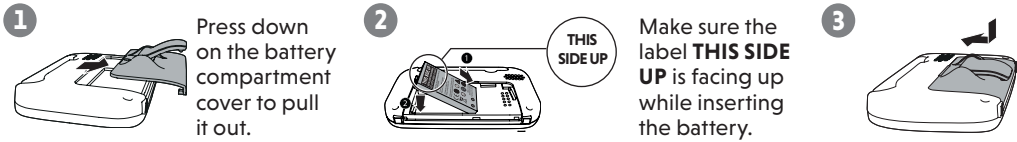


Replace the battery

To replace the battery, press down on the battery compartment cover and pull it out, then follow the steps above to install the battery.

Connect the baby monitor

NOTES

- Use only the power adapters supplied with this product.
- Make sure the baby monitor is not connected to an electric outlet that is controlled by a switch.
- Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

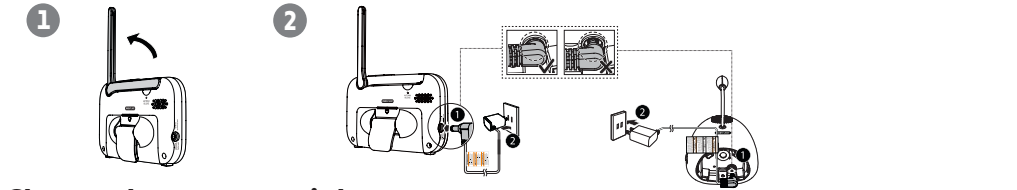

Charge the parent unit battery

When you have connected the parent unit and installed its battery for the first time or after power outage, the parent unit powers on automatically. The battery icon indicates the battery status (see the following table).

NOTES

- The parent unit battery is fully charged after 3 hours of continuous charging.
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

BATTERY INDICATORS	BATTERY STATUS	ACTION
The battery icon is off and displays	No battery is installed but operates using AC power, or the battery has been installed incorrectly.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
The screen displays Battery low at Parent unit and . The light flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid .	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

2 BEFORE USE

NOTE

- This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

Test your baby monitor

You may test the baby monitor before initial use, and at regular times thereafter.

CAUTION

- For hearing protection, make sure the parent unit is more than 3 feet (1 meter) away from both baby units. If you hear any high-pitched noise, move the parent unit further until the noise stops. You can also press on the parent unit to reduce the noise.

1. Make sure your baby unit and parent unit are on.
2. The parent unit displays images from the baby unit.
 - Speak towards the microphone of the baby unit. You will hear the sound at the parent unit.
3. If you have two baby units, press **VIEW** on your parent unit. The screen switches to the other baby unit. Then, repeat step 2.

NOTE

- When the parent unit displays and then **No Link to CAM #** (# represents the baby unit number), and the **LINK** LED light flashes, move the parent unit closer to the baby unit (observe the minimum distance of 3 feet / 1 meter).

TIP

- Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the baby units.

Positioning the baby monitor


CAUTION

- Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's crib or playpen.

NOTE

- To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 meter) away from devices such as wireless routers, microwaves, cell phones and computers.

1. Place the baby unit more than 3 feet (1 meter) away from your baby.
2. Adjust the angle of the baby unit camera to aim at your baby.
3. Bend down the temperature sensor so that it stays away from baby unit to avoid deviation of temperature detection.
4. Place the parent unit more than 3 feet (1 meter) away from the baby units to avoid screeching noise.

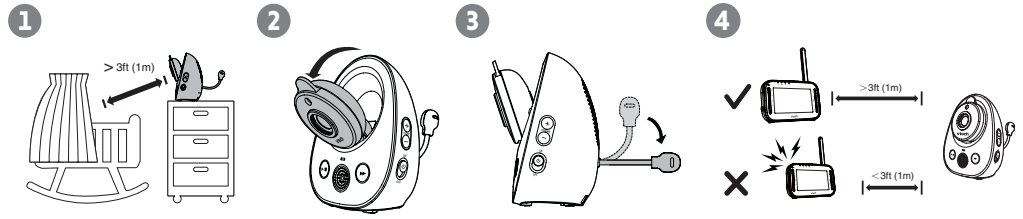

CAUTION

- The default volume of your parent unit is level 4, and the maximum volume is level 7. If you experience high-pitched screeching noise from your baby monitor while positioning:
 - Make sure your baby unit and parent unit are more than 3 feet (1 meter) apart, OR
 - Lower the volume of your parent unit.

Operating range

The operating range of the baby monitor is up to 1000 feet (300 meters) outdoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

3 USING THE BABY MONITOR

Power on or off the baby unit

- Slide the **ON/OFF** switch to **ON** to turn on the baby unit. The **ON/OFF** LED light turns on.
- Slide the **ON/OFF** switch to **OFF** to turn off the baby unit. The **ON/OFF** LED light turns off.

Power on or off the parent unit

- Press and hold to turn on the parent unit. The screen turns on.
- Press and hold again to turn off the parent unit. The screen turns off.

Turn on or off the parent unit screen

You can turn on or off the parent unit screen without powering off the parent unit. You can still hear sound from the baby units.

- Press and hold **LCD ON/OFF** on the parent unit to turn off the screen.
- Press any keys on the parent unit to turn on the screen again.

Adjust speaker volume

To adjust parent unit speaker volume:

- Press or on the parent unit at any time when viewing images.

To adjust baby unit speaker volume:

The baby unit speaker volume determines the lullaby volume and talkback volume transmitted from parent unit.

- Press + **VOLUME** - on the baby unit to adjust the speaker volume.

Lullaby

The baby monitor has five lullabies and four soothing sounds for you to comfort your baby.

To play lullabies or soothing sounds on the baby unit:

- Press on the baby unit to play lullaby.
- Press on the baby unit to play the next lullaby.
- Press again to stop the lullaby.
- Press + **VOLUME** - to adjust the volume level of the lullaby on the baby unit.

TIP

- When the lullaby stops, press again to replay.

Set alert tone

Low battery tone

You can set the parent unit to beep when the parent unit operates in low battery condition.

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Alert Tone**, then press **SELECT**.
3. Press **SELECT** again to choose **Low Battery Tone**.
4. Press or to choose **On** or **Off**, then press **SELECT** to confirm your selection.

No link alert

You can set the parent unit to beep when the link between the parent unit and the baby unit is lost.

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Alert Tone**, then press **SELECT**.
3. Press or to choose **No Link Alert**, then press **SELECT**.
4. Press or to choose **On** or **Off**, then press **SELECT** to confirm your selection.

Sound alert in split-view

You can turn on the sound alert feature so that, while in **SPLIT** mode, the parent unit beeps and displays **Sound detected at CAM #** whenever the baby unit detects sounds.

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Alert Tone**, then press **SELECT**.
3. Press or to choose **Sound Alert in SPLIT-view**, then press **SELECT**.
4. Press or to choose **On** or **Off**, then press **SELECT** to confirm your selection.

NOTE

The sound alert feature is only available in **SPLIT** mode.

Monitor the temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature sensor. If the detected temperature is out of the preset temperature range, the parent unit will display an alert message.

Set temperature range

You can set the desired room temperature alert range. The minimum temperature can be set between **52 °F (11 °C)** and **69 °F (20 °C)**. The maximum temperature can be set between **70 °F (21 °C)** and **86 °F (30 °C)**.

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Temperature**, then press **SELECT**.
3. Press or to choose **Minimum** or **Maximum**, then press **SELECT**.
 - If you have two baby units, the system prompts you to choose the desired baby unit or both baby units, press or to choose **ALL CAM** or **CAM #**, then press **SELECT**.
4. Press or to choose the desired minimum or maximum temperature, then press **SELECT** to confirm your selection.

Temperature alert tone

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range.

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Temperature**, then press **SELECT**.
3. Press or to choose **Alert tone**, then press **SELECT**.
 - If you have two baby units, the system prompts you to choose the desired baby unit or both baby units, press or to choose **ALL CAM** or **CAM #**, then press **SELECT**.

Set the language

You can select a language (English, French or Spanish) to be used in all screen displays.

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Language**, then press **SELECT**.
3. Press or to choose **English**, **Français** or **Español**, then press **SELECT** to confirm your selection.

Adjust LCD brightness

You can change the brightness of the parent unit screen from **Level 1** to **Level 5**. The LCD brightness is preset to **Level 3**.

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **LCD**, then press **SELECT**.
3. Press **SELECT** again to choose **Brightness**.
4. Press or to choose the desired level of brightness, then press **SELECT** to confirm your selection.

Turn on and off the dim mode

The dim mode is preset to on to help you save the parent unit power. Your parent unit display will dim automatically after 10 minutes of inactivity, in which there is neither key pressed nor alert received from the baby unit.

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **LCD**, then press **SELECT**.
3. Press or to choose **Dim mode**, then press **SELECT**.
4. Press or to choose **On** or **Off**, then press **SELECT** to confirm your selection.

NOTE

- While the screen is dimmed, any keypress or alert message will trigger the screen to return to the preset brightness level. After 10 minutes of inactivity, it will dim again.


Monitoring mode * for VM342-2 only

Every time the parent unit is turned on, it displays a baby unit in **SINGLE-CAM** mode. If there are two baby units in your system, you can also monitor your baby in **PATROL** or **SPLIT** mode.

SINGLE-CAM	The screen displays image of a single baby unit in full screen.
PATROL	A single cam view that transitions to a different baby unit every 10 seconds.
SPLIT	The screen displays all baby units.

In SINGLE-CAM or PATROL mode:

- Press **VIEW** to view the next baby unit.

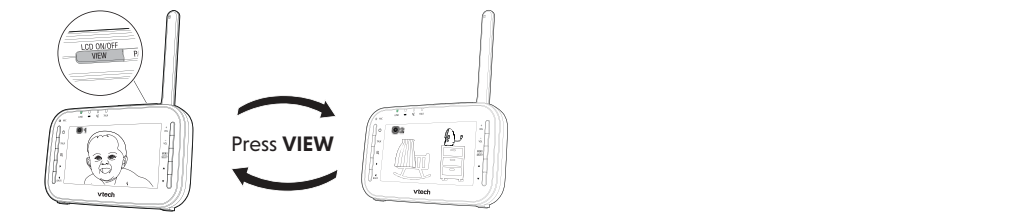

4. Press or to choose **On** or **Off**, then press **SELECT** to confirm your selection.

Temperature format

You can choose to display the temperature in Fahrenheit (°F) or Celsius (°C).

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Temperature**, then press **SELECT**.
3. Press or to choose **Format**, then press **SELECT**.
4. Press or to choose "F" or "C", then press **SELECT** to confirm your selection.

Rename the baby unit

You can rename the baby unit. Once the baby unit is renamed, its new name together with the baby unit number will appear in the sub-menu of below options:

- VOX Sensitivity
- Rename
- Temperature

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Rename**, then press **SELECT**.
3. Press or to choose the desired baby unit, then press **SELECT**.
4. Press or to choose the desired name for the baby unit, then press **SELECT** to confirm your selection.

Turn on or off the vibration

You can turn on the vibration feature so that the parent unit vibrates when it receives any of these alerts (after turning on the respective alert tones):

- Sound alert in split-view
- No link alert
- Temperature alert tone

1. Press **MENU** when the parent unit is idle.
2. Press or to choose **Vibration**, then press **SELECT**.
3. Press or to choose **On** or **Off**, then press **SELECT** to confirm your selection.

NOTE

- If the vibration feature is turned on, the parent unit may vibrate as it receives sound broadcast from the baby unit.

NIGHT VISION

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and appears on the screen.


NOTES

- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment.
- When the infrared LEDs are on, the images are in black and white. This is normal.


TIP

- Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the video quality may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.

BABY UNIT OVERVIEW

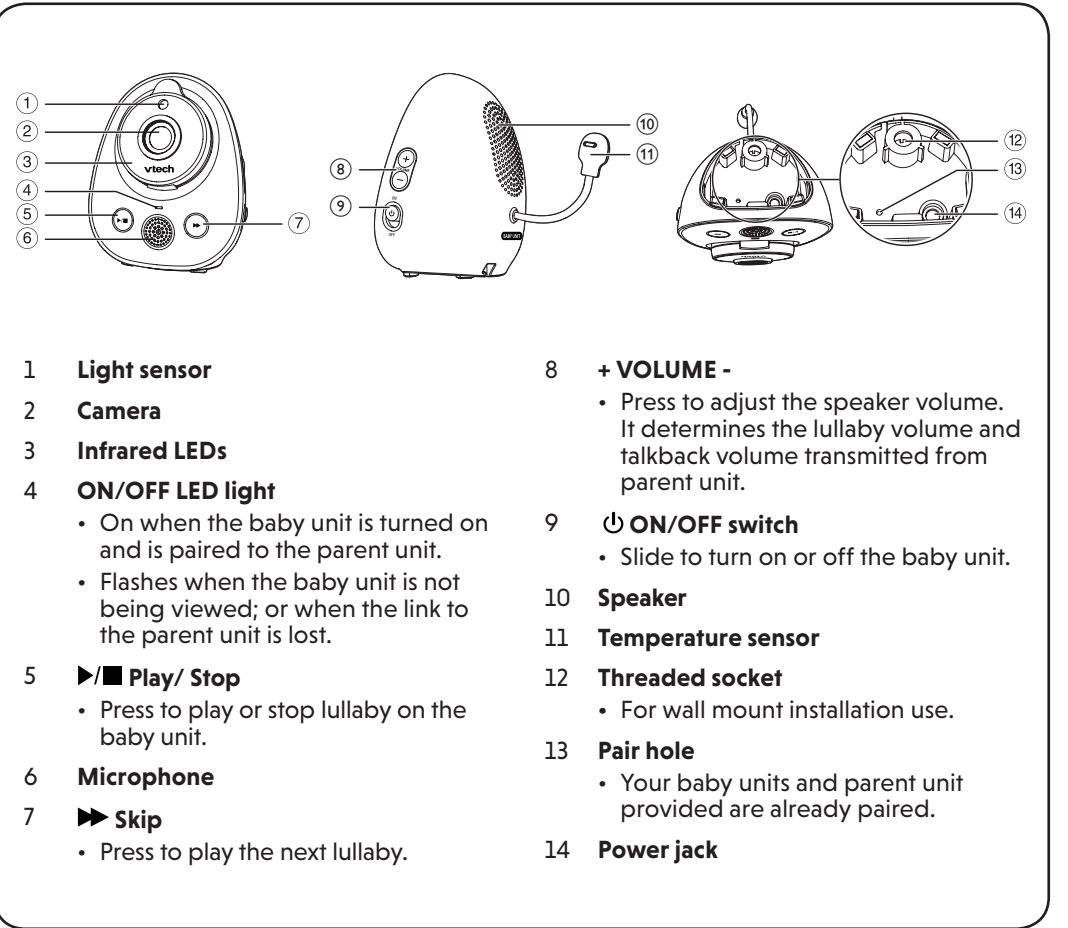

PARENT UNIT OVERVIEW

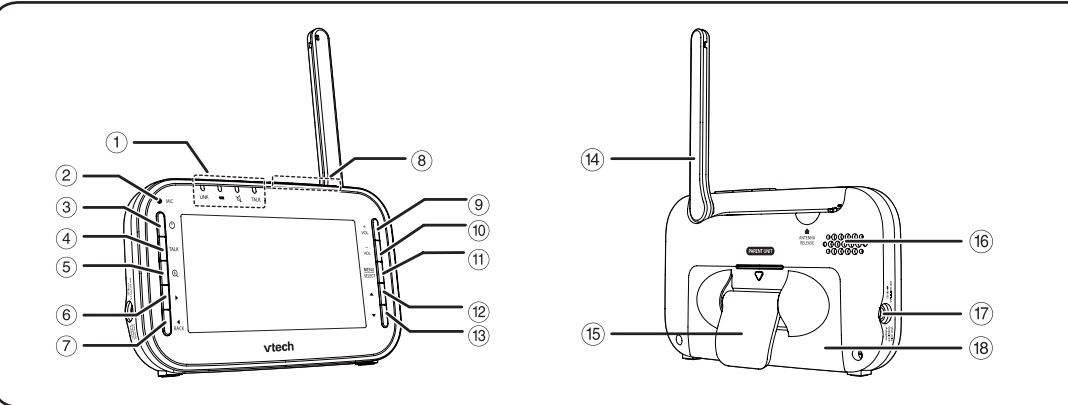

FREQUENTLY ASKED QUESTIONS

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com, or contact 1 (800) 595-9511 for customer service.

Why does the baby monitor not respond normally?

Try the following (in the order listed) for common cure:

1. Disconnect the power to the baby units and the parent unit.
2. Remove the batteries in the parent unit. Then, install the batteries again.
3. Wait a few seconds before connecting power back to the baby units and the parent unit.
4. Turn on the baby units and the parent unit.
5. Wait for the parent unit to synchronize with the baby units. Allow up to one minute for this to take place.

Why don't the power-on of the baby unit and parent unit go on when I switch on the units?

Perhaps the parent unit is not connected to the power. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then, **press and hold** ⏻ to switch on the parent unit and to establish connection with the baby unit.

Why doesn't my parent unit charge while connected to AC power?

Perhaps the baby unit is not connected to the power. Insert the appliance plug into the baby unit and put the adapter in a wall socket. Then, slide the ⏻ ON/OFF switch to **ON** to switch on the baby unit and to establish connection with the parent unit.

Why does the parent unit not respond normally?

Make sure the power is not controlled by a wall switch.

Make sure the battery is correctly installed in your parent unit.

You may have used the battery for a long time. Replace a new battery.

Why is my screen in black and white?

The screen is in black and white during night-time or in a dark room when the night vision feature is activated. This is normal.

Why do I get glare or blurry display on my screen when viewing my baby at night?

During night-time or in a dark room, the surroundings and other interfering factors, like lightings, objects, colors and backgrounds may affect the image quality on your parent unit screen. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.

Why does the baby monitor produce a high-pitched noise?

The parent unit and baby units may be too close to each other.

- Move the parent unit away from the baby units until the noise stops; OR
- Turn down the volume of your parent unit.

Why does the parent unit not respond normally?

The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet).

Why does the parent unit not respond normally?

The parent unit may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to 3 hours.

Why does the parent unit not respond normally?

If your parent unit is in **SPLIT** mode, some of your baby units may detect sounds.

Why does the parent unit not respond normally?

The temperature of your baby's room may be too high or too low.

Why does the parent unit not respond normally?

You may have set the VOX sensitivity level to **Highest** when the sound alert (and vibration) feature is turned on. The parent unit notifies you of all sounds including background noise with beeps (and vibration). Adjust the VOX sensitivity to a lower level.

Why does the parent unit not respond normally?

The baby unit also picks up other sounds than those of your baby. Adjust the VOX sensitivity level to a lower level or lower the parent unit speaker volume.

Why can't I hear a sound/ Why can't I hear my baby cry?

The parent unit speaker volume may be too low. Press **+** to increase the volume.

You may have set a low VOX sensitivity level. See **Adjust the sound sensitivity of the baby unit** to set to a higher level.

Why can't I establish a connection/ Why can't I establish a connection lost every now and then? Why are there sound interruptions?

The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet).


Why can't I establish a connection/ Why can't I establish a connection lost every now and then? Why are there sound interruptions?

Other electronic and wireless products may cause interference with your baby monitor. Try installing your baby monitor as far away from these devices as possible.


Why can't I establish a connection/ Why can't I establish a connection lost every now and then? Why are there sound interruptions?

If you power on only one baby unit, your parent unit may display **▲** and **⚡ No link to CAM #**, and the **LINK** LED light flashes. Press **VIEW** to switch to the baby unit you have powered on.


PARENT UNIT OVERVIEW (Con't)

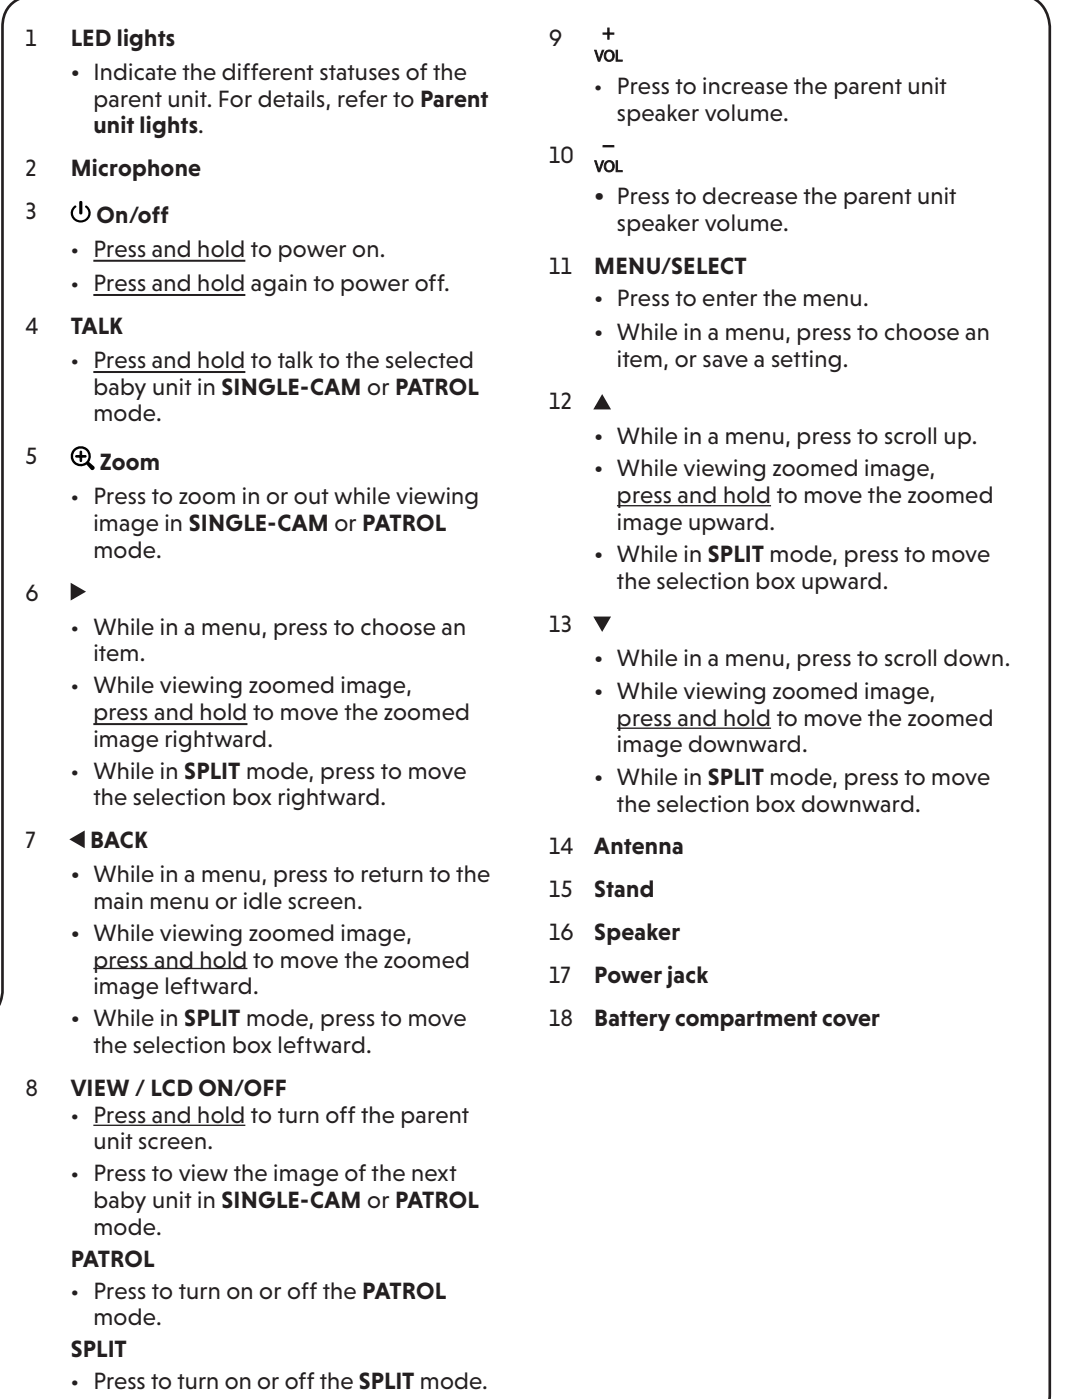



PARENT UNIT ICONS

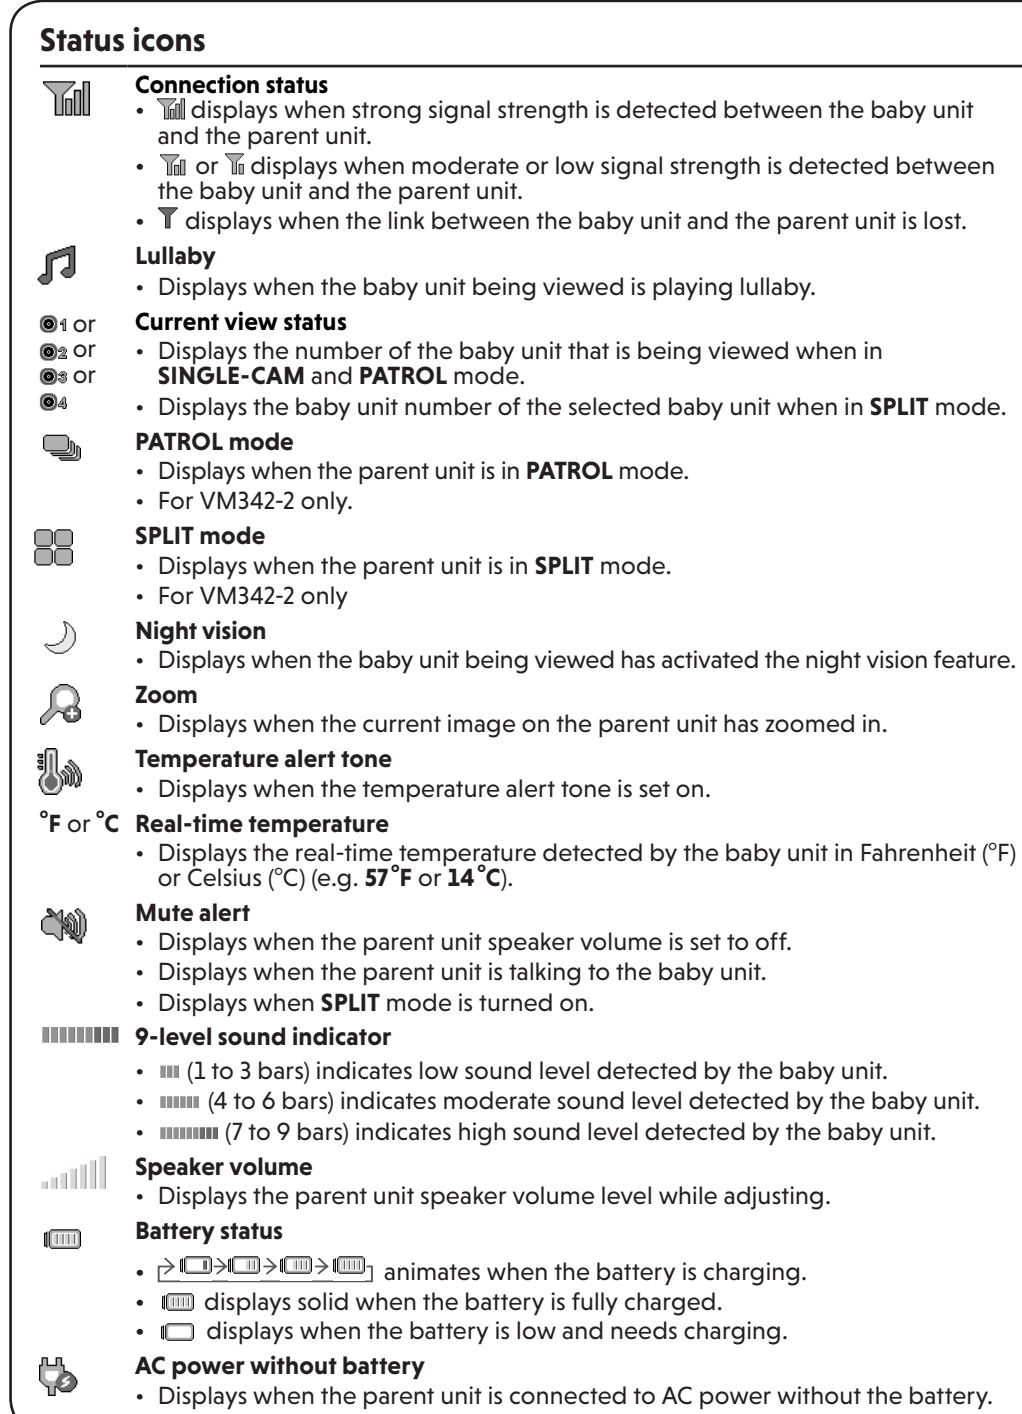


Main menu icons

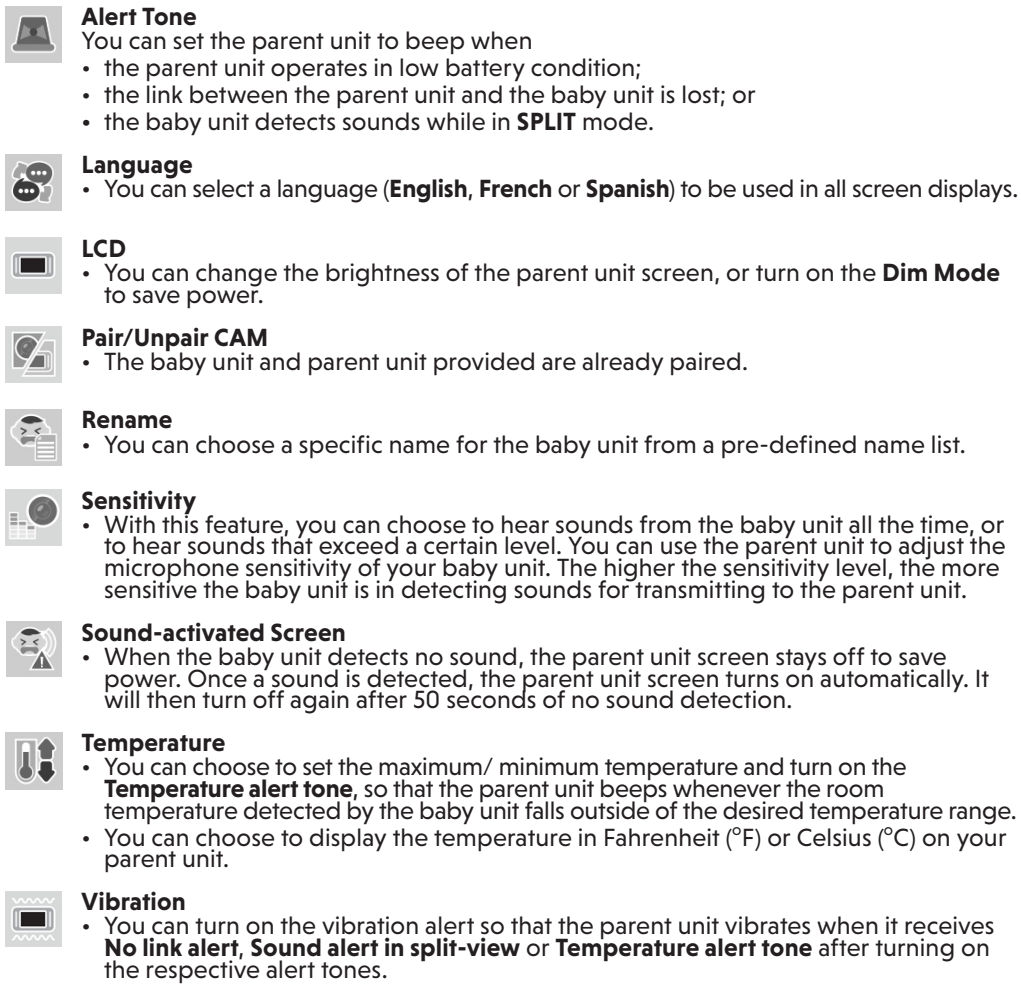

Warning icons and messages

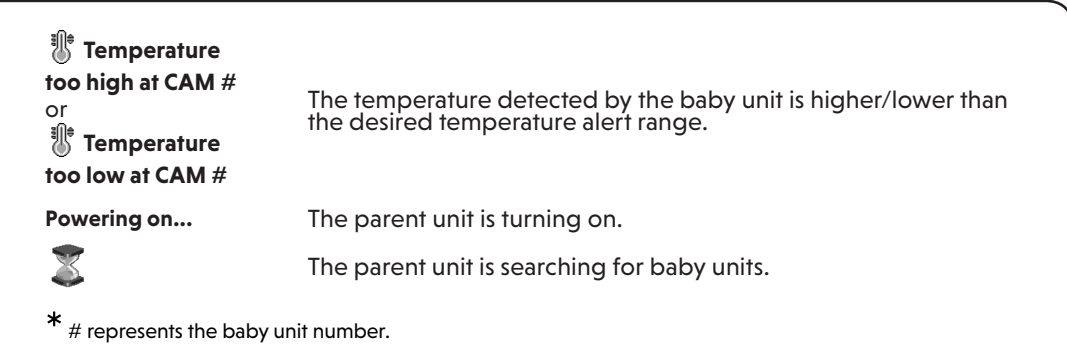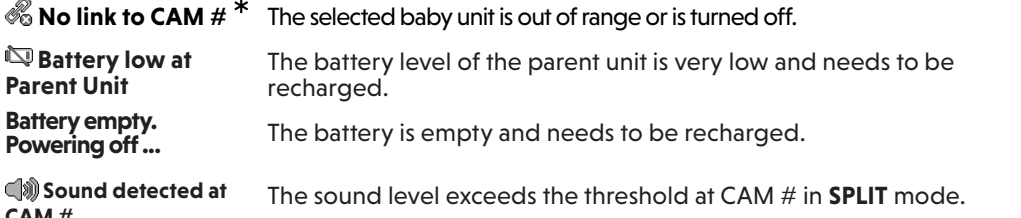

PARENT UNIT LIGHTS

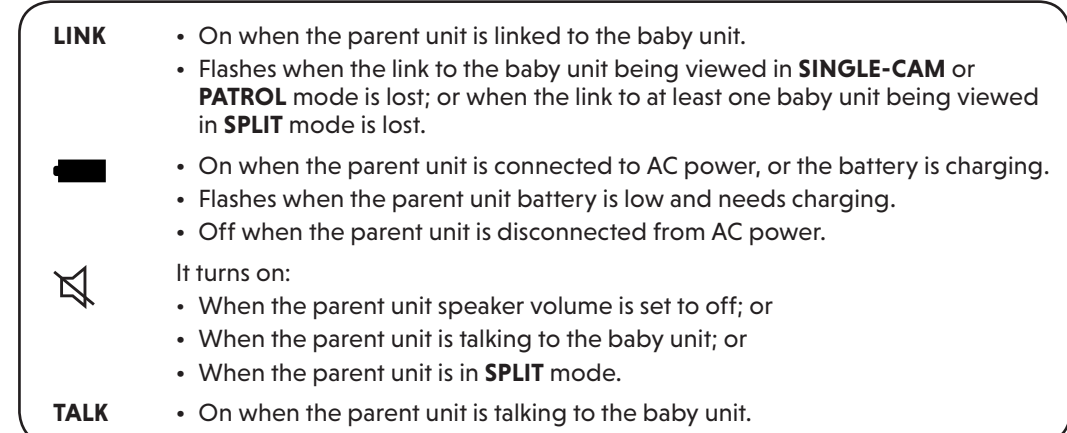

INSTALL THE LENS (OPTIONAL)

Your baby monitor comes with a wide-angle lens. You can install the lens to view more of your baby's room from the parent unit screen. See Install the lens (optional) in the **Quick Start Guide** for the lens installation instructions.

MOUNT THE BABY UNIT (OPTIONAL)

Your baby monitor comes ready for tabletop use. You can also choose to mount your baby monitor on the wall. See Mount the baby unit (optional) in the **Quick Start Guide** for the wall mounting instructions.

IMPORTANT SAFETY INSTRUCTIONS

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Follow all warnings and instructions marked on the product.
2. Adult setup is required.
3. This product is not a substitute for adult supervision of the infant. Supervising the infant is the parent's or caregiver's responsibility. This product could cause operating, and therefore you should not assume it will continue working properly for any given period of time. Further, this is not a medical device and should not be used as such. This product is intended to assist you in supervising your baby.
4. Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
5. **CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT1985S5/BT2985S5) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the information in **The RBRC® seal**. Baby unit power adapter: Output: 6V DC 600mA; Parent unit power adapter: Output: 5V DC 1A.
6. Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Output: 6V DC 600mA; Parent unit power adapter: Output: 5V DC 1A.
7. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
8. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
9. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
10. Unplug the power cords before replacing batteries.
11. Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
12. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
13. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
14. Do not overload wall outlets or use an extension cord.
15. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
16. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
17. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or cause a short circuit. Never spill liquid of any kind on the product.
18. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
19. You should test the sound reception every time you turn on the units or move one of the components.
20. Periodically examine all components for damage.
21. Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery monitors, cordless phones, scanners, etc.
22. Children should be supervised to ensure that they do not play with the product.
23. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- CAUTIONS**
1. Use and store the product at a temperature between 32°F and 104°F.
 2. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source. Batteries should not be exposed to excessive heat such as bright sunshine or fire.
 3. Make sure the baby unit(s) and the adapter cord(s) are always out of reach of the baby, at least 3 feet away from the baby or crib, to avoid a possible strangulation hazard.
 4. Never place the baby unit(s) inside the baby's crib or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket.
 5. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.
- Pacemaker patients**
- Cardiac pacemakers (applies only to digital cordless devices):
- Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

- Precautions for users of implanted cardiac pacemakers**
- Should keep wireless devices at least six inches from the pacemaker.
 - Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON. WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.
- Electromagnetic fields (EMF)**
- This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

THE RBRC® SEAL

The RBRC® seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1 (800) 595-9511 for more information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC® and 1 (800) 8 BATTERY® are registered trademarks of the Rechargeable Battery Recycling Corporation.

FCC AND IC REGULATIONS

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more. The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face. This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

Industry Canada

This device complies with the Canadian Radio Interference Regulations (CIRI) which are part of the Canadian Radio Interference Regulations (CIRI). The device is exempt from the Canadian Radio Interference Regulations (CIRI) as it is a Class B digital device. The device is exempt from the Canadian Radio Interference Regulations (CIRI) as it is a Class B digital device. The device is exempt from the Canadian Radio Interference Regulations (CIRI) as it is a Class B digital device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

RF radiation exposure statement

The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

CALIFORNIA ENERGY COMMISSION BATTERY CHARGING TESTING MODE

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption. Your baby monitor is set up to comply with the energy-conserving standards right out of the box. Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging. Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is powered off and charging.

FOR CETL COMPLIANCE ONLY

- Mesures de sécurité importantes**
- Lorsque vous utilisez votre appareil, vous devez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie, d'électrocution et de blessures corporelles, dont ceux qui suivent :
1. Observez toutes les instructions et mises en garde inscrites sur l'appareil.
 2. L'installation par un adulte est requise.
 3. Ce produit ne remplace pas la surveillance adulte du nourrisson. La supervision du nourrisson est la responsabilité du parent ou de la personne qui s'occupe de l'enfant. Ce produit pourrait cesser de fonctionner et, par conséquent, vous ne devriez pas présumer qu'il continuera de fonctionner correctement pendant une période de temps donnée. De plus, il ne s'agit pas d'un instrument médical et ne devrait pas être utilisé comme tel. Ce produit est destiné à vous aider à superviser votre bébé.
 4. N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un soubassement humide ou une douche.
 5. **MISE EN GARDE:** Utilisez uniquement les piles fournies. Il existe un risque d'explosion si un autre type de batterie est utilisé pour l'unité Parents. N'utilisez que le bloc-piles rechargeable fourni avec le produit. Le bloc-piles ne doit pas être réutilisé après avoir été rempli. N'insérez pas les piles. Celles-ci risquent d'exploser. Jetez les piles usées selon les renseignements suivant le **sceau du RBRC®**.
 6. N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril. Adaptateur de l'unité du bébé : Sortie: 6V DC 600mA. Adaptateur de l'unité du parent : Sortie: 5V CC 1A.
 7. Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place s'il celui est branché dans une prise au plafond, sous une table ou dans un meuble.
 8. Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant.
 9. Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N'utilisez pas cet appareil dans des endroits où l'on risque d'être humide pour le nettoyer.
 10. Débranchez les cordons d'alimentation avant de remplacer le bloc-piles.
 11. Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel.
 12. Ne laissez aucun objet reposer ni appuyer sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser le cordon d'alimentation ou de le piéliner.
 13. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'électricité.
 14. Ne surchargez pas les prises de courant murales ni les rallonges électriques.
 15. Ne placez pas cet appareil sur un chariot, meuble, trépied, support du montage ni table chancelante.
 16. Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'appareil en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant que vous assuriez qu'il y ait une bonne circulation d'air.
 17. Ne touchez jamais d'objets à travers les ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits et des incendies.
 18. Afin de réduire les risques d'électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces qui contiennent cet appareil, à l'exception de l'écrou à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution.
 19. Vous devriez tester la réception chaque fois que vous mettez l'appareil en fonction.
 20. Examinez des composites afin de vérifier si celles-ci ne sont pas endommagées.
 21. Soyez avisé de la perte de la confidentialité lorsque vous utilisez des ondes publiques. Les conversations peuvent être entendues par d'autres moniteurs de bébé, des téléphones sans fil, des scanners, etc.
 22. Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil.
 23. Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

- CONSERVEZ CES INSTRUCTIONS**
1. Utilisez et entreposez le produit à une température entre 0 °C (32 °F) et 40 °C (104 °F).
 2. N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage.
 3. Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu.
 4. Assurez-vous que le moniteur et le cordon de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3 pieds) de l'enfant ou du berceau, pour éviter tout risque de strangulation.
 5. Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portable avec un article tel une serviette ou une couverture.
 6. D'autres équipements électroniques peuvent produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil.

Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (qui ne s'appliquent qu'aux dispositifs numériques sans fil) :

L'organisme Wireless Technology Research, LLC (WTR), une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et des médicaments (FDA) et l'Administration canadienne des médicaments (WTR) recommande aux médecins :

Avis aux détenteurs de stimulateurs cardiaques

- Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque.
- Ne devez PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.

Le produit est conforme aux normes de sécurité de l'industrie pour les détenteurs de stimulateurs cardiaques causés par les gens qui utilisent des dispositifs sans fil à proximité de ceux-ci.

Champs électromagnétiques (EMF)

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.

Please retain your original sales receipt as proof of purchase.