Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

VM341-216

Full Color Video Monitor



For support, shopping, and everything new at VTech. visit our website at www.vtechphones.com.

### Vhat's in the box

Congratulations

on purchasing your new VTech product.

Before using this product, please read

This manual has all the feature operations

operate your new VTech product. Please

review this manual thoroughly to ensure

proper installation and operation of this

innovative and feature rich VTech product.

and troubleshooting necessary to install and

Important safety instructions.

#### Parent unit















Baby unit @2







### Install the battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time only.


- · Use only the battery supplied with this product The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent unit to AC power
- power adapter cords are out of reach of children. If the parent unit will not be used for a long time disconnect and remove the battery to prevent Connect the baby units

Install the battery as shown below.






possible leakage.









### Connect the parent unit



### Charge the parent unit battery

When you have connected the parent unit and installed its battery for the first time or after power outage, the parent unit powers on automatically. The battery icon indicates the battery status (see the following table).

### **P**NOTES

- The parent unit battery is fully charged after 3 hours of continuous charging
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging ime, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

Battery indicators	Battery status	Action
The battery icon is off and to displays.	No battery is installed but operates using AC power, or the battery has been installed incorrectly.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
The screen displays Battery low at Parent Unit and . The light flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

### efore use

 This baby monitor is intended as an aid. It is not a substituté for proper adult supervision, and should not be used as such.

### Test your baby monitor

For hearing protection, make sure the parent unit is more than 1 meter (3 feet) away from

both baby units. If you hear any high-pitched

1. Make sure your baby units and parent unit

2. Your parent unit displays images from baby

microphone. You will hear the sound at

3. Press VIEW at the top of your parent unit

When the parent unit displays \$\mathbb{Z}\$ and then **No link** 

number), and the LINK LED light flashes, move

to CAM # (# represents the selected baby unit

the parent unit closer to the baby unit (observe

the minimum distance of 1 meter/ 3 feet). You can also check if the baby monitor is connected

Increase the parent unit speaker volume if you

cannot hear the sounds transmitted from the baby

to a live power socket and switched on.

are on.

unit 📵 1.

the parent unit.

to switch to baby unit 🔘 2.

noise, move the parent unit further until the

noise stops. You can also press -/VOL on

the parent unit to lower or mute the noise.

• To avoid interference from other electronic devices, place your baby monitor far away from devices such as wireless routers, microwaves, You may test the baby monitor before initial cell phones and computers. use, and at regular times thereafter


#### 1. Place the baby units more than 1 meter (3 feet) away from your baby.

baby's crib or playpen

Positioning the baby monitor

Keep the baby units out of the reach of your baby.


Never place or mount the baby units inside the

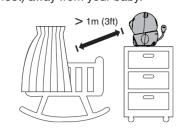

Adjust the angle of the baby unit camera to aim at your baby.



3. Place the parent unit more than 1 meter (3 feet) away from the baby units.





- The default volume of your parent unit is level 4. If you experience high-pitched screeching noise from your baby monitor while positioning:
- Make sure your baby units and parent unit are more than 1 meter (3 feet) apart. OR - Turn down the volume of your parent unit.

### Operating range


The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.


### Baby unit 01 overview

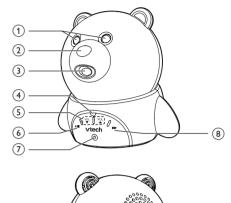

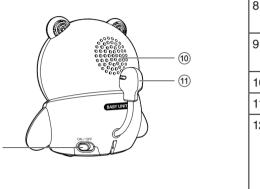


### Overview

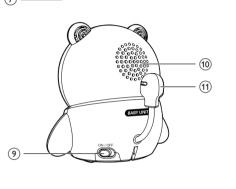

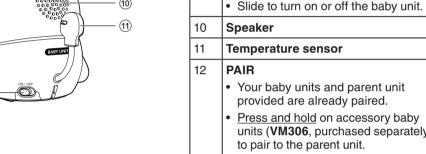

**Threaded socket** 

### Baby unit 2 overview

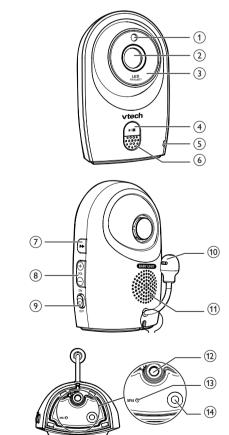

1	Light sensor
2	Camera
3	Infrared LEDs
4	<ul><li>▶/■ Play/Stop</li><li>Press to play or stop lullaby on the baby unit.</li></ul>
5	ON/OFF light On when the baby unit is turned on and is paired to the parent unit. Flashes when the baby unit is not being viewed; or when the link to the parent unit is lost.
6	Microphone
7	N Ckin

Press to play the next lullaby.

### ON/OFF switch Slide to turn on or off the baby unit. Temperature sensor Speake Threaded socket For wall mount installation use. Your baby units and parent unit provided are already paired. Press and hold on accessory baby


vtech

Press to adjust the speaker volume

It determines the lullaby volume and


talkback volume transmitted from

User's manual



### Parent unit overview

parent unit

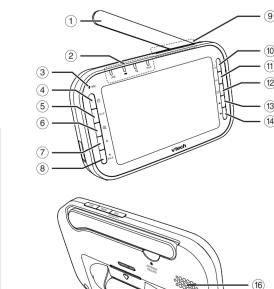

LED lights Indicate the different statuses of the parent unit. For details, refer to Parent unit lights. Microphone 也 On/off Press and hold to power on. Press and hold again to power off. baby unit in **SINGLE-CAM** or PATROL mode.

mode.

While in a menu, press to choose an

press and hold to move the zoomed image rightward.

move the selection box rightward.

While viewing zoomed image, press and hold to move the zoomed image leftward.

VIEW / LCD ON/OFF

SPLIT-VIEW mode.

next baby unit in SINGLE-CAM or PATROL mode.

Press to turn on or off the PATROL

mode

Press and hold to talk to the selected

Press to zoom in or out while viewing

image in SINGLE-CAM or PATROL

While viewing zoomed image,

While in **SPLIT-VIEW** mode, press to

 While in a menu, press to return to the main menu or idle screen.

· While in SPLIT-VIEW mode, press to move the selection box leftward.

· Press and hold to turn off the parent unit screen.

Press to view the image of the

PATROL

SPLIT Press to turn on or off the

install the battery.

Press to increase the parent unit speaker volume. -/VOL

large tab of the battery compartment cover

and pull it out, then follow the steps above to

 Press to decrease the parent unit speaker volume

> MENU/SELECT Press to enter the menu While in a menu, press to choose an

item, or save a setting.

 While in a menu, press to scroll up. While viewing zoomed image, press and hold to move the zoomed

 While in SPLIT-VIEW mode, press to move the selection box upward.

 While viewing zoomed image, press and hold to move the zoomed image downward · While in SPLIT-VIEW mode, press to move the selection box downward.

While in a menu, press to scroll down.

16 Speaker 17 Power jack

Parent unit lights **LINK** On when the parent unit is linked to

> the baby unit. Flashes when the link to the baby unit being viewed in SINGLE-CAM or PATROL mode is lost; or when the link to all baby units being viewed in SPLIT-VIEW mode is lost. On when the parent unit is

battery is charging. Flashes when the parent unit battery is low and needs charging. Off when the parent unit is disconnected from AC power.

On when the speaker volume of the

parent unit is turned off.

the baby unit.

connected to AC power, or the **TALK** On when the parent unit is talking to

### Parent unit display icons Connection status

Lullaby

Connect and charge the

• Use only the power adapters supplied with this

Make sure the electrical outlets are not controlled

oriented in a vertical or floor mount position. The

prongs are not designed to hold the plug in place

if they are plugged into a ceiling, under-the-table or cabinet outlet.

Make sure the parent unit, the baby unit and the

The power adapters are intended to be correctly

attery

by wall switches.

Baby unit @1

Baby unit @2

**O**NOTES

product.

displays when strong signal strength is detected between the baby unit and the parent unit.

In or in displays when moderate or low signal strength is detected between the baby unit and the T displays when the link between

Displays when the baby unit being

Displays the number of the baby

Displays the number of the

unit that is being viewed when in

ghlighted baby unit when in

Displays when the parent unit is in

Displays when the parent unit is in

Displays when the baby unit being

viewed has activated the night

Displays when the baby unit

Displays when the temperature

Displays the real-time temperature

detected by the baby unit in

Displays when the parent unit

Displays when SPLIT-VIEW mode

speaker volume is set to off.

Fahrenheit (°F) or Celcius (°C)

camera has zoomed in.

Temperature alert tone

alert tone is set on.

Real-time temperature

(e.g. **57** °F or **14** °C).

Mute alert

is turned on.

SINGLE-CAM and PATROL mode.

viewed is playing lullaby.

**Current view status** 

SPLIT-VIEW mode.

SPLIT-VIEW mode.

PATRÓL mode.

Split-view mode

Night vision

vision feature.

Patrol mode

the baby unit and the parent unit

Displays the parent unit speaker volume level while adjusting. **Battery status** 

|| 9-level sound indicator

displays when the battery is low and needs charging. AC power without battery Displays when the parent unit is

unit (e.g. baby crying loudly).

### Parent unit main menu icons



You can select a language (English, French or Spanish) to be used in all screen displays.

Alert Tone You can set the parent unit to beep

 the parent unit operates in low battery condition: the link between the parent unit

and the baby unit is lost; or

the baby unit detects sounds

while in **SPLIT-VIEW** mode.

Sensitivity With this feature, you can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the

parent unit.

### (1 to 3 bars) indicates low sound level detected by the baby

Temperature You can turn on the **Temperature** alert tone so that the parent

(4 to 6 bars) indicates moderate sound level detected by temperature range. the baby unit. (7 to 9 bars) indicates high Vibration sound level detected by the baby

Speaker volume

animates when the battery is charging. im displays solid when the battery is fully charged

LCD connected to AC power without the battery.

You can choose a specific name name list.

can add or replace baby units (VM304 or VM306, purchased

No link to CAM # *	The selected baby unit i out of range or is turned off.
Battery low at Parent Unit	The battery level of the parent unit is very low an needs to be recharged.
Battery empty. Powering off	The battery is empty an needs to be recharged.

### unit beeps whenever the room temperature detected by the baby Temperature unit falls outside of the desired too high at CAM #





for the baby unit from a pre-defined Pair/Unpair



	No link to CAM # *	out of range or is turned off.
	Battery low at Parent Unit	The battery level of the parent unit is very low an needs to be recharged.
	Battery empty. Powering off	The battery is empty and needs to be recharged.
9	* #	alaskad babaasik assalasa

### the threshold at CAM # in detected at CAM # | SPLIT-VIEW mode. The temperature detected by the baby unit

Temperature too low at CAM # Powering on.. The parent unit is turning

Using the baby monitor

Power on or off the baby units

• Slide the **ON/OFF** switch on the baby units

to **ON** to power on. The **ON/OFF** LED light

Slide the ON/OFF switch on the baby units

Power on or off the parent unit

Press and hold Φ to power on the parent

• Press and hold 0 again to power off the

Turn on or off the parent unit

You can turn on or off the parent unit screen

without powering off the parent unit. You can

• Press and hold LCD ON/OFF on the top of

Press any key on the parent unit to turn on

the parent unit to turn off the screen.

Adjust the parent unit speaker

Press +/VOL/- on the parent unit at any

When the parent unit speaker volume is set to zero,

appears on the screen and the 💢 light turns on.

time when viewing images.

parent unit. The screen turns off.

still hear sound from the baby units.

the screen again

volume

**⊘**NOTE

unit. The screen turns on.

turns off.


to **OFF** to power off. The **ON/OFF** LED light




automatically off to save power. You can change the brightness of the parent unit screen, or turn on





# The sound level exceeds s higher/lower than the



\* # represents the selected baby unit number.








provided are already paired. You separately) to your baby monitor

# desired temperature alert



sound is detected, the screen is

screen is turned off. When no

the **Dim Mode** to save power. The baby units and parent unit

## Parent unit display messages

The battery level of the parent unit is very low and needs to be recharged.
The battery is empty and needs to be recharged.

#### Adjust the baby unit speaker volume You can adjust the baby unit speaker volume at any time. It determines the lullaby volume and talkback volume transmitted from parent

 Press ▼/VOL/▲ on baby unit ⊚1. 

Play lullaby on the baby units You can play lullaby on the baby units to

comfort your baby Press ►/■ on the baby units to play lullaby. Press ➤ on the baby units to play the

other lullabies. Press ►/■ again to stop the lullaby. Press ▼/VOL/▲ or +/VOL/- on the baby

When the lullaby stops, press ►/■ again to replay.

units to adjust the lullaby volume

You can select a language (English, French or 1. Press **MENU** when the parent unit is idle.

2. Press ▼ or ▲ to choose Language, then

Set the language

#### press SELECT. 3. Press ▼ or ▲ to choose English, Français or Español, then press SELECT to confirm your selection.


Adjust LCD brightness You can change the brightness of the parent unit screen from Level 1 to Level 5. The LCD brightness is preset to **Level 3**.

SELECT. Press SELECT again to choose Brightness.

1. Press **MENU** when the parent unit is idle.

2. Press ▼ or ▲ to choose **LCD**, then press

4. Press ▼ or ▲ to choose the desired level of brightness, then press **SELECT** to confirm your selection.

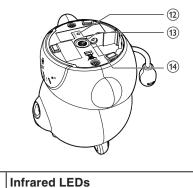

On when the baby unit is turned on

Flashes when the baby unit is not

speaker volume. It determines the

transmitted from the parent unit.

Press to play or stop lullaby on the

lullaby volume and talkback volume

being viewed; or when the link to the

and is paired to the parent unit.

Press to adjust the baby unit

· Press to play the next lullaby.

Light sensor

ON/OFF light

▼/VOL/▲

▶/■ Play/Stop

baby unit

Microphone

ON/OFF switch

**▶** Skip

parent unit is lost.

Camera

Press and hold on accessory baby units (VM306, purchased separately) to pair to the parent unit. For wall mount installation use. | Power jack 

#### parent unit has been left idle for 10 minutes while the screen is still on, the screen will be dimmed automatically to save power.

Turn on or off the dim mode

The dim mode is preset to on to help you

save the parent unit power. Whenever the

1. Press MENU when the parent unit is idle. 2. Press ▼ or ▲ to choose **LCD**, then press 3. Press ▼ or ▲ to choose **Dim Mode**, then

press **SELECT**. Press ▼ or ▲ to choose On or Off, then press SELECT to confirm your selection.

While the screen is dimmed, any keypress or

alert message will trigger the screen to return to

### the preset brightness level. After 10 minutes of idle, it will be dimmed again.

Turn on or off the sound

activation When sound activation is on, as long as no sound is detected within 50 seconds, the parent unit screen will turn off automatically to

1. Press **MENU** when the parent unit is idle.

2. Press ▼ or ▲ to choose Sound-activated

When your baby unit detects a sound, the sound activation triggers the parent unit screen to turn on automatically. When no sound is detected within 50 seconds, the screen will be off again.

> Screen, then press SELECT. 3. Press ▼ or ▲ to choose **On** or **Off**, then press **SELECT** to confirm your selection. The screen returns to main menu.

> **Ø**NOTES Sound activation is available in SINGLE-CAM and **PATROL** mode only.

• If the sound sensitivity is set to **Highest**, the parent unit screen may remain on continuously

even though sound activation is on.

### Adjust the sound sensitivity of

the baby units You can choose to hear sounds from the baby units all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby units from Lowest to Highest The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound sensitivity level is preset to **Highest**.

### Sound sensitivity table for reference

Description
The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room.
The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.
The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds.
The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.
The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.

- Press ▼ or ▲ to choose Sensitivity, then
- press **SELECT**.
- 3. Press ▼ or ▲ to choose ALL CAM or CAM #, then press SELECT
- 4. Press ▼ or ▲ to choose the desired
- sensitivity level, then press SELECT to confirm your selection.

 You can adjust the baby unit placement to improve the sound detection.

13. Do not allow anything to rest on the power cords

14. This product should be operated only from the

be walked on or crimped

heat register

subsequently used

components.

scanners, etc.

their safety.

Cautions

Do not install this product where the cords may

type of power source indicated on the marking

supply in your home, consult your dealer or local

label. If you are not sure of the type of power

15. Do not overload wall outlets or use an extension

16. Do not place this product on an unstable table.

17. This product should not be placed in any area

and openings in the back or bottom of this

where proper ventilation is not provided. Slots

product are provided for ventilation. To protect

hem from overheating, these openings must

18. Never push objects of any kind into this product

Never spill liquid of any kind on the product

disassemble this product, but take it to an

access doors may expose you to dangerous

can cause electric shock when the product is

time you turn on the units or move one of the

21. Periodically examine all components for damage.

22. Be aware of possible loss of privacy while using

23. Children should be supervised to ensure that

24. The product is not intended for use by persons

(including children) with reduced physical,

experience and knowledge, unless they have

**SAVE THESE INSTRUCTIONS** 

Do not expose the product to extreme cold, heat

cord(s) are always out of reach of the baby, at

least 3 feet away from the baby or crib, to avoid a

or direct sunlight. Do not put the product close to

. Use and store the product at a temperature

Batteries should not be exposed to excessive

Make sure the baby unit(s) and the adapter

heat such as bright sunshine or fire.

between 32°F and 104°F.

a heating source

been given supervision or instruction concerning

use of the appliance by a person responsible for

sensory or mental capabilities, or lack of

they do not play with the product.

public airwaves. Conversations may be picked

up by other nursery monitors, cordless phones

voltages or other risks. Incorrect reassem

authorized service facility. Opening or removing

19. To reduce the risk of electric shock, do not

parts of the product other than specified

through the slots because they may touch

not be blocked by placing the product on a soft

surface such as a bed, sofa or rug. This product

should never be placed near or over a radiator or

dangerous voltage points or create a short circuit.

shelf, stand or other unstable surfaces.

### Monitoring mode

Every time the parent unit is turned on, it displays a baby unit in SINGLE-CAM mode. You can also monitor your baby in PATROL or **SPLIT-VIEW** mode.

SINGLE-CAM	The screen displays a single baby unit in full screen.
PATROL 🚭	A single cam view that transits to a different baby unit every 10 seconds.
SPLIT-VIEW :	The screen displays all baby units (up to four) on one screen.










You can use the **TALK** function of the parent unit to comfort your baby in SINGLE-CAM and PATROL mode

or rightward correspondingly.

- The TALK light turns on.
- 2. Speak towards the microphone on the parent unit. Your voice is broadcast to the
- broadcast. The TALK light goes off.

#### Set alert tone

### Low battery tone



- 1. Press **MENU** when the parent unit is idle. 2. Press ▼ or ▲ to choose Alert Tone, then
- press SELECT.
- 3. Press **SELECT** again to choose Low Battery Tone
- 4. Press ▼ or ▲ to choose **On** or **Off**, then press SELECT to confirm your selection.

### No link alert

You can set the parent unit to beep when the link between the parent unit and the baby unit

- 1. Press **MENU** when the parent unit is idle. 2. Press ▼ or ▲ to choose Alert Tone, then
- press **SELECT**. Press ▼ or ▲ to choose No Link Alert, then
- press **SELECT**. 4. Press **▼** or **△** to choose **On** or **Off**, then

beeps and displays Sound detected at CAM # whenever the baby unit detects sounds.

- 1. Press **MENU** when the parent unit is idle. 2. Press ▼ or ▲ to choose Alert Tone, then press **SELECT** to select.
- 3. Press ▼ or ▲ to choose Sound alert in split-view, then press SELECT 4. Press **▼** or **△** to choose **On** or **Off**, then
- press **SELECT** to confirm your selection

• The sound alert feature is only available in SPLIT-VIEW mode

### Monitor the temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature sensor. If the detected temperature is outside of the preset temperature range, the parent unit will display alert message

#### Set temperature range You can set the desired room temperature

Industry Canada

exempt RSS standard(s)

technical specifications.

Humans to RF Fields.

activated while charging.

ceux aui suivent :

it is powered off and charging.

alert range. The minimum temperature can be

This device complies with Industry Canada licence-

Operation is subject to the following two conditions

(1) this device may not cause harmful interference,

and (2) this device must accept any interference.

including interference that may cause undesired

The term "IC:" before the certification/registration

number only signifies that the Industry Canada

This product meets the applicable Industry Canada

The baby unit complies with FCC RF radiation

exposure limits set forth for an uncontrolled

environment. The baby unit should be installed and

between the baby unit and all persons' body. Use of

operated with a minimum distance of 8 in (20 cm)

other accessories may not ensure compliance with

FCC RF exposure guidelines. This transmitter must

not be co-located or operating in conjunction with

any other antenna or transmitter. This equipment

complies also with Industry Canada RSS-102 with

California Energy Commission

with the energy-conserving standards right out of

Follow the instructions to install and charge the

battery. The CEC battery charging testing mode is

Even if the parent unit is paired to baby units, the

For cETL compliance onl

d'électrocution et de blessures corporelles, dont

Observez toutes les instructions et mises en

garde inscrites sur l'appareil.

CEC battery charging testing mode is activated while

respect to Canada's Health Code 6 for Exposure of

technical specifications were met

RF radiation exposure statement

#### d'une supervision responsable et adéquate par un adulte et ne devrait pas tre utilisé comme telle.

### 4. Ce produit n'est pas conçu pour tre utilisé en tant que moniteur médical.

N'utilisez pas cet appareil pr s de l'eau ni de toute

autre source d'humidité, par exemple, pr s d'une

- baignoire, cuve lessive, évier de cuisine, dans un sous-sol humide ni pr s d'une piscine, dans un soussol humide ou une douche. MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour l'unité du parent. N'utilisez que le bloc-piles rechargeable inclus ou le bloc-piles de
- rechange (BT198555/BT298555). N'incinérez pas es piles. Celles-ci risqueraient d'exploser. Jetez es piles usées selon les renseignements suivant le sceau du RBRC® N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.
- Adaptateur (ourson) de l'unité du bébé 📵 🛭 Sortie: 5 V CC 1A Adaptateur de l'unité du bébé 
  2 Sortie: 5.9 V CC 1A Adaptateur de l'unité du parent : Sortie: 5 V CC 1A

table ou dans un meuble.

- 8. Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour tre orientés correctement, soit a verticale ou au plancher. Les broches n'or pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuici est branché dans une prise au plafond, sous une
- Pour les PRODUITS BRANCHER UNE PRISE DE COURANT. la prise de courant doit tre installée pr s du produit, afin d'assurer une accessibilité sécuritaire la prise de courant.
- 10. Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide pour le nettoyer. 11. Débranchez les cordons d'alimentation avant de
- remplacer le bloc-piles 12. Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un
- danger potentiel. 13. Ne laissez aucun objet reposer ni appuyer sur le cordon d'alimentation. N'installez pas cet

chancelants.

- Utilisez et entreposez le produit une appareil dans un endroit o l'on risque d'écraser température entre 0 C (32 F) et 40 C (104 F). le cordon d'alimentation ou de le piétiner. 14. Ne faites fonctionner cet appareil qu'avec le N'exposez pas cet appareil des froids ou des type d'alimentation indiqué sur l'étiquette. Si chaleurs extr mes, ainsi qu' la lumi re directe du soleil. Ne l'installez pas pr s d'une source de vous ne connaissez pas le type d'alimentation que vous possédez votre domicile, consultez chauffage.
- votre marchand ou votre compagnie locale Le bloc-piles ne doit pas tre exposé la chaleur d'électricité. 15. Ne surchargez pas les prises de courant murales ni les rallonges électriques.
- 4. Assurez-vous que le moniteur et le cordon de l'adaptateur sont toujours hors de portée des Ne placez pas cet appareil sur un chariot, enfants, au moins 1 m tre (3 pieds) de l'enfant meuble, trépied, support de montage ni table ou du berceau, pour éviter tout risque de

Mises en garde

#### Rename the baby units eneral product care

To keep this product working well and looking good,

- follow these guidelines
- · Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or
- fluorescent lamps). DO NOT expose it to direct sunlight or moisture.
- · Avoid dropping the product or treating it roughly.
- · Clean with a soft cloth DO NOT immerse the parent unit and the baby
- unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners.

some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com or contact 1 (800) 595-9511 for customer service.

ny does the by monitor	Try the following (in listed) for common of
t respond rmally?	Disconnect the pobaby units and the
	Remove the batte parent unit. Then i batteries again.
	Wait a few second connecting power baby units and the
	4 Turn on the helpy

# onnected to the mains. Inser e appliance plug into the pare unit and put the adapter in a wal socket. Then press and hold $\Phi$

Perhaps the parent unit is not

displays T. Press **MENU** when the parent unit is idle. Press ▼ or ▲ to choose Pair/Unpair CAM, then press SELECT. Press SELECT again to choose Pair CAM.

Press ▼ or ▲ to choose ar

press SELECT. The parent

unit screen displays Press

at the CAM for 5 seconds

until the power indicator

PAIR on the bottom of the

pencil. The LED light flashes

baby unit with a narrow

pointed object such as a

When pairing is successful, the

he sound alert (and vibration)

unit notifies you of all sounds

ower level or adjust the speake

The parent unit speaker volume

nay be too low or off. Press

+/VOL to increase the volume

volume on the parent unit.

ature are turned on. The pare

flashes..

and hold the pair button

empty baby unit slot, ther

The baby unit is unpaired from the parent unit. Follow below

teps to pair the baby unit. Make

sure both parent unit and baby

unit are on before pairing.

loser to the baby units (but not Why is the ess than 1 meter / 3 feet). onnectior Other electronic products may cause interference with your baby and then' monitor. Try installing your baby monitor as far away from these Why are there sound electronic devices as possible interruptions?

The baby units may be out of

range. Move the parent unit

Why can't I

establish a

# portant safety

structions

should always be followed to reduce the risk of fire, electric shock and injury, including the following: . Follow all warnings and instructions marked on

When using your equipment, basic safety precautions

- the product. Adult setup is required
- 3. This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- . Do not use this product near water. For example do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower
- CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or eplacement battery pack (BT198555/BT298555 or the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used
- battery according to the information in The RBRC® sea Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit 📵 🛭 (teddy bear) power adapter Output: 5V DC 1A

Baby unit 🚳2 power adapter: Output: 5.9V DC 1*A* 

Parent unit power adapter: Output: 5V DC 1A.

The power adapters are intended to be correctly

- oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet 9. For pluggable equipment, the socket-outlet shall
- be installed near the equipment and shall be easily accessible 10. Unplug this product from the wall outlet before
- cleaning. Do not use liquid or aerosol cleaners Use a damp cloth for cleaning.
- 12. Do not cut off the power adapters to replace them with other plugs, as this causes a
- hazardous situation

Transmit frequency Channels

effective vary according to environmental

requirements

identifying the Product purchased (Product model)

address, and telephone number

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidenta consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use

3. Provide your name, complete and correct mailing

This warranty is the complete and exclusive

warranty service?

agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights,

the Product or other associated equipment, the cos

# 11. Unplug the power cords before replacing

incidental or consequential damages, so the above

> limitation or exclusion may not apply to you. Please retain your original sales receipt as proof

### echnical specifications

Frequency Crystal controlled PLL synthesizer Baby unit: 2406 - 2475 MHz Parent unit: 2406 - 2475 MHz

4.3" Color LCD (WQVGA 480x272 pixel) Maximum power allowed by FCC and IC. Actual operating range may

Parent unit: 3.7V Li-polymer battery Baby unit 1 (teddy bear) power

> Output: 5V DC @ 1A Baby unit @2 power adapter:

Ford, and is used under the Creative Commons license. The Stream Noise sound file was created by Caroline Ford



Specifications are subject to change without notice. © 2016 VTech Communications, Inc. All rights reserved. 10/16. VM341-216\_CIB\_V3 Document order number: 91-008406-080-100

The parent unit and baby units baby monitor nay be too close to each other. produce a Move the parent unit away

high-pitched

### Why does the parent unit Turn on the baby units and the parent unit.

### 5. Wait for the parent unit to synchronize with the baby units. Allow up to one minute fo this to take place.

#### Ne jamais placer le moniteur l'intérieur du What will VTech do if the Product is not free from berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article

D'autres équipements électroniques peuvent produire des interférences sur votre moniteur authorized service representative will repair vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio l'écart des appareils électroniques tels que des routeurs sans fil. radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil. Stimulateurs cardiaques implantés dans

### Les simulateurs cardiaques (ne s'applique qu'aux dispositifs numériques sans fil)

tel une serviette ou une couverture.

L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiagues implantés dans l'organisme. Appuyée par l'Administration des aliments et drogués (FDA) des États-Unis, la firme WTR recommande aux médecins

#### Avis aux détenteurs de stimulateurs cardiaques Vous devriez maintenir les dispositifs sans fil au moins six pouces du simulateur cardiaque.

- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.
- L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil proximité de ceux-ci.

#### Champs électromagnétiques (EMF) Ce produit de VTech est conforme toutes les normes

se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années. selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.

### What does this limited warranty cover?

<u> Limited warranty</u>

### The manufacturer of this VTech Product warrants to

provided in the sales package ("Product") are free from defects in material and workmanshin pursuant to the following terms and conditions. with the Product operating instructions. This limited and Canada.

### defects in materials and workmanship during the limited warranty period ("Materially Defective During the limited warranty period, VTech's

or replace at VTech's option, without charge a Materially Defective Product. If we repair the Product, we may use new or refurbished eplacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining

- accident, shipping or other physical damage. improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or 2. Product that has been damaged due to repair,
- alteration or modification by anyone other than an authorized service representative of VTech: or 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or
- 5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or 7. Product returned without a valid proof of purchase
- (see item 2 on the next page); or 8. Charges for installation or set up, adjustment of

#### call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377 NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and

transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage o loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and

How do you get warranty service?

our website at www.vtechphones.com or

To obtain warranty service in the USA, please visit

#### are not covered by this limited warranty What must you return with the Product to get

return shipping costs for the repair of Products that


1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunctio or difficulty; and 2. Include a "valid proof of purchase" (sales receipt)

and the date of purchase or receipt; and

which vary from state to state or province to province

Credits: The Background Noise sound file was created by Caroline

and is used under the Creative Commons license. The Crickets At Night sound file was created by Mike Koenig and is used under the Creative Commons license. The Heart Beat sound file was created by Zarabadeu, and is used under the Creative Commons license.



### In SINGLE-CAM or PATROL mode:





Press PATROL to switch to PATROL mode









possible strangulation hazard

unit with anything such as a towel or a blanket. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away rom these electronic devices as possible wireless routers, radios, cellular telephones, intercoms, room monitors, televisions

#### cordless telephones Precautions for users of implanted cardiac

pacemakers

Cardiac pacemakers (applies only to digital cordless Wireless Technology Research, LLC (WTR). an independent research entity, led a multidisciplinary evaluation of the interference between portable vireless devices and implanted cardia pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that

the pacemaker, such as in a breast pocket, when WTR's evaluation did not identify any risk to

The RBRC® seal

your area.

#### using wireless devices.

Pacemaker patients

This VTech product complies with all standards egarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

The RBRC® seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada. The RBRC® program provides a convenient

alternative to placing used lithium-ion batteries into

the trash or municipal waste, which may be illegal in

VTech's participation in RBRC® makes it easy for

you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY® for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

Never place the baby unit(s) inside the baby's crib or playpen. Never cover the baby unit(s) or parent

personal computers, kitchen appliances and

- Should keep wireless devices at least six inches from the pacemaker Should NOT place wireless devices directly over
- bystanders with pacemakers from other persons Increase the separation between the equipment
  - **WARNING:** Changes or modifications to this equipment not expressly approved by the party esponsible for compliance could void the user's

and receiver

This device complies with Part 15 of the FCC rules. undesired operation. criteria for the amount of radio frequency energy

authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

that can be safely absorbed by a user or bystande according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more. The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face. This Class B digital apparatus complies with

### entering SPLIT-VIEW mode.

In SPLIT-VIEW mode

10 seconds

mode

Zoom You can zoom in or out while viewing image from baby unit in SINGLE-CAM and PATROL mode

zoomed image upward, downward, leftward

Press SPLIT to enter the SPLIT-VIEW mode.

Press ▲, ▼, ◀ or ▶ to select a baby unit.

Press ⊕ or VIEW key to view the selected

baby unit temporarily in SINGLE-CAM

Press PATROL to enter PATROL mode.

· The parent unit is muted while in SPLIT-VIEW

· Press SPLIT to return to the mode

mode. It returns to **SPLIT-VIEW** mode after

(SINGLE-CAM or PATROL) used before

SPLIT

- Press 

  to zoom in. Press and hold  $\blacktriangle$ ,  $\blacktriangledown$ ,  $\blacktriangleleft$  or  $\blacktriangleright$  to move the
- Press @ again to zoom out.
- 1. Press and hold TALK on the parent unit.
- 3. Release the **TALK** key to stop the

# Corporation.

RBRC® and 1 (800) 8 BATTERY

are registered trademarks of the

Rechargeable Battery Recycling

FCC Part 15 This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications mission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However. there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

FCC and IC regulations

- try to correct the interference by one or more of the ollowing measures: · Reorient or relocate the receiving antenna.
- ittery charging testing mode Connect the equipment into an outlet on a circuit different from that to which the receiver is This baby monitor meets the California Energy Consult the dealer or an experienced radio/TV Commission (CEC) regulations for energy consumption. Your baby monitor is set up to comply technician for help.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause To ensure safety of users, the FCC has established

Canadian requirement

#### Mesures de sécurité importantes Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie,

L'installation par un adulte est requise. 3. Ce produit a été conçu pour tre un dispositif d'appoint seulement. Il n'est pas le remplacement

The maximum temperature can be set

press SELECT

between 70 °F (21 °C) and 86 °F (30 °C). 1. Press **MENU** when the parent unit is idle.

set between 52 °F (11 °C) and 69 °F (20 °C).

3. Press ▼ or ▲ to choose Minimum or

Press ▼ or ▲ to choose ALL CAM or

5. Press ▼ or ▲ to choose the desired

detected temperature is out of range

minimum or maximum temperature, then

press **SELECT** to confirm your selection.

You can turn on the temperature alert tone so

that the parent unit will emit an alert tone if the

1. Press **MENU** when the parent unit is idle.

3. Press ▼ or ▲ to choose Alert Tone, then

2. Press ▼ or ▲ to choose **Temperature**, then

You can choose to display the temperature in

Press MENU when the parent unit is idle.

2. Press ▼ or ▲ to choose **Temperature**, then

3. Press ▼ or ▲ to choose **Format**, then press

Celsius, then press SELECT to confirm

You can turn on the vibration feature so that

the parent unit vibrates when it receives any of

Low battery tone, No link alert, Sound alert

in split-view or Temperature alert tone after

1. Press **MENU** when the parent unit is idle.

2. Press ▼ or ▲ to choose Vibration, then

Press SELECT to confirm your selection.

4. Press ▼ or ▲ to choose **Fahrenheit** or

Turn on or off the vibration

turning on the respective alert tones.

Press ▼ or ▲ to choose On or Off

Fahrenheit (°F) or Celcius (°C).

press SELECT.

vour selection

press **SELECT**.

SELECT

Maximum, then press SELECT.

CAM #, then press SELECT.

Temperature alert tone

press **SELECT**.

You can rename each baby unit. Once the baby unit is renamed, its new name together with the baby unit number will appear in the 2. Press ▼ or ▲ to choose Temperature, then sub-menu of below options:

Sensitivity

SELECT

Night vision

#### When the infrared LEDs are on, the image is in black and white. This is normal due to external light sources.

 Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display

Rename

Temperature
 Pair/Unpair

1. Press **MENU** when the parent unit is idle.

Press ▼ or ▲ to choose the desired baby

4. Press ▼ or ▲ to choose the desired name

for the baby unit, then press **SELECT** to

The baby unit has infrared LEDs that allow you

to see your baby clearly at night or in a dark

room. When the baby unit being viewed

unit, then press **SELECT** 

confirm your selection.

2. Press **▼** or **▲** to choose **Rename**, then press

### Pair new baby unit (VM304 or VM306)

The baby units and parent unit provided are already paired. You can add or replace any baby units (VM304 or VM306, purchased separately) to your video and audio monitor system. You can pair a maximum of four baby units to your parent unit For more details, refer to the user's manual

that comes with your VM304 or VM306 new

l'arri re de l'appareil ou sous celui-ci, serven

et n'emp chez pas l'aération adéquate de

l'appareil en le placant sur un lit, divan, tapis

ou toute autre surface similaire. De m me. ne le

positionnez pas proximité ni au-dessus d'une

source de chaleur ou d'un calorif re. De plus,

ouvertures de cet appareil, car ils pourraient

entrer en contact avec des points de tension

dangereux ou causer des courts-circuits qui

19. Afin de réduire les risques d'électrocution, ne

peuvent dégénérer en incendies ou en risques

d'électrocution. Ne renversez jamais de liquide

démontez pas cet appareil, mais apportez-le

du boîtier ou le retrait de toutes pi ces que

autorisé certaines portes ou ouvertures

contient cet appareil, l'exception de l'acc s

risque de vous exposer des points de tension

dangereux ou d'autres dangers. Un remontage

20. Vous devriez tester la réception chaque fois que

lorsque vous utilisez les ondes publiques. Les

conversations peuvent tre entendues par

23. Les enfants devraient tre supervisés afin de

24. Le produit n'est pas concu pour tre utilisé

d'autres moniteurs de bébé, des téléphones

par des personnes (incluant des enfants) aux

réduites ou qui manquent d'expérience et de

connaissances, moins qu'on leur ait donné

suffisamment de supervision ou d'instructions

relativement l'utilisation de l'appareil par une

CONSERVEZ CES INSTRUCTIONS

personne responsable de leur sécurité.

capacités physiques, sensorielles ou mentales

vous assurer qu'ils ne jouent pas avec l'appareil

vous mettez l'appareil en fonction.

sans fil, des scanneurs, etc.

21. Examinez les composantes afin de vérifier si

celles-ci ne sont pas endommagées.

22. Sovez avisé de la perte de la confidentialité

incorrect peut par la suite présenter des risques

dans un centre de service autorisé. L'ouverture

ne placez pas l'appareil dans un endroit avant

de vous assurer qu'il y ait une bonne circulation

aérer l'appareil. Pour l'emp cher de surchauffe

ne bloquez sous aucun prétexte ces ouvertures

17. Les trous et ouvertures du boîtier, situés

18. N'enfoncez jamais d'objets travers les

dans ce produit.

baby unit.

before you connect them to the mains again.

ily does the	Try the following (in the order
by monitor	listed) for common cure:
t respond rmally?	Disconnect the power to the baby units and the parent unit.
	Remove the batteries in the parent unit. Then install the batteries again.
	Wait a few seconds before connecting power back to the

Why doesn't AC power?

my parent unit charge while When you are not going to use the baby monitor for

Why is my

black and

white?

Why don't

parent unit

the power-or

baby unit and

 Make sure the baby unit and parent unit are dry Storage

Below are the guestions most frequently asked about

aby illulillul	isted) for confinion cure.	
not respond normally?	Disconnect the power to the baby units and the parent unit.	
	Remove the batteries in the parent unit. Then install the batteries again.	
	Wait a few seconds before connecting power back to the baby units and the parent unit.	

#### switch on the parent unit and switch on the to establish connection with the baby unit. Perhaps the baby unit is not onnected to the mains. Connec the baby unit to the mains. The set the **ON/OFF** switch to **ON** to switch on the baby unit and to establish connection with the Make sure the power is not controlled by a wall switch Make sure the battery is correctly nstalled in your parent unit. ou may have used the batter

for a long time. Replace a new

noise stops; OR

closer to the baby units (but not

f the parent unit is powered

by the provided battery, it may

not have enough charge for the

parent unit to perform normally

Charge the battery in the paren

**SPLIT-VIEW** mode, some of you

The temperature of your baby's

room may be too high or too low

baby units may detect sounds.

unit for up to 3 hours.

your parent unit is in

parent unit.

ess than 3 feet)

The screen is in black and white during nighttime or in a dark room. This is normal due to external light sources. ıring nighttime or in a dark

> the baby unit at a higher level to You may have set the sound prevent glare and blurry display arent unit ensitivity level to **Highest** wher

The ON/OFF

ight on the

ashes and

the parent un

aby unit

frequently in SPLIT-VIEW from the baby units until the ncluding background noise with sound sensitivity to a lower leve Turn down the volume of you The baby unit also picks up other Why does ounds than those of your baby. the parent The baby units may be out of nit react too Adjust the sensitivity level to a range. Move the parent unit

ep/vibrate

quickly to

Why don't I

hear a sound

Vhy can't I

hear my baby You may have set a low sound sensitivity level. See Adjust the sound sensitivity of the baby unit to set to a higher level

of purchase.

range conditions at the time of use.

Output: 5V DC @ 1A

the holder of a valid proof of purchase ("Consumer or "you") that the Product and all accessories

excessive telle que la lumi re du soleil ou au feu. when installed and used normally and in accordance warranty extends only to the Consumer for Products purchased and used in the United States of America

replacement to take approximately 30 days. How long is the limited warranty period? on the original one-year warranty; whichever is What is not covered by this limited warranty? This limited warranty does not cover:

4. Product to the extent that the problem is caused by use with non-VTech accessories: or

systems outside the unit.

customer controls, and installation or repair of

6. Product purchased, used, serviced, or shipped for repair from outside the United States of America

provinces do not allow the exclusion or limitation of

of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/

#### This product is not intended for use as a medical paired baby unit in **SINGLE-CAM** mode. The LED light on the new detects low light levels, the infrared LEDs are press SELECT. press **SELECT** to confirm your selection. switched on automatically. The images from 4. Press ▼ or ▲ to choose ALL CAM or paby unit remains on. glare or blurry oom, the surroundings and other this baby unit is in black and white, and If pairing fails, the screen CAM #. then press SELECT. Frequently asked question terfering factors, like lightings lisplay on my Sound alert in split-view appears on screen. displays Pairing failed. Try the jects, colors and background 5. Press ▼ or ▲ to choose On or Off, then You can turn on the sound alert feature so that, nay affect the image quality on pairing process again **M**NOTES press **SELECT** to confirm your selection. baby at night? our parent unit screen. Adius Only one baby unit can be while in SPLIT-VIEW mode, the parent unit • It is normal if you see a short white glare on your baby unit's angle or place paired at a time. parent unit screen as the baby unit is adapting to Temperature format