VM5266-2 Video Baby Monitor with Night Light



vtech

Quick start guide

For more support information







Intertek 3177099



TECHNICAL SPECIFICATIONS Frequency control Crystal controlled PLL synthesizer


Parent unit: 2405 - 2475 MH Channels LCD 5" Color LCD (WQVGA 480x272 pixels Nominal effective range Maximum power allowed by FCC and IC. Actual operating range

Baby unit: 2405 - 2475 MHz


may vary according to environmental conditions at the time of use. Parent unit: 3.6V, 2600mAh, 9.36Wh Li-ion battery Power requirements Baby unit power adapter: Output: 5V DC @ 1A Parent unit power adapter: Output: 5V DC @ 1A



Transmit frequency

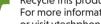

Recycle this product when you are done with it. For more information, scan the QR code or visit vtechphones.com/recycle

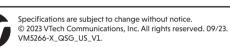







VM5266

When using your equipment, basic safety precautions should

- always be followed to reduce the risk of fire, electric shock and injury, including the following: Follow all warnings and instructions marked on the product. Adult setup is required.
- 3. CAUTION: Do not install the baby unit at a height above 6.5

IMPORTANT SAFETY INSTRUCTIONS

- 4. This product is intended as an aid. It is not a substitute for nsible and proper adult supervision and should not be
- 5. This product is not intended for use as a medical monitor. 6. Do not use this product near water, for example, near to a bath, sink, swimming pool or shower.
- 7. **CAUTION**: Use only the battery provided (if applicable). There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery in fire or a hot oven, mechanically crushing or cutting the battery can result in an explosion. Leaving the battery in an extremely

high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery

subjected to extremely low air pressure may result in an ex-plosion or the leakage of flammable liquid or gas. Dispose of used battery according to the information in **The RBRC seal**. Use only the power adapters included with this product. Incorrect power adapter polarity or voltage can seriously damage the product.

Power adapter information: Output: 5V DC 1A VTech Telecommur munications Ltd. Model: VT05EUS05100

Jiangxi Jian Aohai Technology Co.,Ltd Model: A318-050100W-US2

Rechargeable battery information Zhuhai Great Power Energy Co., Ltd. Li-ion battery, 3.6V, 2600mAh, 9.36Wh; Model: ICR18650-2.6Ah-3.6V-1S1P 9. The power adapter is intended to be correctly oriented in a

to hold the plug in place if it is plugged into a ceiling, un-der-the-table or cabinet outlet. For pluggable equipment, the socket-outlet (power adapter should be installed near the equipment and should be easily

vertical or floor mount position. The prongs are not designed

- 11. Unplug this product from the wall outlet before clea o not use liquid or aerosol cleaners. Use a damp cloth fo
- 12. Do not modify the power adapters or replace with other adapters, as this causes a hazardous situation.
- 13. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or
- 14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or electricity supply provider 15. Do not overload wall outlets or use an extension cord.
- 16. Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- 17. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat source.
- 18. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product

19. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Disassembling or removing parts of the product other than via the battery door (if applicable) may expose you to dangerous oltages or other risks. Incorrect reassembling can cause

electric shock when the product is subsequently used. 20. You should test the sound reception every time you turn on ne units or move one of the compor

- 21. Periodically examine all components for damage. 22. There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless tele-
- phones, etc. To protect your privacy, make sure the product has never been used before purchase, reset the baby monitor periodically by powering off and then powering on the units, and power off the baby monitor if you are not intending to use it for some time. 23. Children should be supervised to ensure that they do not
- 24. The small parts of this monitor can be swallowed by babies or small children. Keep these parts out of reach of children.
- 25. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

Use and store the product at a temperature between 32°F (0°C) and 104°F (40°C).

- Mishandling batteries can cause burn, fire or explosion Batteries should not be exposed to excessive heat such as
- bright sunshine or fire. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
- Warning–Strangulation Hazard–Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9m) away). Do not remove warning

bel on the adapter cord.

- Never place the camera unit(s) inside the baby's crib or playpen. Never cover the camera unit(s) or parent unit with anything such as a towel or a blanket.
- Other electronic products may cause interference with your camera unit. Try installing your camera unit as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, television sonal computers, kitchen appliances and cordless tele

Precautions for users of implanted cardiac pacemakers Cardiac pacemakers (applies only to digital cordless devices): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

- Pacemaker patients Should keep wireless devices at least six inches from the
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON. WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices. Electromagnetic fields (EMF)
- This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be sed based on scientific evidence available today

-----Quick start guide 1 set for VM5266 2 sets for VM5266-2

CONNECT THE BABY MONITOR

The parent unit turns on automatically after connecting the power adapter to the power socket and the battery LED light illuminates for a few seconds, then turns off.


■ NOTES

The rechargeable battery in the parent unit is built-in. Use only the power adapters supplied with this product.

OVERVIEW - BABY UNIT

WHAT'S IN THE BOX

- Make sure the parent unit and the baby unit are not connected to an electronically controlled electric
- Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet
- outlets. Otherwise, the adapters may not properly connect to the outlets. Make sure the parent unit, the baby units and the power adapter cords are out of reach of children.

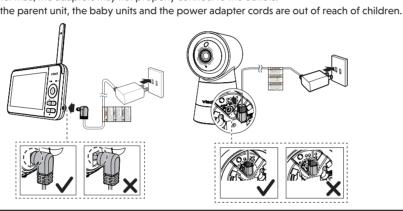

PAIR/RESET kev

11 Slots for wall mounting

10 Power jack

The parent unit and

already paired.

baby unit(s) provided are

POWER ON OR OFF THE BABY MONITOR

CONNECT THE BABY MONITOR (CONT'D)

parent unit battery is fully charged, the battery icon segments are solid IIII

The battery icon indicates the battery status (see the following table).

The battery icon segments The battery is fully charged.

for a short time.

When you have connected and turned the parent unit on, the battery charges automatically.

Before using the baby monitor for the first time, charge the parent unit battery for 12 hours. When the

It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn

The standby time varies depending on the sensitivity level you set, your actual use and the age of the

power and can only be used 30 minutes).

The battery has very little Charge without interruption (about

To keep the battery charged, connect

the unit to AC power when in use.

Charge the parent unit battery


the parent unit off while charging.

The screen displays \square .


The **u** light flashes.

are solid 📖


Notes
 Notes

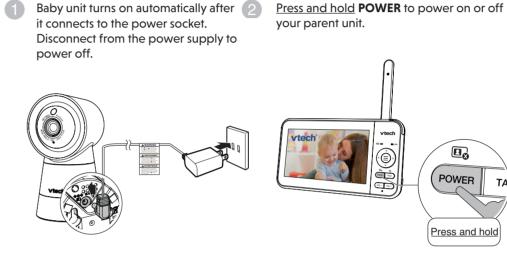

POSITIONING THE BABY MONITOR

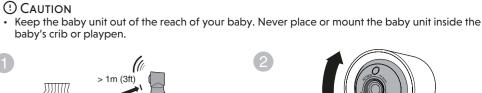





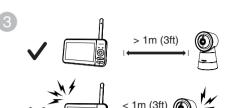




is level 7. If you experience feedback noise from your baby monitor while Make sure your baby unit and parent unit

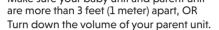

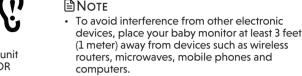

STATUS CHECK

Once you power on both your baby unit and parent unit, your parent unit displays image from the baby unit, and the **LINK** LED light turns on.

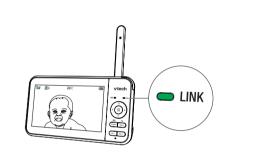

Basic operation - Parent unit


Press = to enter the menu, choose a menu item, or save a setting. You can use the parent unit for advanced settings or operations, such as to play or stop the baby unit lullaby, or to adjust the baby unit sound sensitivity.

While in the menu:

- Press = to select an item, or to save a setting. • Press ∧ or ∨ to scroll among the sub-menus, or to adjust a setting.
- without changing the current setting.
- Press TALK to return to live video.

Talk to your baby unit


Press and hold TALK and speak to your parent unit. Your voice is transmitted to the baby unit. Release **TALK** when finished talking and hear your baby again.

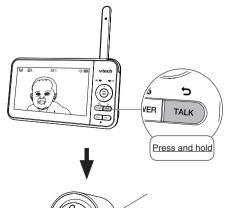

Press Power to turn off the parent unit

Turn off the screen

screen without powering off the parent unit. You will still hear sounds from the baby unit.

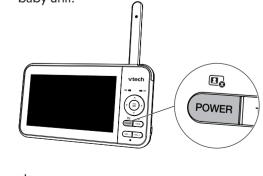


兴 TIP

• Press any key on the parent unit to turn the screen on again.

Adjust parent unit volume

Press **VOL** - / **VOL** + to adjust your parent unit speaker volume.

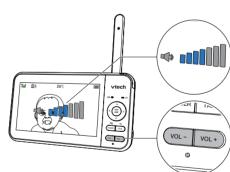

3-level sound indicator

Battery LED light

4 LINK LED light

Zoom


- Press = to enter the menu.
- 2. Press **<** or **>** to select **Q**, then press **≡** to confirm.
- Press \wedge or \vee to choose either $\oplus 1X$, ⊕2X or ⊕4X, depending on how many times you want to zoom in, then press = to confirm.

10 Power jack

11 RESET

12 Speaker

🔙 Overview - Parent unit

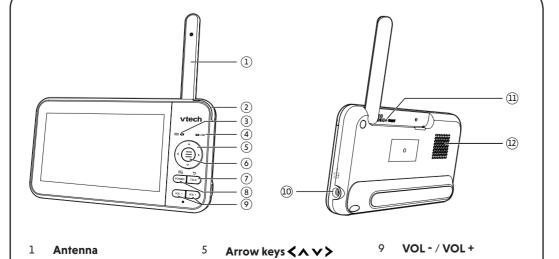

■ MENU /SELECT

TRETURN/TALK

8 LCD off/POWER key

NEED HELP?

and for the latest information and support, check out our online help topics and online FAQs.



Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to be redirected to the online help page.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canada] for help.



PARENT UNIT ICONS

Main menu icons Adjust the parent unit's LCD brightness.

Lullaby **)** / **(** \approx

Play/Stop Iullaby ≋1 ≋2 ≋3 ≋4



· Play all melodies. 60min 45min 30min 15min

> Set timer to stop playing the selected melody or soothing sound.

Night Light



· Select one of the night light colors.



· Set the night light to be always on.

when baby unit detects sound. It will turn off after 15 minutes of no sound detection. You can set **Sound sensitivity** level to detect sounds that exceed set levels. See Sound sensitivity and sound activation section.

Main Submenu menu ON/OFF

· Turn on/off the adaptive night light feature. When this feature is on, the baby unit detects the ambience light. If the room is bright, the night light adjusts itself to be

Sound Sensitivity


Screen off Timer

OFF 5min 30min 60min

Screen off Timer • The parent unit screen will turn off after the selected time to save energy. You can still hear your baby while the screen is turned

brighter; if the room is dim, the night light

adjusts itself to be dimmer

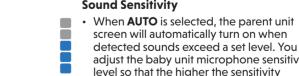

screen will automatically turn on when detected sounds exceed a set level. You can adjust the baby unit microphone sensitivity level so that the higher the sensitivity level, the more sensitive the baby unit is

the parent unit. For details, see the **Sound** sensitivity and sound activation section. • The parent unit will then turn off again after 50 seconds if the sound detected is lower than the set level.

in detecting sounds for transmitting to


■ Note When the parent unit screen is off, if alerts

are received, for example, no signal received between the parent unit and baby unit, or a low battery, the parent unit screen will turn on. · Set a timer to turn the night light off. **Alert Tone Settings**



Set to turn on the night light automatically

 Set the parent unit to beep when the battery is low

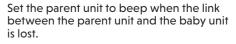

• Set the confirmation tone on or off when selecting an option in the menus.

Set the parent unit to beep when the baby

unit detects sounds while in Split mode

(For pairing with VM5266-2 only).



transitions to a different baby unit every 10 seconds.




Main Sub-menu


Temperature

menu

Patrol mode

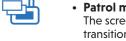

The screen displays a single cam view that

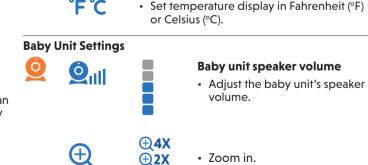

ON/OFF

Turn on/off temperature alert tone.

Set the minimum temperature.

· Set the maximum temperature.


• Set the parent unit to beep whenever the

room temperature detected by the baby

unit falls outside of the set temperature



Split mode

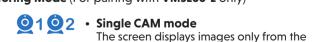




The screen displays images from all the paired baby units at the same time in split

selected baby unit in full screen.



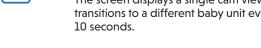



Infrared LEDs

- 'O'- Night Light Control Key

Tap to turn the night light on

Allow you to see clearly in a

dark environment.

For operations and guides to help you use your video monitor,

Use your smartphone or mobile device to access our online help.

If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.



PARENT UNIT ICONS (CONT'D)

Status icons Status icons Connection status Lullaby - On • Till - Strong signal strength. • Till - Moderate signal strength. Night light - On • Tow signal strength. Night light - Auto night light timer • T - Weak signal strength. Real-time temperature °F or °C Split mode Real-time temperature (*For pairing with VM5266-2 only) detected by the baby unit in Fahrenheit (°F) or Celsius (°C) Patrol mode (e.g. **57°F** or **14°C**). (*For pairing with VM5266-2 only) Temperature alert tone - On Current view status The baby unit number that is Talkback - On being viewed when in: Single CAM mode. Mute alert Patrol mode Displays when the parent unit (*For pairing with VM5266-2 speaker volume is set to off. · Displays when the parent unit is talking to the baby unit. Split mode (*For pairing with VM5266-2 **Battery status** > m > m > m animates Night vision - On when the battery is charging. Image: battery is fully charged. Alert icons · Displays when parent unit's battery is low and needs charging.

• Displays when connection between parent unit and baby unit is lost.

Baby unit detects temperature reaches or exceeds the set maximum.

• Baby unit detects temperature is at or is lower than the set minimum.


Displays when sound is detected at a baby unit when in Split view.

Sound sensitivity and sound activation **Til Q**1

Adjust the sound sensitivity of the baby unit

The parent unit screen will turn on only when the detected sounds exceed a set level.

Use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds that transmit to the parent unit. The sound sensitivity level is preset to the

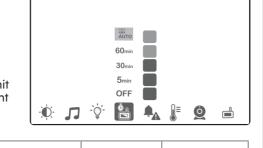

for crying

your baby. It

remains off

when your

baby makes

| loud crying

or screeching

sounds from

your baby. It

when your

baby makes

soft sounds. soft sounds.

remains off

nighest level.					
SOUND SENSITIVITY LEVEL	Level 5 (Highest)	Level 4 (High)	Level 3 (Medium)	Level 2 (Low)	Level 1 (Lowest)
DESCRIPTION	The parent unit screen turns on for	The parent unit screen turns on for soft	The parent unit screen turns on for loud	The parent unit screen turns on	The parent unit screen turns on for

babbling and

It remains off

| louder sounds | and louder

from your baby. sounds from

sleeps soundly. | baby makes room. soft sounds.

quiet sounds,

(including

background

noises) from

your baby's

babbling and

It remains off


louder sounds


from your baby.

detects sounds that are lower than the set sensitivity level. Once the baby unit detects sounds that are louder than the set sensitivity level, the parent unit screen turns on automatically. It will then turn off again after 50 seconds if the sounds detected

When **AUTO** is selected, the parent unit screen stays off to save power when the baby unit

when your baby when your

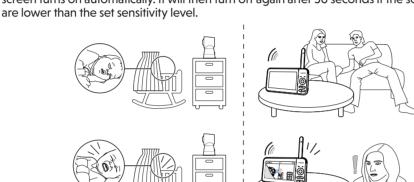

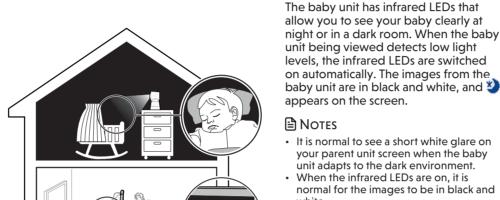

DIM MODE

NIGHT VISION

the baby unit.

Dim mode helps you save parent unit power. Your parent unit display will automatically

dim after 10 minutes of inactivity, when no keys are pressed or alerts are received from


(L)10 mins inactive

levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and 🥙 appears on the screen. NOTES It is normal to see a short white glare on your parent unit screen when the baby

unit adapts to the dark environment. When the infrared LEDs are on, it is normal for the images to be in black and

Depending on the surroundings and other interfering factors, for example, lighting, objects, colors and backgrounds, the image quality may vary. Adjust the baby unit angle or place the baby unit at a higher location to prevent glare and a blurred display.

FOR VM5266-2 ONLY

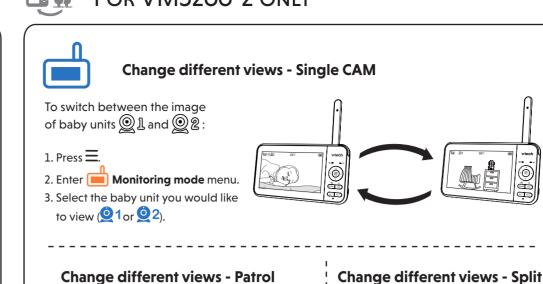



Select **Split** as your monitoring mode to view the images from both baby units at once.



If you power on only one baby unit, your parent unit may display 🍗 and the LINK LED light will flash.

Q_{8∆} Frequently asked questions Below are the questions most frequently asked about the baby monitor

not respond 2. Wait a few seconds before connecting power back to the baby units and the parent unit normally? 3. Turn on the baby units and the parent unit. 4. Wait for the parent unit to synchronize with the baby units. Allow up to one minute for this to take place. Perhaps the parent unit is not connected to the power. Insert the adapter plug into the

Try the following (in the order listed) for common cure:

1. Disconnect the power to the baby units and the parent unit.

Why doesn't the baby unit and paren unit power-on light illuminate when the units are switched on?

Why does the parent

unit beep?

other sounds?

my baby cry?

Why don't I hear a

Why can't Lestablish a

sound interruptions?

Why does the

baby monitor

parent unit and put the adapter in a wall socket. Then, press **POWER** to switch on the parent unit and to establish connection with the baby unit. Perhaps the baby unit is not connected to the power. Insert the adapter plug into the

baby unit and put the adapter in a wall socket. Then, slide the **ON/OFF** switch to **ON** to switch on the baby unit and to establish connection with the parent unit.

Why doesn't my parent Make sure the power is not controlled by a electronic wall switch. unit charge while The battery may de degraded through extended use or defective. See Warranty for

connected to AC power? repair/replacement.

The screen is in black and white during night-time or in a dark room when the night Why is my screen in vision feature is activated. This is normal. black and white? Why do I get glare or During night-time or in a dark room, the surroundings and other interfering factors, like lightings, objects, colors and backgrounds may affect the image quality on your blurry display on my parent unit screen. Adjust the baby unit's angle or place the baby unit at a higher level screen when viewing my

to prevent glare and blurry display. baby at night? The parent unit and baby units may be too close to each other. Why does the baby • Move the parent unit away from the baby units until the noise stops; OR monitor produce a feedback noise?

 Turn down the volume of your parent unit. The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet).

The parent unit may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit until the battery icon segments are solid **!!!** The temperature of your baby's room may be too high or too low.

The baby unit also picks up other sounds than those of your baby. Adjust the sound

sensitivity level to a lower level or lower the parent unit speaker volume. unit react too quickly to The parent unit speaker volume may be too low. See Adjust parent unit speaker sound/Why can't I hear volume to increase the volume.

ou may have set a low sound sensitivity level. See Adjust the sound sensitivity of the baby unit to set to a higher level.

connection? Why is the connection lost every now Other electronic products and wireless products may cause interference with your and then? Why are there baby monitor. Try installing your baby monitor as far away from these devices as


The baby units may be out of range. Move the parent unit closer to the baby units (but

If you power on only one baby unit, your parent unit may display \P , and the **LINK**

MOUNT THE BABY UNIT (OPTIONAL)




need depend on the composition of the

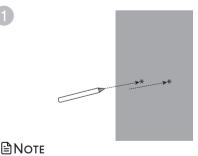


Check for reception strength and camera angle before drilling the holes.

Use a pencil to mark two holes in parallel. Make sure they are the same distance apart as the wall mount holes on the baby unit.

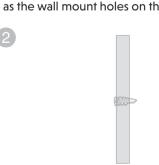


Drill two holes in the wall (7/23 inch drill bit). If you drill the holes into a stud, go to step 3.


If you drill the holes into an object other than a stud, insert the wall plugs into the holes. Tap gently on the ends with a hammer until the wall plugs are flush with the wall.

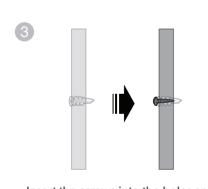


Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

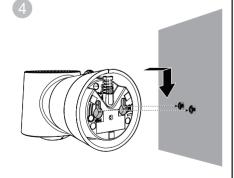

Align the wall mount holes on the baby unit with the screws on the wall Slide the baby unit down until it locks into place.

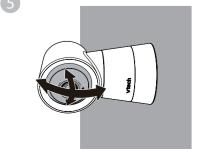

Adjust the baby unit angle.

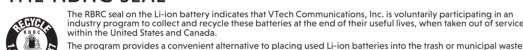

The RBRC seal on the Li-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

VTech's participation makes it easy for you to drop off the spent battery at local retailers participating in the program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY* for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting ou

The RBRC Seal and 1 (800) 8 BATTERY® are registered trademarks of Call2recycle, Inc.

FCC and IC regulations

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no larantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or levision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

 Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause narmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or nsmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face. This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B) $\,$

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation. Science and Economic Developmen Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

The product complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This equipment complies also with Industry Canada RSS-102 with respect to

CALIFORNIA ENERGY COMMISSION BATTERY CHARGING TESTING MODE

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption. Your baby monitor is set up to comply with the energy-conserving standards right out of the box. Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging. Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is powered off and charging.

DISCLAIMER AND LIMITATION OF LIABILITY

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada

VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. Company: VTech Communications, Inc.
Address: 9020 SW Washington Square Road - Ste 555 Tigard, OR 97223, United States

FOR CETL COMPLIANCE ONLY



Observez toutes les instructions et mises en garde inscrites sur

MISE EN GARDE: N'installez pas l'unité du bébé à une hauteur

supérieure à 2 mètres.

4. Ce produit ne remplace pas la surveillance adulte du nourrisson.
La supervision du nourrisson est la responsabilité du parent ou
de la personne qui s'occupe de l'enfant. Ce produit pourrait
cesser de fonctionner et, par conséquent, vous ne devriez pas
présumer qu'il continuera de fonctionner correctement pendant
une période de temps donnée. De plus, il ne s'agit pas d'un
instrument médical et ne devrait pas être utilisé comme tel. Ce
produit est destiné à vous aider à superviser votre bébé.

5. N'utilisez pas cet appareil près de l'eau ni de toute autre
source d'humidité, par exemple, près d'une baignoire, cuve à
lessive, évier de cuisine, dans un sous-sol humide ni près d'une
piscine, dans un soussol humide ou une douche.

6. MISE EN GARDE: N'utilisez que la pile fournie. Il peut y avoir
un risque, d'explosion si un mauvais type de pile est utilisé

un risque d'explosion si un mauvais type de pile est utilisé pour le dispositif apaisant. La pile ne peut pas être soumise a des températures extrêmes élevées ou basses et a une faible ion atmosphérique a haute altitude pendant son ut pression atmospherique a haute attitude pendant son utilisation, son entreposage ou son transport. Le fait de jeter la pile dans au feu ou dans un four chaud, ou d'écraser ou de couper mécaniquement la pile peut entrainer une explosion. Le fait de laisser la pile dans un environnement a température extrêmement élevée peut entrainer une explosion ou une fuite de liquide ou de gaz inflammable. Une pile soumise a une pression d'air extrêmement basse peut provoquer une explosion ou une fuite de liquide ou de gaz inflammable. Mettez au rebut la pile usagée conformément aux informations figurant dans la section Le sceau RBRC

N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.

Sortie: 5V DC 1A
VTech Telecommunications Ltd.
Modèle: VT05EUS05100

anaxi Jian Aohai Technology Co., Ltd. ele : A318-050100W-US2 Informations sur les piles rechargeables : i Great Power Energy Co., Ltd. battery, 3,6V, 2600mAh. 9.36Wh: Model: ICR18650-2.6Ah-3.6V-1S1P

Lorsqu'ils sont branchés dans une prise de courant, les daptateurs secteur ont été conçus pour être orientés prrectement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuici est branché dans ne prise au plafond, sous une table ou dans un meuble

une prise au plafond, sous une table ou dans un meuble.
Pour les PRODUITS à BRANCHER À UNE PRISE DE COURANT,
la prise de courant doit être installée près du produit, afin
d'assurer une accessibilité sécuritaire à la prise de courant.
D'ébranchez ce produit de la prise de courant avant de procéder
au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un
chiffon humide pour le nettoyer.
Ne coupez pas les cordons d'alimentation pour remplacer les
fiches, car ceci peut présenter un danger potentiel.

Ne laissez aucun objet reposer ni appuyer sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser le cordon d'alimentation ou de le piéting

Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'Alcetricité. 14. Ne surchargez pas les prises de courant murales ni les rallonges

Ne placez pas cet appareil sur un chariot, meuble, trépied, support de montage ni table chancelants.
Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, sevent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'appareil en le

placant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air.

N'enfoncez jamais d'objets à travers les ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits qui peuvent dégénèrer en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit.

Afin de réduire les risques d'électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution. Vous devriez tester la réception chaque fois que vous mettez l'appareil en fonction.

Examinez les composantes afin de vérifier si celles-ci ne sont Il existe un très faible risque de perte de confidentialité

avec certains appareils électroniques (autres écoute-bébés, téléphones sans fils etc.). Pour l'éviter, s'assurer que le produ n'a jamais été utilisé avant l'achat, réinitialiser l'unité de façon dique, éteindre l'écoute-bébé quand il n'est pas en cou Les enfants devraient être supervisés afin de vous assurer qu'ils

Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil.

Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

CONSERVEZ CES INSTRUCTIONS

Utilisez et entreposez le produit à une température entre 0 °C (32 °F) et 40 °C (104 °F).

N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage. bloc-piles ne doit pas être exposé à la ch

que la lumière du soleil ou au feu Avertissement - Risque de strangulation
- Les enfants se sont ETRANGLES dans des
cordons. Gardez ce cordon hors de portée des enfants (à plus de 0,9 m). N'enlevez pas cette

Briquerie.

Ne jamais placer le moniteur à l'intérieur du
berceau ou du parc de bébé. Ne jamais couvrir le moniteur
ou l'unité (s) portative avec un article tel une serviette ou une

Couverture.
D'autres équipements électroniques peuvent produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil. Stimulateurs cardiaques implantés dans l'organisme Les simulateurs cardiaques (ne s'applique qu'aux dispositifs numériques sans fil):

numeriques sans fil):
L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des Etats-Unis, la firme WTR recommande aux médecins:

Avie aux détenteurs de stimulaturs cardiaques. Avis aux détenteurs de stimulateurs cardiaques Vous devriez maintenir les dispositifs sans fil à au moins six

Vous devriez maintenir les disposififs sans fil à au moins six pouces du simulateur cardiaque.
 Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.
 L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci.

Champs électromagnétiques (EMF)
Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son

LIMITED WARRANTY

Select **Patrol** as your monitoring mode to

alternately view the image from baby units

Q1 and Q2 every 10 seconds.

What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service esentative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or ement Product is shipped to you or (b) the time remaining on

What is not covered by this limited warranty? This limited warranty does not cover:

rendered illegible; or

1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid

2. Product that has been damaged due to repair, alteration o modification by anyone other than an authorized service representative of VTech; or 3. Product to the extent that the problem experienced is caused by

signal conditions, network reliability, or cable or antenna systems; or 4. Product to the extent that the problem is caused by use with non-VTech accessories; or Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or

6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or

7. Product returned without a valid proof of purchase (see item 2

Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

NOTE: Before calling for service, please review the user's manual - a

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product to the service location. Viech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service?

Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and

Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and

3. Provide your name, complete and correct mailing address, and

Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communication related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state of province to province.

Limitations: Implied warranties, including those of fitness for a articular purpose and merchantability (an unwritten warranty tha the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation manot apply to you. In no event shall VTech be liable for any indirect special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidents or consequential damages, so the above limitation or exclusion may

Please retain your original sales receipt as proof of purchase.

L CABLE MANAGEMENT

