Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

VM5271 VM5271-2

Video Monitor with Motorized 6x Optical Zoom Lens





# **vtech**

User's manual

While in a menu, press to scroll up.

Press to zoom in while viewing

image in SINGLE-CAM mode.

Press to zoom out while viewing

Reset the patrol period if **PATROL** 

image in SINGLE-CAM mode.

mode is in use.

mode is in use

**□** Zoom out

Reset the patrol period if **PATROL** 

### Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions


This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.

### What's in the box





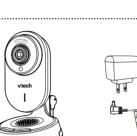



1 set for VM5271 2 sets for VM5271-2

Press to increase the parent unit

## Install the battery


The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time

### **⊘**NOTES Use only the battery supplied with this product

**6**NOTE

- The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the parent unit to AC power.
- If the parent unit will not be used for a long time. disconnect and remove the battery to prevent possible leakage.


### Install the battery as shown below.

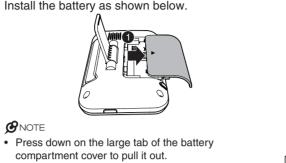





 Make sure the label THIS SIDE UP is facing up while inserting the battery.

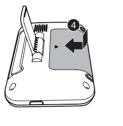

# Replace the battery

To replace the battery, press down on the large tab of the battery compartment cover and pull it out, then follow the steps above to install the battery.

Displays when the baby

unit being viewed is

Displays when SPLIT-

VIEW mode is turned

playing lullaby.

# Connect and charge the


### **O**NOTES

attery

· Use only the power adapters supplied with this

- Make sure the electrical outlets are not controlled by wall switches
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if they are plugged into a ceiling, under-the-table or
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children

# Connect the baby monitor

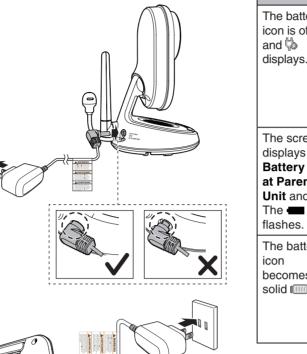

### Charge the parent unit battery

When you have connected the parent unit and installed its battery for the first time or after power outage, the parent unit powers on automatically. The battery icon indicates the battery status (see the following table).

- The parent unit battery is fully charged after 3 hours of continuous charging.
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

# Battery Action

time, turn the parent unit off while charging.

indicators	status	
The battery icon is off and battery displays.	No battery is installed but operates using AC power, or the battery has been installed incorrectly.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
The screen displays  Battery low at Parent Unit and The Ight flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

Sensitivity

to the parent unit.

Temperature

With this feature, you can choose

exceed a certain level. You can

use the parent unit to adjust the

to hear sounds from the baby unit

all the time, or to hear sounds that

nicrophone sensitivity of your baby

unit. The higher the sensitivity level

the more sensitive the baby unit is

in detecting sounds for transmitting

## efore use

 This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

## Test your baby monitor


devices, place your baby monitor far away from devices such as wireless routers, microwaves, cell phones and computers.

You may test the baby monitor before initial use, and at regular times thereafter.

## ()CAUTION

 For hearing protection, make sure the parent unit is more than 1 meter (3 feet) away from the baby unit. If you hear any high-pitched noise, move the parent unit further until the

noise stops. You can also press -/VOL on

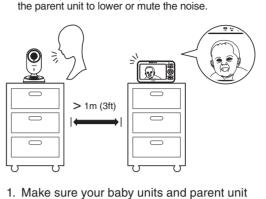

- are on. 3. Place the parent unit more than 1 meter 2. The parent unit displays images from the
- baby unit. • Speak towards the baby unit microphone.
- You will hear the sound at the parent 3. If you have more than one baby unit, press
- **VIEW** on the top of your parent unit. The screen switches to other baby units. Then, repeat step 2.

to CAM # (# represents the selected baby unit number), and the LINK LED light flashes, move the parent unit closer to the baby unit (observe

## When the parent unit displays \$\mathbb{Z}\$ and then No link

**Parent Unit** 

the minimum distance of 1 meter/ 3 feet). You can also check if the baby monitor is connected to a live power socket and switched on.

 Increase the parent unit speaker volume if you cannot hear the sounds transmitted from the baby

Battery low at parent unit is very low and

The battery level of the

The parent unit is turning

searching for baby units.

sing the baby monitor

Slide the **ON/OFF** switch on the baby units

• Slide the **ON/OFF** switch on the baby units

Power on or off the parent unit

• Press and hold  $\Phi$  to power on the parent

Press and hold U again to power off the

parent unit. The screen turns off.

Turn on or off the parent unit

You can turn on or off the parent unit screen

unit. The screen turns on.

to **ON** to power on. The **ON/OFF** LED light

Power on or off the baby unit

# Positioning the baby monitor

 Keep the baby units out of the reach of your baby. Never place or mount the baby units inside the baby's crib or playpen **P**NOTE

1. Place the baby units more than 1 meter

2. Adjust the angle of the baby unit camera to

(3 feet) away from the baby units.

• This baby monitoring system includes a

Adjust the speaker volume

special lens which is capable of optical zoom

and requires delicate treatment. Please avoid

disassembling, dropping, or any other rough

aim at your baby.

(3 feet) away from your baby.

### Operating range To avoid interference from other electronic

The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

• The default volume of your parent unit is level 4.

from your baby monitor while positioning:


more than 1 meter (3 feet) apart, OR


If you experience high-pitched screeching noise

Make sure your baby units and parent unit are


### Overview


### Baby unit overview

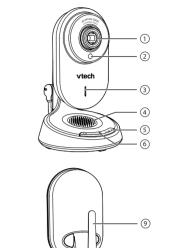

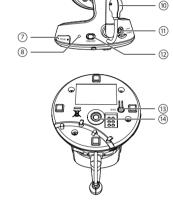

# Turn down the volume of your parent unit.

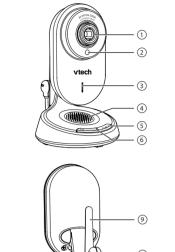

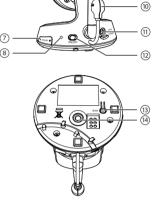

### Sound sensitivity table for reference

## For parent unit

 Press 

VOL or VOL 

on the parent unit at any time when viewing images.

• When the parent unit speaker volume is set to zero, ( appears on the screen and the 💢 light turns on

## For baby unit:

**OCAUTION** 

handling.

The baby unit speaker volume determines the lullaby volume and talkback volume transmitted from parent unit.

 Press - VOLUME + on the baby unit to adjust the speaker volume.

### Lullaby

To play lullaby on the baby unit: You can play lullaby on the baby unit to comfort your baby. You can also control the volume level of the lullabies.

- Press ►/■ PLAY/STOP on the baby unit to play lullaby. It starts playing lullaby for 10 • Press ➤ SKIP on the baby unit to switch to
- the other lullabies. Press ►/■ PLAY/STOP again to stop the
- Press VOLUME + to adjust the volume level of the lullaby on the baby unit.
- When the lullaby stops, press ►/■ PLAY/STOP to **OFF** to power off. The **ON/OFF** LED light again to replay. To play lullaby using the parent unit:

### You can play lullabies on the baby unit by controlling remotely with the parent unit. 1. Press **MENU** when the parent unit is idle.

- 2. Press **∨** or **∧** to choose **Lullaby**, then press SELECT.
- Press ✓ or Λ to choose a lullaby, or choose Play All.
- If Play All is selected, the lullabies will be played one after the other, until all Iullabies are played.
- 4. When the desired lullaby is selected, press
- ✓ or ∧ to choose Play or Stop.
- Lullaby playback control with the parent unit menu is available in SINGLE-CAM and PATROL mode only. The lullaby playback on the baby unit will be paused

when receiving talkback from the parent unit.

### Set the language You can select a language (English, French or

1. Press **MENU** when the parent unit is idle. 2. Press **∨** or **∧** to choose **Language**, then

brightness is preset to **Level 3**.

- 2. Press **∨** or **∧** to choose **LCD**, then press
- SELECT
  - brightness, then press SELECT to confirm your selection.

## Turn on or off the dim mode

the parent unit power. Whenever the parent automatically to save power.

- 1. Press **MENU** when the parent unit is idle. 2. Press **∨** or **∧** to choose **LCD**, then press

# While the screen is dimmed, any keypress or

# alert message will trigger the screen to return to

# idle, it will be dimmed again.

Adjust the sound sensitivity of

sound activation triggers the parent unit screen to turn on automatically. When no sound is detected within 50 seconds, the screen will be

- 3. Press **∨** or **∧** to choose **On** or **Off**, then
- press **SELECT** to confirm your selection The screen returns to main menu.

### Press to adjust the baby unit speaker volume. It determines the lullaby volume and talkback volume transmitted from the parent unit.

Motorized lens with 6x optical zoom

· Press to play the next lullaby.

Press to play or stop lullaby on the

**POWER light** On when the baby unit is turned on

Light sensor

Microphone

▶/■ Play/Stop

baby unit.

VOLUME +

Speaker

Skip >>

and is paired to the parent unit. Flashes when the baby unit is not being viewed; or when the link to the

parent unit is lost. Antenna

10 Temperature sensor 11 Power jack

 Slide to turn on or off the baby unit. PAIR Your baby units and parent unit

provided are already paired.

Press and hold on accessory

baby units (VM5231, purchased

separately) to pair to the parent unit.

ON/OFF switch

Threaded socket For wall mount installation use

# Sensitivity

vour baby's room.

baby sleeps soundly.

The parent unit speaker turns on for

The parent unit speaker turns on

vour baby makes soft sounds.

or loud babbling and louder sounds

The parent unit speaker turns on for

paby. It remains quiet when your

The parent unit speaker turns on for

rom your baby. It remains quiet when

loud crying or screeching sounds

your baby makes soft sounds.

babv makes soft sounds.

crying and louder sounds from your

om your baby. It remains quiet when

soft babbling and louder sounds from

your baby. It remains quiet when your

Spanish) to be used in all screen displays. Highest The parent unit speaker is constantly on, and you will hear all sounds including background noises) from press **SELECT**.

3. Press **∨** or **∧** to choose **English**, **Français** or **Español**, then press **SELECT** to confirm vour selection.

# Adjust LCD brightness

### You can change the brightness of the parent unit screen from Level 1 to Level 5. The LCD

# 1. Press **MENU** when the parent unit is idle.

- 3. Press **SELECT** again to choose Brightness. 4. Press **∨** or **∧** to choose the desired level of

### The dim mode is preset to on to help you save

unit has been left idle for 10 minutes while the screen is still on, the screen will be dimmed

- 3. Press **∨** or **∧** to choose **Dim Mode**, then press **SELECT**.
- Press ✓ or Λ to choose On or Off, then press SELECT to confirm your selection.

the preset brightness level. After 10 minutes of

### the baby units You can choose to hear sounds from the

baby units all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby units from Lowest to Highest. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound sensitivity level is preset to **Highest**.

### 1. Press **MENU** when the parent unit is idle. Press ✓ or Λ to choose Sensitivity, then press **SELECT** If you have more than one baby unit, the system prompts you to choose the

✓ or ∧ to choose ALL CAM or CAM #, then press SELECT 3. Press **∨** or **∧** to choose the desired sensitivity level, then press **SELECT** to

 You can adjust the baby unit placement to improve the sound detection

### Turn on or off the sound activation

confirm your selection.

When sound activation is on, as long as no sound is detected within 50 seconds, the parent unit screen will turn off automatically to save power. When your baby unit detects a sound, the

Screen, then press SELECT.

1. Press **MENU** when the parent unit is idle. 2. Press **∨** or **∧** to choose **Sound-activated** 

### LED lights Indicate the different statuses of the parent unit. For details, refer to Parent unit lights. LCD Microphone TALK Press and hold to talk to the selected aby unit in **SINGLE-CAM** or PATROL mode. VIEW / LCD ON/OFF Press and hold to turn off the parent Press to view the image of the next baby unit in SINGLE-CAM or PATROL mode. PATROL • Press to turn on or off the PATROL

Press to turn on or off the

Press and hold to power on.

Press and hold again to power off.

SPLIT-VIEW mode.

POWER

Parent unit overview

# PATEOL [ SPLIT ] @[[@] image downward. image rightward MENU/SELECT Press to enter the menu. While in a menu, press to choose ar item, or save a setting. ⊕ Zoom in

### speaker volume. After you have activated digital zoom in **SINGLE-CAM** or **PATRÖL** mode, press and hold to move the zoomed Press to decrease the parent unit image upward speaker volume. While in SPLIT-VIEW mode, press to Antenn move the selection box upward. Stand While in a menu, press to scroll down. Battery compartment cover After you have activated digital zoom in SINGLE-CAM or PATROL mode, Speaker press and hold to move the zoomed 17 Power jack While in SPLIT-VIEW mode, press to move the selection box downward. Parent unit lights **LINK** On when the parent unit is linked to While in a menu, press to return to the main menu or idle screen. Flashes when the link to the baby After you have activated digital zoom in SINGLE-CAM or PATROL mode. press and hold to move the zoomed While in SPLIT-VIEW mode, press to move the selection box leftward. battery is charging. • While in a menu, press to choose an After you have activated digital zoom in SINGLE-CAM or PATROL mode, press and hold to move the zoomed While in SPLIT-VIEW mode, press to the baby unit. move the selection box rightward. volume is turned off.

## viewed in SPLIT-VIEW mode is lost. On when the parent unit is connected to AC power, or the lashes when the narent un battery is low and needs charging Off when the parent unit is disconnected from AC power. On when the parent unit is talking to

# Parent unit display icons

JOUU	Till displays when strong signal strength is detected between the baby unit and the parent
	unit.  • In or In displays when moderate or low signal strength is detected between the baby unit and the parent unit.
	I displays when the link between the baby unit and the parent unit is lost.


### Split-view mode unit being viewed in SINGLE-CAM Displays when the or PATRŎL mode is lost; or when parent unit is in SPLITthe link to all baby units being VIEW mode. Night vision Displays when the baby unit being viewed has activated the night vision feature. Zoom

### Temperature alert tone On when the parent unit speaker Displays when the temperature alert tone is set on.

		riour time tomporature
Connection status  Mil displays when strong signal strength is detected between the baby unit and the parent unit.	°C	<ul> <li>Displays the real-time temperature detected by the baby unit in Fahrenheit (°F) or Celcius (°C) (e.g. 57 °F or 14 °C).</li> </ul>
Ill or II displays when moderate or low signal strength is detected between the baby unit		<ul> <li>Mute alert</li> <li>Displays when the parent unit speaker volume is set to off.</li> </ul>

°F or

# **Current view status** Displays the number of the baby unit that is being viewed when in SINGLE-CAM and PATROL mode. Displays the number of the highlighted baby unit when in SPLIT-VIEW mode. Patrol mode Displays when the parent unit is in PATROL mode. Displays when the baby unit camera is being zoomed in or out. Real-time temperature

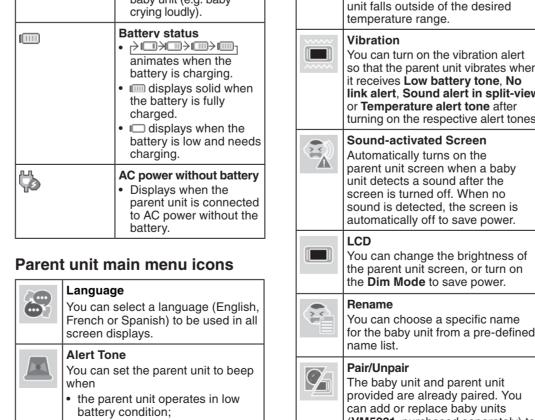

while in SPLIT-VIEW mode.

You can select, play, or stop a

Lullaby

Iullaby.

Speaker volume

while adjusting.

by the baby unit.

(4 to 6 bars)

the baby unit.

indicates moderate

(7 to 9 bars)

indicates high sound

level detected by the

baby unit (e.g. baby

Displays the parent unit

speaker volume level

9-level sound indicator

(1 to 3 bars) indicates

low sound level detected

sound level detected by

Pair/Unpair


battery condition;	can add or replace baby u
<ul> <li>the link between the parent unit and the baby unit is lost; or</li> </ul>	(VM5231, purchased sepa your baby monitor system
the baby unit detects sounds	


# parately) to

Parent unit display messages The selected baby unit is No link to

needs to be recharged. **Battery empty** The battery is empty and Powering off. needs to be recharged. he sound level exceeds <sup>ଆ</sup> Sound the threshold at CAM # in detected at CAM # SPLIT-VIEW mode. The temperature detected too high at CAM # by the baby unit is higher/ wer than the desired

You can turn on the <b>Temperature alert tone</b> so that the parent unit beeps whenever the room temperature detected by the baby unit falls outside of the desired	or Temp	by the baby unit is high lower than the desired temperature alert range at CAM #
temperature range.	Powering	g on The parent unit is turnir on.
Vibration You can turn on the vibration alert so that the parent unit vibrates when it receives Low battery tone, No link alert, Sound alert in split-view	*	The parent unit is searching for baby units
	* # repre	esents the selected baby unit number.





name list. The baby unit and parent unit vided are already paired. You

### without powering off the parent unit. You can still hear sound from the baby units. Press and hold LCD ON/OFF on the top of

turns off.

the parent unit to turn off the screen. out of range or is turned Press any key on the parent unit to turn on the screen again

even though sound activation is on.

### Monitoring mode

Every time the parent unit is turned on, it displays a baby unit in SINGLE-CAM mode If there are more than one baby units in your system, you can also monitor your baby in PATROL or SPLIT-VIEW mode.

SINGLE-CAM	The screen displays a single baby unit in full screen.
PATROL 🕘	A single cam view that transits to a different baunit every 10 seconds.
SPLIT-VIEW S	The screen displays all baby units (up to four) o one screen.
	•

### In SINGLE-CAM or PATROL mode:

Press VIEW to view the next baby unit.



Press PATROL to switch to PATROL mode if you are in **SINGLE-CAM** mode, and vice

them from overheating, these openings must

Never push objects of any kind into this product

Never spill liquid of any kind on the product.

disassemble this product, but take it to an

parts of the product other than specified

access doors may expose you to dangerous

voltages or other risks. Incorrect reassemblir

can cause electric shock when the product is

time you turn on the units or move one of the

21. Periodically examine all components for damage

22. Be aware of possible loss of privacy while using

public airwaves. Conversations may be picked

23. Children should be supervised to ensure that

24. The product is not intended for use by persons

(including children) with reduced physical.

sensory or mental capabilities, or lack of

25. The equipment is to be supplied from an

identified USB port complying with the

requirements of Limited Power Source.

Use and store the product at a temperature

between 32°F and 104°F.

a heating source.

**SAVE THESE INSTRUCTIONS** 

Do not expose the product to extreme cold, heat

Batteries should not be exposed to excessive

Make sure the baby unit(s) and the adapter

cord(s) are always out of reach of the baby, at

least 3 feet away from the baby or crib, to avoid a

Never place the baby unit(s) inside the baby's crib

or playpen. Never cover the baby unit(s) or parent

unit with anything such as a towel or a blanket.

heat such as bright sunshine or fire.

possible strangulation hazard.

Other electronic products may cause

or direct sunlight. Do not put the product close to

experience and knowledge, unless they have

been given supervision or instruction concerning

use of the appliance by a person responsible for

they do not play with the product

up by other nursery monitors, cordless phones

20. You should test the sound reception every

authorized service facility. Opening or removing

through the slots because they may touch

19. To reduce the risk of electric shock, do not

not be blocked by placing the product on a soft

dangerous voltage points or create a short circuit.





heat register

subsequently used

components

scanners, etc.

their safety.

Cautions

17. This product should not be placed in any area intercoms, room monitors, television: where proper ventilation is not provided. Slots personal computers, kitchen appliances and and openings in the back or bottom of this cordless telephones. product are provided for ventilation. To protect

### Precautions for users of implanted cardiac surface such as a bed, sofa or rug. This product Cardiac pacemakers (applies only to digital cordless should never be placed near or over a radiator or

correspondingly

In SPLIT-VIEW mode:

after 10 seconds

Zoom

Press ∧, ∨, ≺ or > to select a baby unit.

Press PATROL to enter PATROL mode.

(SINGLE-CAM or PATROL) used before

The parent unit is muted while in SPLIT-VIEW mode.

You can zoom in or out with a 6x optical zoom

and a 2x digital zoom while viewing image from

baby unit in SINGLE-CAM and PATROL mode.

1. When the knob reaches the darker area at the

end of the zoom bar, the parent unit displays

Press ⊕ to zoom in and ⊖ to zoom out.

Press [Zoom+] for one more zoom.

2. Press ⊕ again to activate digital zoom

· After you have activated digital zoom

downward, leftward or rightward

you can press and hold  $\wedge$ ,  $\vee$ ,  $\triangleleft$  or  $\triangleright$ 

to move the zoomed image upward,

To activate digital zoom:

Press SPLIT to return to the mode

entering **SPLIT-VIEW** mode.

selected baby unit temporarily in SINGLE-

CAM mode. It returns to SPLIT-VIEW mode

Press Q, ⊕, or VIEW key to view the

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers, Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that

 Should keep wireless devices at least six inches from the pacemaker Should NOT place wireless devices directly over

Pacemaker patients

the pacemaker, such as in a breast pocket, when it is turned ON

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

### Electromagnetic fields (EMF)

This VTech product complies with all standard regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

### The RBRC $^{ exttt{ iny B}}$ seal

The RBRC® seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in vour area.

VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized Tech product service centers. Please call 1 (800) 8 BATTERY® for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.



RBRC® and 1 (800) 8 BATTERY® are registered trademarks of the Rechargeable Battery Recycling Corporation.

### Press SPLIT to enter the SPLIT-VIEW mode.

When you press  $\Theta$  or  $\Theta$  to zoom in or out while viewing image on the parent unit, there will be a mild buzzing sound generated from the baby unit. This is normal due to the movement of the motor components inside the camera.



## You can use the **TALK** function of the parent

PATROL mode 1. Press and hold TALK on the parent unit.

The TALK light turns on 2. Speak towards the microphone on the

unit to comfort your baby in SINGLE-CAM and

- parent unit. Your voice is broadcast to the 3. Release the **TALK** key to stop the
- broadcast. The TALK light goes off.

### Set alert tone Low battery tone

You can set the parent unit to beep when the parent unit operates in low battery condition.

- 1. Press **MENU** when the parent unit is idle. 2. Press **∨** or **∧** to choose **Alert Tone**, then
- press **SELECT**. 3. Press **SELECT** again to choose
- Low Battery Tone 4. Press **∨** or **∧** to choose **On** or **Off**, then

### No link aler You can set the parent unit to beep when the

FCC Part 15

following measures:

and receiver

connected

technician for help.

undesired operation.

vour face.

Canadian requirement

CAN ICES-3 (B)/NMB-3(B)

link between the parent unit and the baby unit

press **SELECT** to confirm your selection

- 1. Press **MENU** when the parent unit is idle. 2. Press **∨** or **∧** to choose **Alert Tone**, then
- press **SELECT**.
- 3. Press **∨** or **∧** to choose **No Link Alert**, then press **SELECT**. 4. Press **∨** or **∧** to choose **On** or **Off**, then
- press **SELECT** to confirm your selection.

FCC and IC regulations

This equipment has been tested and found to

comply with the requirements for a Class B digital

intended to provide reasonable protection against

equipment generates, uses and can radiate radio

equency energy and, if not installed and used in

interference to radio communications. However

in a particular installation. If this equipment does

cause harmful interference to radio or television

reception, which can be determined by turning the

try to correct the interference by one or more of the

Increase the separation between the equipment

circuit different from that to which the receiver is

oula vola the users

Consult the dealer or an experienced radio/TV

equipment off and on, the user is encouraged to

Reorient or relocate the receiving antenna.

Connect the equipment into an outlet on a

WARNING: Changes or modifications to this

authority to operate the equipment.

equipment not expressly approved by the party

This device complies with Part 15 of the FCC rules

Operation is subject to the following two conditions:

this device may not cause harmful interference.

To ensure safety of users, the FCC has established

criteria for the amount of radio frequency energy

that can be safely absorbed by a user or bystander

product has been tested and found to comply with

the FCC criteria. The baby unit shall be installed

and used such that parts of all persons' body are

maintained at a distance of approximately 8 in

This Class B digital apparatus complies with

according to the intended usage of the product. This

(20 cm) or more. The transmitter and antenna of the

parent unit shall be held at least 1 in (2.5 cm) from

and (2) this device must accept any interference

received, including interference that may cause

narmful interference in a residential installation. This

accordance with the instructions, may cause harmful

there is no guarantee that interference will not occur

device under Part 15 of the Federal Communications

mission (FCC) rules. These requirements are

# 4. Press **∨** or **∧** to choose **On** or **Off**, then

Sound alert in split-view

press **SELECT** to select. 3. Press **∨** or **∧** to choose **Sound alert in** split-view, then press SELECT.

You can turn on the sound alert feature so that,

beeps and displays Sound detected at CAM #

while in **SPLIT-VIEW** mode, the parent unit

1. Press **MENU** when the parent unit is idle.

Press ✓ or Λ to choose Alert Tone, then

whenever the baby unit detects sounds.

### **⊘**NOTE

SPLIT-VIEW mode.

press **SELECT** to confirm your selection. 1. Press **MENU** when the parent unit is idle. 2. Press **∨** or **∧** to choose **Temperature**, then press **SELECT**. • The sound alert feature is only available in

· If you have more than one baby unit,

Press ✓ or Λ to choose On or Off, then

press **SELECT** to confirm your selection.

You can choose to display the temperature in

Press ✓ or Λ to choose Format, then press

Press ✓ or ▲ to choose Fahrenheit or

Turn on or off the vibration

turning on the respective alert tones.

Press ✓ or Λ to choose On or Off.

Rename the baby units

sub-menu of below options

Celsius, then press SELECT to confirm

You can turn on the vibration feature so that

the parent unit vibrates when it receives any of

Low battery tone, No link alert, Sound alert

in split-view or Temperature alert tone after

Press MENU when the parent unit is idle.

2. Press **∨** or **∧** to choose **Vibration**, then

Press SELECT to confirm your selection.

You can rename each baby unit. Once the

baby unit is renamed, its new name together

with the baby unit number will appear in the

. Press **MENU** when the parent unit is idle.

Press ✓ or Λ to choose the desired baby

2. Press **∨** or **∧** to choose **Rename**, then press

Rename

Pair/Unpair

If the vibration feature is turned on, the parent unit

will vibrate as it receives sound broadcast from

then press SELECT

Fahrenheit (°F) or Celcius (°C).

**Temperature format** 

your selection.

press **SELECT**.

the baby unit.

Sensitivity

SELECT

Temperature

the system prompts you to choose the

desired baby unit or all baby units, press

✓ or ∧ to choose ALL CAM or CAM #,

### Monitor the temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature sensor. If the detected temperature is outside of the preset temperature range, the parent unit will display alert message.

## Set temperature range

You can set the desired room temperature alert range. The minimum temperature can be set between 52 °F (11 °C) and 69 °F (20 °C). The maximum temperature can be se between 70 °F (21 °C) and 86 °F (30 °C).

- 1. Press MENU when the parent unit is idle. 2. Press **∨** or **∧** to choose **Temperature**, then press **SELECT**.
- 3. Press **∨** or **∧** to choose **Minimum** or Maximum, then press SELECT.

then press SELECT.

- If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press ✓ or ∧ to choose ALL CAM or CAM #,
- 4. Press **∨** or **∧** to choose the desired minimum or maximum temperature, then press **SELECT** to confirm your selection.

Industry Canada

specifications.

Humans to RF Fields.

activated while charging.

it is powered off and charging.

exempt RSS standard(s)

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range

- 1. Press **MENU** when the parent unit is idle. 2. Press **∨** or **∧** to choose **Temperature**, then
- press **SELECT**. 3. Press **∨** or **∧** to choose **Alert Tone**, then
- press **SELECT**.

This device complies with Industry Canada licence-

Operation is subject to the following two conditions

(1) this device may not cause harmful interference,

and (2) this device must accept any interference.

including interference that may cause undesired

The term "IC:" before the certification/registration

This product meets the applicable Innovation, Science

environment. The baby unit should be installed and

between the baby unit and all persons' body. Use o

other accessories may not ensure compliance with

FCC RF exposure guidelines. This transmitter mus

not be co-located or operating in conjunction with

any other antenna or transmitter. This equipment

complies also with Industry Canada RSS-102 with

respect to Canada's Health Code 6 for Exposure of

California Energy Commissio

This baby monitor meets the California Energy

consumption. Your baby monitor is set up to comply

with the energy-conserving standards right out of

Follow the instructions to install and charge the

battery. The CEC battery charging testing mode is

Even if the parent unit is paired to baby units, the

CEC battery charging testing mode is activated while

Commission (CEC) regulations for energy

ittery cnarging testing mode

operated with a minimum distance of 8 in (20 cm)

number only signifies that the Industry Canada

and Economic Development Canada technical

The baby unit complies with FCC RF radiation

exposure limits set forth for an uncontrolled

technical specifications were met.

RF radiation exposure statement

## For cETL compliance only

unit, then press **SELECT**.

Mesures de sécurité importantes Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie.

ceux qui suivent 1. Observez toutes les instructions et mises en garde inscrites sur l'appareil

d'électrocution et de blessures corporelles, dont

- L'installation par un adulte est requise. . Ce produit a été concu pour être un dispositif
- d'appoint seulement. Il n'est pas le remplacement d'une supervision responsable et adéquate par ur adulte et ne devrait pas être utilisé comme telle.
- 4. Ce produit n'est pas conçu pour être utilisé en tant que moniteur médical.
- N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine. dans un soussol humide ou une douche.
- MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour l'unité du parent. N'utilisez que le bloc-piles rechargeable inclus ou le bloc-piles de echange (BT198555/BT298555). N'incinérez pas les piles. Celles-ci risqueraient d'exploser. Jetez les piles usées selon les renseignements suivant le sceau du RBRC<sup>MD</sup> N'utilisez que les adaptateurs inclus avec ce
- polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril Adaptateur de l'unité du bébé Sortie: 6 V CC 600mA Adaptateur de l'unité du parent : Sortie: 5 V CC 1A 8. Lorsqu'ils sont branchés dans une prise de
- courant, les adaptateurs secteur ont été concus pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuici est branché dans une prise au plafond, sous une table ou dans un meuble.
- Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant. 10. Débranchez ce produit de la prise de courant
- avant de procéder au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide pour le nettover. 11. Débranchez les cordons d'alimentation avant de
- remplacer le bloc-piles 12. Ne coupez pas les cordons d'alimentation pour
- 25. L'équipement doit être fourni à partir d'un remplacer les fiches, car ceci peut présenter un

 Press ➤ or ➤ to choose the desired name for the baby unit, then press **SELECT** to

### Night vision

confirm your selection.

the dark environment.

Pair new baby unit

light sources.

the parent unit. Store the parent unit, the baby unit The baby unit has infrared LEDs that allow you and the adapters in a cool and dry place. to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched requently asked question on automatically. The images from this baby unit

### is in black and white, and $\mathcal{J}$ appears on screen Below are the guestions most frequently asked about NOTES

the baby monitor. If you cannot find the answer to your • It is normal if you see a short white glare on your question, visit our website at www.vtechphones.com or contact 1 (800) 595-9511 for customer service. In parent unit screen as the baby unit is adapting to Canada, visit our website at www.vtechcanada.com or call 1 (800) 267-7377.

not respond

Why don't

light of the

the power-or

parent unit

go on when

Why doesn't

charge while

AC power?

Why is my

my parent unit

tch on the

When you are not going to use the baby monitor for

sted) for common cure:

oatteries agair

parent unit.

baby unit.

parent unit.

this to take place.

. Disconnect the power to the

. Remove the batteries in the

parent unit. Then install the

connecting power back to the

. Turn on the baby units and the

. Wait for the parent unit to

synchronize with the baby

Perhaps the parent unit is not

onnected to the power. Insert

ne appliance plug into the parer

nit and put the adapter in a wa

ocket. Then press and hold 🖰

switch on the parent unit and

establish connection with th

erhaps the baby unit is not

set the **ON/OFF** switch to **ON** 

o switch on the baby unit and

to establish connection with the

lake sure the battery is correctly

Make sure the power is not

istalled in vour parent unit.

You may have used the battery

for a long time. Replace a new

The screen is in black and white

luring nighttime or in a dark

oom. This is normal due to

external light sources.

controlled by a wall switch.

he baby unit to the power. Ther

nected to the power. Connec

baby units and the parent unit.

units. Allow up to one minute fo

Wait a few seconds before

baby units and the parent unit

some time, remove the rechargeable battery from

- When the infrared LEDs are on, the image is in Why does the Try the following (in the order
- black and white. This is normal due to external baby monitor

### Depending on the surroundings and other nterfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display

(VM5231) The baby units and parent unit provided are already paired. You can add or replace a baby unit (VM5231) to your video and audio monitor system. You can pair a maximum of four baby units to your parent unit

For more details, refer to the user's manual that comes with your VM5231 new baby unit.

## Seneral product care

To keep this product working well and looking good, follow these guideline: Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or

- fluorescent lamps) • DO NOT expose it to direct sunlight or moisture. Avoid dropping the product or treating it roughly.
- Clean with a soft cloth. . DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap
- · DO NOT use cleaning spray or liquid cleaners.
- Make sure the baby unit and parent unit are dry before you connect them to the power again.
- This baby monitoring system includes a special lens which is capable of optical zoom

### and requires delicate treatment. Please avoid disassembling, dropping, or any other rough handling. Ne laissez aucun obiet reposer ni appuver sur le cordon d'alimentation. N'installez pas cet

appareil dans un endroit où l'on risque d'écraser

le cordon d'alimentation ou de le piétiner

type d'alimentation indiqué sur l'étiquette. Si

vous ne connaissez pas le type d'alimentation

votre marchand ou votre compagnie locale

meuble, trépied, support de montage ni table

l'arrière de l'appareil ou sous celui-ci, servent

aérer l'appareil. Pour l'empêcher de surchauffer

ne bloquez sous aucun prétexte ces ouvertures

l'appareil en le placant sur un lit, divan, tapis ou

toute autre surface similaire. De même, ne le

positionnez pas à proximité ni au-dessus d'une

source de chaleur ou d'un calorifère. De plus,

ne placez pas l'appareil dans un endroit avan

ouvertures de cet appareil, car ils pourraien

entrer en contact avec des points de tension

dangereux ou causer des courts-circuits qui

19. Afin de réduire les risques d'électrocution, ne

peuvent dégénérer en incendies ou en risque

démontez nas cet annareil, mais annortez-le

contient cet appareil, à l'exception de l'accès

du boîtier ou le retrait de toutes pièces que

autorisé à certaines portes ou ouvertures,

dans un centre de service autorisé. L'ouverture

risque de vous exposer à des points de tension

dangereux ou d'autres dangers. Un remontage

20. Vous devriez tester la réception chaque fois que

orsque vous utilisez les ondes publiques. Les

conversations peuvent être entendues par

23. Les enfants devraient être supervisés afin de

24. Le produit n'est pas conçu pour être utilisé

d'autres moniteurs de bébé, des téléphones

par des personnes (incluant des enfants) aux

capacités physiques, sensorielles ou mentale

réduites ou qui manquent d'expérience et de

connaissances, à moins qu'on leur ait donné

21. Examinez les composantes afin de vérifier si

elles-ci ne sont pas endommagées

22. Soyez avisé de la perte de la confidentialité

ous mettez l'appareil en fonction

sans fil, des scanneurs, etc.

incorrect peut par la suite présenter des risques

d'électrocution. Ne renversez jamais de liquide

18. N'enfoncez jamais d'objets à travers les

dans ce produit.

de vous assurer qu'il v ait une bonne circulation

que vous possédez à votre domicile, consultez

14. Ne faites fonctionner cet appareil qu'avec le

15. Ne surchargez pas les prises de courant

murales ni les rallonges électriques.

Ne placez pas cet appareil sur un chariot.

17. Les trous et ouvertures du boîtier, situés à

et n'empêchez pas l'aération adéquate de

d'électricité.

# Utilisez et entreposez le produit à une

- température entre 0° C (32°F) et 40°C (104°F). 2. N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe
- 3. Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu.
- de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3 pieds) de l'enfant ou du berceau, pour éviter tout risque de strangulation
- le moniteur ou l'unité (s) portative avec un article tel une serviette ou une couverture. D'autres équipements électroniques peuvent produire des interférences sur votre moniteur
- vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels électroménagers et téléphones sans fil.

dispositifs numériques sans fil) : a mené une évaluation pluridisciplinaire des

interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans 'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins: Avis aux détenteurs de stimulateurs cardiaques

 Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque. Ils ne doivent PAS placer le téléphone sans fil

identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci.

suffisamment de supervision ou d'instructions les normes se rapportant aux champs relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

## imited warranty

with the Product operating instructions. This limited

warranty extends only to the Consumer for Products

purchased and used in the United States of America

During the limited warranty period, VTech's

authorized service representative will repair

a Materially Defective Product. If we repai

or replace at VTech's option, without charge

the Product, we may use new or refurbished

replacement parts. If we choose to replace the

etain defective parts, modules, or equipmer

replacement to take approximately 30 days

How long is the limited warranty period?

The limited warranty period for the Product extends

for ONE (1) YEAR from the date of purchase. If

VTech repairs or replaces a Materially Defective

Product under the terms of this limited warranty.

this limited warranty also applies to the repaired

or replacement Product for a period of either (a)

90 days from the date the repaired or replacement

Product is shipped to you or (b) the time remaining

on the original one-year warranty; whichever is

What is not covered by this limited warranty?

1. Product that has been subjected to misuse,

accident, shipping or other physical damage.

improper installation, abnormal operation or

This limited warranty does not cover:

or cable or antenna systems; or

liquid intrusion; or

What does this limited warranty cover? The manufacturer of this VTech Product warrants to du soleil. Ne l'installez pas près d'une source de

and Canada

Product")?

Why do I get

screen when

iewing my

baby at night?

oaby monitor

high-pitche

the baby unit

flashes and

glare or blurry

During nighttime or in a dark

room, the surroundings and other

objects, colors and background

may affect the image quality or

your parent unit screen. Adjus

he baby unit's angle or place

Why does the The parent unit and baby units

the baby unit at a higher level t

may be too close to each other

Move the parent unit away

noise stops; ÓR

parent unit.

unit is idle.

from the baby units until the

Turn down the volume of your

The baby unit is unpaired from

teps to pair the baby unit. Mak

Press **MENU** when the paren

Press ▼ or ▲ to choose Pair

Unpair CAM, then press

Press **SELECT** again to

Press ▼ or ▲ to choose an

press **SELECT**. The parent

unit screen displays Press

at the CAM for 5 seconds

until the power indicator

Immediately press and hold

PAIR on the bottom of the

baby unit with a narrow

pointed object such as a

When pairing is successful, the

screen displays the view of ne

If pairing fails, the screen

pairing process again.

baby unit remains on.

paired baby unit in SINGLE-CAN

node. The LED light on the new

displays Pairing failed. Try th

Only one baby unit can be

pencil. The LED light flashes

and hold the pair buttor

choose Pair CAM.

e parent unit. Follow below

sure both parent unit and baby

init are on before pairing

revent glare and blurry display.

erfering factors, like lightings

- chauffage. or "vou") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship pursuant to the following terms and conditions, 4. Assurez-vous que le moniteur et le cordon when installed and used normally and in accordance
- Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir

### Stimulateurs cardiaques implantés dans Les simulateurs cardiaques (ne s'applique qu'aux

L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante,

directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche. L'étude effectuée par l'organisme WRS n'a pas vous assurer qu'ils ne jouent pas avec l'appareil

Champs électromagnétiques (EMF)

### Ce produit de VTech est conforme à toutes

électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant

### serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or

- 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products the holder of a valid proof of purchase ("Consumer used for rental purposes); or
  - 7. Product returned without a valid proof of purchase (see item 2 on the next page); or 8. Charges for installation or set up, adjustment of

iser's manual - a check of the Product's controls

Why does the The baby units may be out of

ess than 3 feet).

unit for up to 3 hours.

f your parent unit is in

parent unit

Why does the

parent unit

SPLIT-VIEW

the parent

unit react to

Why don't I

hear a sound

Why can't I

establish a

nnection

/hv is the

nd then?

Whv are

there sound

nnection

hear my baby

ther sounds?

range. Move the parent unit

f the parent unit is powered

not have enough charge for the

SPLIT-VIEW mode, some of you

baby units may detect sounds.

The temperature of your baby's

ensitivity level to **Highest** wher

e sound alert (and vibration)

eature are turned on. The parei

cluding background noise with

peeps (or vibrations). Adjust the

sound sensitivity to a lower leve

The baby unit also picks up other

sounds than those of your baby.

Adjust the sensitivity level to a

The parent unit speaker volume

**VOL** to increase the volume.

unit to set to a higher level

The baby units may be out of

range. Move the parent unit

loser to the baby units

of 1 meter/ 3 feet).

You may have set a low sound

sensitivity level. See Adjust the

ound sensitivity of the baby

bserve the minimum distance

ause interference with your hab

nonitor. Try installing your baby

nonitor as far away from these

electronic devices as possible.

Other electronic products may

be too low or off. Press +/

unit speaker volume.

unit notifies you of all sounds

You may have set the sound

parent unit to perform normally

closer to the baby units (but not

customer controls, and installation or repair of systems outside the unit.

How do you get warranty service?

### To obtain warranty service in the USA, please visit our website at www.vtechphones.com or What will VTech do if the Product is not free from call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-737 defects in materials and workmanship during the limited warranty period ("Materially Defective NOTE: Before calling for service, please review the

and features may save you a service call Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery o nandling charges incurred in the transport of the Product(s) to the service location. VTech will return Product, we may replace it with a new or refurbished repaired or replaced Product under this limited Product of the same or similar design. We will warranty. Transportation, delivery or handling charge are prepaid. VTech assumes no risk for damage or Repair or replacement of the Product, at VTech's loss of the Product in transit. If the Product failure option, is your exclusive remedy. VTech will return s not covered by this limited warranty, or proof of the repaired or replacement Products to you in purchase does not meet the terms of this limited working condition. You should expect the repair or warranty, VTech will notify you and will request that you authorize the cost of repair prior to any furthe repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that

### What must you return with the Product to get warranty service?

are not covered by this limited warranty

including the Product to the VTech service location along with a description of the malfunction or difficulty: and 2. Include a "valid proof of purchase" (sales receipt)

1. Return the entire original package and contents

- identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing

## handling, neglect, inundation, fire, water or other

all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

which vary from state to state or province to province.

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

iportant safety

- the product. . Adult setup is required.
- . This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such
- 4. This product is not intended for use as a medical 5. Do not use this product near water. For example
  - do not use it next to a bath tub, wash bowl kitchen sink, laundry tub or swimming pool, or in a wet basement or shower CAUTION: Use only the batteries indicated in

Follow all warnings and instructions marked on

this manual. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Jse only the supplied rechargeable battery o eplacement battery pack (BT198555/BT298555 for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the information in The RBRC® seal. Use only the adapters included with this product

Incorrect adapter polarity or voltage can

- seriously damage the product. Baby unit power adapter: Output: 6V DC 600mA Parent unit power adapter: Output: 5V DC 1A. 8. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The
- prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table o cabinet outlet . For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be

easily accessible

cleaning. Do not use liquid or aerosol cleaners Use a damp cloth for cleaning Unplug the power cords before replacing

Unplug this product from the wall outlet before

- 12. Do not cut off the power adapters to replace
- them with other plugs, as this causes a hazardous situation 13. Do not allow anything to rest on the power cords Do not install this product where the cords may
- be walked on or crimped 14. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power
- supply in your home, consult your dealer or local 15. Do not overload wall outlets or use an extension
- Do not place this product on an unstable table.
- shelf, stand or other unstable surfaces.

Limitations: Implied warranties, including those of

fitness for a particular purpose and merchantability (ar

ise) are limited to one year from the date of purchase

unwritten warranty that the Product is fit for ordinary

Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shal VTech be liable for any indirect, special, incidenta consequential, or similar damages (including, but

provinces do not allow the exclusion or limitation of ncidental or consequential damages, so the above limitation or exclusion may not apply to you.

not limited to lost profits or revenue, inability to use

the Product or other associated equipment, the cos

of substitute equipment, and claims by third parties

resulting from the use of this Product. Some states

of purchase.

Please retain your original sales receipt as proof

# echnical specifications

Transmit Baby unit: 2406 - 2475 MHz frequency Parent unit: 2406 - 2475 MHz Channels LCD 5" Color LCD Nominal Maximum power allowed by FCC and IC. Actual operating range may effective vary according to environmental range conditions at the time of use. Parent unit: 3.7V Li-polymer battery requirements Baby unit power adapter:

# Output: 5V DC @ 1A

The Background Noise sound file was created by Caroline Ford, and is used under the Creative Commons license. The Stream Noise sound file was created by Caroline Ford and is used under the Creative Commons license The Crickets At Night sound file was created by Mike Koenig and is used under the Creative Commons license. The *Heart Beat* sound file was created by Zarabadeu, and is ised under the Creative Commons license



© 2017 VTech Communications, Inc All rights reserved, 03/17, VM5271-X CIB V2 Document order number: 91-010499-010-100

Frequency Crystal controlled PLL synthesizer control

Output: 6V DC @ 600mA

Parent unit power adapter


address, and telephone number. Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes

2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability,

specific legal rights, and you may also have other rights,

State/Provincial Law Rights: This warranty gives you



interference with your baby monitor. Try 4. Product to the extent that the problem is caused acquiescement gauche identifié d'USB aux de nombreuses années, selon les meilleures installing your baby monitor as far away by use with non-VTech accessories; or conditions de la source d'énergie limitée. évidences scientifiques dont nous disposons from these electronic devices as possible 5. Product whose warranty/quality stickers, product CONSERVEZ CES INSTRUCTIONS wireless routers, radios, cellular telephones,