VM3261 VM3261-2

Video Monitor







vtech


User's manual

CONGRATULATIONS

on purchasing your new VTech product. Before using this product, please read Important safety

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature-rich VTech product.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.

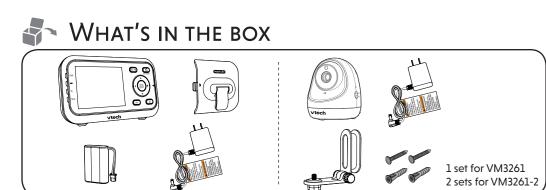

CONNECT AND CHARGE THE BATTERY

Install the battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time only.

Notes

- Use only the battery supplied with this product.
- · If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage










Replace the battery

To replace the battery, press down on the battery compartment cover and pull it out, then follow the steps above to install the battery.

Connect the baby monitor

■ Notes

- Use only the power adapters supplied with this product.
- Make sure the baby monitor is not connected to the switch controlled electric outlet
- · Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-thetable, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

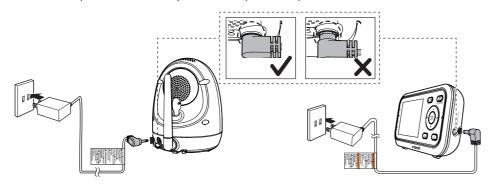

Charge the parent unit battery

When you have connected and turned on the parent unit, the battery will be charged automatically. The battery icon indicates the battery status (see the following table).

- The parent unit battery is fully charged after 11 hours of continuous charging.
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the volume level you set and your actual use.

DATTERT INDICATORS	DATTERT STATUS	ACTION	
The battery icon is off and displays .	No battery is installed but operates using AC power, or the battery has been installed incorrectly.	Install the parent unit battery. Charge without interruption (at least 30 minutes).	
The screen displays Battery low at Parent Unit and The Ilight flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).	
The battery icon becomes solid	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.	

2 Before use


· This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

Test your baby monitor

You may test the baby monitor before initial use, and at regular times thereafter.

 For hearing protection, make sure the parent unit is more than 3 feet (1 meter) away from both baby units. If you hear any high-pitched noise, move the parent unit further until the noise stops. You can also press VOL- on the parent unit to lower or reduce the noise



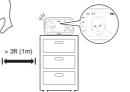

- 1. Make sure your baby unit and parent unit are on.
- 2. The parent unit displays images from the baby unit.
- Speak towards the microphone of the baby unit. You will hear the sound at the parent unit.
- 3. If you have two baby units, view the image from one of them by pressing CAM. Then,

☐ Note

When the parent unit displays $_{\bullet}$, and the **LINK** LED light flashes, move the parent unit closer to the baby units (observe the minimum distance of 3 feet / 1 meter). You can also check if the baby unit is connected to a live power socket and switched on.

Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the

Positioning the baby monitor

(1) CAUTION

Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's crib or playpen.

■ Note


- To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 meter) away from devices such as wireless routers, microwaves, cell phones and computers.
- 1. Place the baby units more than 3 feet (1 meter) away from your baby.
- 2. Adjust the angle of the baby unit camera to aim at your baby.
- Tilt adjust camera angle manually.
- Pan <u>press and hold</u> ◀ or ▶ on the
- parent unit remotely 3. Place the parent unit more than 3 feet
- (1 meter) away from the baby units to avoid screeching noise.

① CAUTION

- The default volume of your parent unit is level 3, and the maximum volume is level 5. If you experience high-pitched screeching noise from your baby monitor while positioning:
- Make sure your baby units and parent unit are more than 3 feet (1 meter) apart, OR
- Lower the volume of your parent unit.

Operating range

The operating range of the baby monitor is up to 1000 feet (300 meters) outdoors or 160 feet (50 meters) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

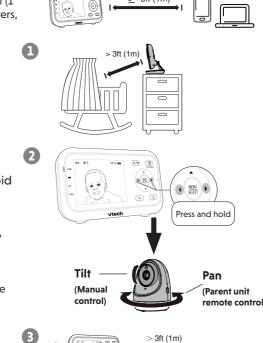

USING THE BABY MONITOR

Power on or off the baby unit

- Slide the \circlearrowleft **ON/OFF** switch to **ON** to turn on the baby unit. The **POWER** LED light turns on.
- Slide the **ON/OFF** switch to **OFF** to turn off the baby unit. The **POWER** LED light turns off.

Power on or off the parent unit

- Press and hold \odot to turn on the parent unit. The screen turns on.
- <u>Press and hold</u> Φ again to turn off the parent unit. The screen turns off.

Turn on or off the parent unit screen

You can turn on or off the parent unit screen without powering off the parent unit. You can still hear sound from the baby units.

- Press and hold LCD ON/OFF on the parent unit to turn off the screen.
- Press any key on the parent unit to turn on the screen again

Adjust speaker volume

Press VOL-/VOL+ on the parent unit to adjust the speaker volume.

parent unit is talking to the baby unit. When it is muted, i x appears on the screen and the X light turns on.

Users cannot set the parent unit speaker volume to zero. The parent unit will be muted automatically when the

The baby unit speaker volume determines the lullaby volume and talkback volume

transmitted from parent unit. The volume can be adjusted in the parent unit.

- 1. Press MENU when the parent unit is idle.
- 2. Press ◀ or ▶ to choose , , then press **SELECT** or ▲.
- 3. Press ◀ to choose **●**1.
- 4. Press ▼ or ▲ to choose the volume level of the baby unit.
- 5. Press **SELECT** to confirm your selection.

Adjust LCD brightness

You can change the brightness of the parent unit screen from Level 1 to Level 5. The LCD brightness is preset to **Level 3**.

- 1. Press **MENU** when the parent unit is idle.
- 2. Press ◀ or ▶ to choose ☼, then press **SELECT** or ▲.
- 3. Press ▼ or ▲ to choose the desired level of brightness, then press SELECT.

Specifications are subject to change without notice. © 2018 VF elect Communications, Inc. All rights reserved. 11/18. VM3561-X, CIB_V5 Document order number: 91-010873-040-100

USING THE BABY MONITOR (CON'T)

Lullaby

The baby monitor has five Iullabies and four soothing sounds for you to comfort your baby. You can play the lullabies or soothing sounds on the baby unit using the parent unit.

- 1. Press **MENU** when the parent unit is idle.
- 3. Press ▲ to choose 🍇 , then press ◀ . 4. Press ▼ or ▲ to choose a lullaby or a soothing sound, or choose ¹⁰⁰ to stop playing.
- 5. Press **SELECT** to confirm your selection.

Screen off timer

• The selected lullaby plays for 30 minutes and stops automatically. · The lullaby playback on the baby unit will be paused when receiving talkback from the parent unit.

You can set the screen off time for the parent unit when there is no key press for a specific

When the screen is turned off, you can still hear sound from the baby unit.

1. Press **MENU** when the parent unit is idle.

Monitoring mode * for VM3261-2 only

- 2. Press ◀ or ▶ to choose ■, then press **SELECT** or ▲.
- 3. Press ▼ or ▲ to choose the desired time period to automatically turn off screen (A / A / A / OFF), then press **SELECT** to confirm your selection.

Every time the parent unit is turned on, it displays a baby unit in **Single CAM** mode. If there

are two baby units in your system, you can also monitor your baby in Patrol mode.

Single CAM

Patrol

The screen displays image of a single baby unit in full screen. A single cam view that transitions to a different baby unit every 10 seconds.

To switch to another camera:

• Press CAM to view the next baby unit.











To enter Patrol mode:

- 1. Press MENU when the parent unit is idle.
- 2. Press ◀ or ▶ to choose , then press **SELECT** or ▲.
- 3. Press ▼ or ▲ to switch ♠, then press **SELECT** to confirm your selection.

Adjust the sound sensitivity of the baby unit

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The VOX sensitivity level is preset to the highest level.

VOX SENSITIVITY LEVEL	Highest	High I	Medium I	Low I	Lowest I
DESCRIPTION	The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room.	The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.	The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.

- 1. Press **MENU** when the parent unit is idle.
- 2. Press ◀ or ▶ to choose ₩, then press **SELECT** or ▲.
- 3. Press ▼ or ▲ to choose the desired sensitivity level, then press **SELECT** to confirm your selection.

• If the screen is off, and the setting of sound-activated screen is **ON**, then LCD screen will be turned on automatically when VOX sensitivity is triggered.

- If you want to use a sound machine or white noise machine for natural white noise while using this
- baby monitor to check on your baby, you can:
- Lower the volume of your sound machine or white noise machine; or - Lower the sensitivity level of your baby monitor to medium (level 3) or below. Default level is the

Turn on or off the sound activation

When sound activation is on, as long as no sound is detected within 50 seconds, the parent

unit screen will turn off automatically to save power. When your baby unit detects a sound, which exceeds the selected sensitivity level, the sound activation triggers the parent unit screen to turn on automatically. When no sound is detected within 50 seconds, the screen will be off again.

- 1. Press **MENU** when the parent unit is idle.
- 2. Press ◀ or ▶ to choose 🍪 , then press SELECT or 🛦 .
- 3. Press ▼ or ▲ to choose on or off, then press SELECT to confirm your selection.

· If the sound sensitivity is set to the highest level, the parent unit screen may remain on continuously

even though sound activation is on. This depends on whether the baby unit detects any sounds.

Pan, tilt, zoom

You can pan and tilt the images or zoom in while viewing images from the baby unit.

- Press and hold ▲, ▼, ◀ or ▶ to pan or tilt the image upward, downward, leftward or
- Press ⊕ to zoom in.
- <u>Press and hold</u> ▲, ▼, ◀ or ▶ to pan or tilt the zoomed image upward, downward, leftward or rightward.
- Press
 ⊕ again to zoom out.

Talk

You can use the **TALK** function of the parent unit to comfort your baby.

- 1. Press and hold TALK on the parent unit. The TALK light turns on.
- 2. Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.
- 3. Release the **TALK** key to stop the broadcast.

• The parent unit speaker is muted during voice broadcast. Sound transmission from the baby unit resumes after TALK is released.

Monitor the temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature sensor. If the detected temperature is out of the preset temperature range, the parent unit will display an alert message.

Set temperature range

You can set the desired room temperature alert range. The minimum temperature can be set between 50 °F (10 °C) and 76 °F (24 °C). The maximum temperature can be set between 77 °F (25 °C) and 102 °F (39 °C).

1. Press **MENU** when the parent unit is idle.

SELECT to confirm your selection.

- 2. Press ◀ or ▶ to choose ♠, then press **SELECT** or ▲.
- 3. Press ▼ or ▲ to choose 📭, then press ◀.
- 4. Press ▼ or ▲ to choose MIN or MAX, then press SELECT. 5. Press \blacktriangledown or \blacktriangle to choose the desired minimum or maximum temperature, then press

Temperature alert tone

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if

- the detected temperature is out of range. 1. Press **MENU** when the parent unit is idle.
- 2. Press ◀ or ▶ to choose ♠, then press **SELECT** or ▲.

3. Press ∇ or \triangle to choose \triangle , then press **SELECT**.

- **Temperature format**
- You can choose to display the temperature in Fahrenheit (°F) or Celsius (°C). 1. Press **MENU** when the parent unit is idle.
- 2. Press ◀ or ▶ to choose ♠, then press **SELECT** or ▲. 3. Press ∇ or \triangle to choose \mathcal{L}_{F}^{c} , then press **SELECT**.
- 4. Press ▼ or ▲ to choose ♣ or ♠, then press **SELECT** to confirm your selection.

4. Press ▼ or ▲ to choose N or Off, then press SELECT to confirm your selection.

Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use. 2.8" Color LCD (QVGA 320x240 pixel) Channels Parent unit: 2405 - 2475 MAz zHM 2742 - 2042 :tinu yde8 Transmit frequency Crystal controlled PLL synthesizer requency control

Parent unit power adapter: Output: 6V DC @ 500mA


Baby unit power adapter: Output: 5V DC ⊚ 800mA

Parent unit: 3.6V Mi-MH battery

TECHNICAL SPECIFICATIONS

rower requirements

CCD

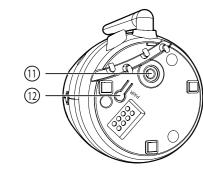

Light sensor Camera

4 Speaker Infrared LEDs

Temperature sensor

baby monitor

not respond

on the units?

normally?

FREQUENTLY ASKED QUESTIONS

for this to take place.

3 Infrared LEDs


6 Antenna For signal reception.

ON/OFF LED light • On when the baby unit is turned on

and is paired to the parent unit. Flashes when the baby unit is not

being viewed; or when the link to the parent unit is lost.

PARENT UNIT OVERVIEW

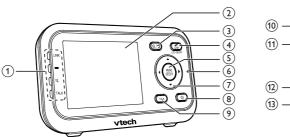

1 LED lights Indicate the different statuses of the parent unit. For details, refer to **Parent** unit lights.

2 LCD display

 Press to zoom in or out while viewing image. · Press to return to the previous

screen.

 Press to change the screen to view images from different baby units.

For VM3261-2 only

LCD ON/OFF

• Press and hold to turn on or off the

MENU/SELECT

 Press to enter the menu or submenu. • While in a sub-menu, press to

choose an item, or save a setting.

Microphone

• While in a menu, press to scroll up, or to enter an item's sub-menu. • Press and hold to pan or tilt the

image upward.

While in a menu, press to scroll

· Press and hold to pan or tilt the the image downward.

 While in a menu, press to choose the next item on the left, or enter into the submenu, if any.

• Press and hold to pan or tilt the image leftward.

· While in a menu, press to choose the next item on the right, or return to the main menu while in submenu.

 Press and hold to pan or tilt the image rightward.

U் On/off • Press and hold to power on.

Press and hold again to power off.

• Press and hold to talk to the selected baby unit.

• Turn down the volume when the

speaker is on 11 **VOL**+

 Turn up the volume when the speaker is on.

12 Speaker 13 Power jack

14 Battery compartment cover

15 Stand

PARENT UNIT ICONS

Status icons

Connection status • Yill or Yil displays when strong signal strength is detected between the baby unit and the parent unit

• Yii or Yi displays when moderate or low signal strength is detected between the baby unit and the parent unit.

Patrol mode

 Displays when the parent unit is in PATROL mode. For VM3261-2 only

2 3 or

· Displays the baby unit number of the baby unit that is being viewed.

ø

• Displays when the current image on the parent unit has zoomed in.

Displays when the baby unit being viewed has activated the night vision

· Displays when a lullaby is playing.

· Displays when talking back to the baby units from parent unit.

|||||| 6-level sound indicator

Displays the sound level according to the scales of loudness when there is sound transmitted from the baby unit.

• II (1 to 2 bars) indicates low sound level detected by the baby unit. • IIII (3 to 4 bars) indicates moderate sound level detected by the baby unit.

• |||||| (5 to 6 bars) indicates high sound level detected by the baby unit (e.g.

■ Mute alert

• Displays when the parent unit is talking to the baby unit. Real-time temperature

Displays the real-time temperature detected by the baby unit in Fahrenheit (°F) or Celsius (°C) (e.g. **57°F** or **14°C**).

animates when the battery is charging. displays solid when the battery is fully charged.

• displays when the battery is low and needs charging.

Displays the parent unit speaker volume level while adjusting.

AC power without battery Displays when the parent unit is connected to AC power without the battery.

Speaker volume

Main menu icons

You can change the brightness of the parent unit screen.

LCD screen off timer

You can set a specific time to screen off your parent unit.

You can also choose to display the temperature in Fahrenheit (°F) or Celsius (°C) on your parent unit.

Sound-activated screen

When the baby unit being viewed detects no sound, the parent unit screen stays off to save power. Once a sound is detected, the parent unit screen turns on automatically. It will then turn off again after 50 seconds of no sound detection.

microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit.

Patrol mode

• For VM3261-2 only

The battery is empty and needs to be recharged.



desired temperature alert range.



The parent unit is searching for baby units or the link between the baby unit and the parent unit is lost.

The parent unit is connected to AC power.

DIM MODE

The dim mode is to help you save the parent unit power. Your parent unit display will dim automatically after 10 minutes of inactivity, in which there is neither key pressed nor alert received from the baby unit.

■ Notes

· While the screen is dimmed, any keypress or alert message will trigger the screen to return to the preset brightness level. After 10 minutes of inactivity, it will dim again.



NIGHT VISION

room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and 🦈 appears on the screen.

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark

It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment

When the infrared LEDs are on, the images are in black and white. This is normal.

Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.

MOUNT THE BABY UNIT (OPTIONAL)

Your baby monitor comes ready for tabletop use. You can also choose to mount your baby monitor on the wall. See Mount the baby unit (optional) in the Quick Start Guide for the wall mounting instructions.



To keep this product working well and looking good, follow these guidelines: · Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or

fluorescent lamps). • DO NOT expose it to direct sunlight or moisture.

· Avoid dropping the product or treating it roughly. · Clean with a soft cloth

• DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.

· DO NOT use cleaning spray or liquid cleaners

· Make sure the baby unit and parent unit are dry before you connect them to the mains again.

STORAGE When you are not going to use the baby monitor for some time, remove the rechargeable battery from the

parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Conada.

States of America and Canada. What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you

This limited warranty does not cover: Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal
operation or handling, neglect, inundation, fire, water or other liquid intrusion; or

2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or

oduct to the extent that the problem is caused by use with non-VTech accessories; or

Product whose warranty/quality stickers, product sérial number plates or electronic sérial numbers have been removed 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the

Return the entire original package and contents including the Product to the VTech service location along with a
description of the malfunction or difficulty; and

purchase or receipt: and

3. Provide your name, complete and correct mailing address, and telephone number.

Other limitation:

gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Please retain your original sales receipt as proof of purchase.

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your and injury, including the following: question, visit our website at www.vtechphones.com, or contact 1 (800) 595-9511 for customer service. Follow all warnings and instructions marked on the product.

Adult setup is required.

1. Disconnect the power to the baby units and the parent unit. 2. Remove the batteries in the parent unit. Then, install the batteries again

3. Wait a few seconds before connecting power back to the baby units and the parent unit. 4. Turn on the baby units and the parent unit. 5. Wait for the parent unit to synchronize with the baby units. Allow up to one minute

9 **U ON/OFF switch**

11 Threaded socket

10 Power iack

12 **PAIR**

· Slide to turn on or off the baby unit.

· For wall mount installation use.

Your baby units and parent unit

provided are already paired.

Perhaps the parent unit is not connected to the power. Insert the appliance plug into Why don't the the parent unit and put the adapter in a wall socket. Then, press and hold $oldsymbol{0}$ to switch power-on light of the on the parent unit and to establish connection with the baby unit. baby unit and parent unit go on when I switch Perhaps the baby unit is not connected to the power. Insert the appliance plug into the

Try the following (in the order listed) for common cure:

baby unit and put the adapter in a wall socket. Then, slide the **ON/OFF** switch to **ON** to switch on the baby unit and to establish connection with the parent unit. Why doesn't my parent Make sure the power is not controlled by a wall switch. unit charge while Make sure the battery is correctly installed in your parent unit. connected to AC power? You may have used the battery for a long time. Replace a new battery. The screen is in black and white during night-time or in a dark room when the night Why is my screen in

screen when viewing my parent unit screen. Adjust the baby unit's angle or place the baby unit at a higher level baby at night? Why does the baby monitor produce a high-pitched noise? Why does the parent The baby units may be out of range. Move the parent unit closer to the baby units (but

unit beep?

Why don't I hear a

my baby cry?

sound/Why can't I hear

Why can't I establish a

connection lost every now

and then? Why are there

sound interruptions?

connection? Why is the not less than 3 feet).

Why do I get glare or

to prevent glare and blurry display. The parent unit and baby units may be too close to each other. Move the parent unit away from the baby units until the noise stops; OR Turn down the volume of your parent unit.

vision feature is activated. This is normal.

not less than 3 feet). The parent unit may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to 11 hours.

During night-time or in a dark room, the surroundings and other interfering factors,

like lightings, objects, colors and backgrounds may affect the image quality on your

The temperature of your baby's room may be too high or too low. The baby unit also picks up other sounds than those of your baby. Adjust the VOX Why does the parent unit react too guickly to sensitivity level to a lower level or lower the parent unit speaker volume. other sounds?

> use the parent unit menu to change sound sensitivity level to the highest level (level 5). You may have set a low VOX sensitivity level. See Adjust the sound sensitivity of the **baby unit** to set to a higher level. The baby units may be out of range. Move the parent unit closer to the baby units (but

The parent unit speaker volume may be too low. Press **VOL+** to increase the volume, or

Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible.

If you power on only one baby unit, your parent unit may display \$\mathbb{Z}\$ and **No link to** CAM #, and the LINK LED light flashes. Press VIEW to switch to the baby unit you have powered on.

IMPORTANT SAFETY INSTRUCTIONS

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock

This product is not a substitute for adult supervision of the infant. Supervising the infant is the parent's or caregiver's responsibility. This product could cease operating, and therefore you should not assume it will continue working properly for any given period of time. Further, this is not a medical device and should not be used as such. This

product is intended to assist you in supervising your baby.

Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or ming pool, or in a wet basement or shower. 5. CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT198555/BT298555) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the information in **The RBRC® sea**l.

Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Output: 5V DC 800mA; Parent unit power adapter: Output: 6V DC 500mA. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.

Jnplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. Unplug the power cords before replacing batteries. Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.

 This product should be operated only from the type of power source indicated on the marking label. If you are not sure
of the type of power supply in your home, consult your dealer or local power company.
 Do not overload wall outlets or use an extension cord. Do not place this product on an unstable table, shelf, stand or other unstable surfaces. 5. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or

Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

18. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltage or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.

You should test the sound reception every time you turn on the units or move one of the components. O. Periodically examine all components for damage. 21. Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery

2. Children should be supervised to ensure that they do not play with the product. 3. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or ck of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance

Use and store the product at a temperature between 32°F and 104°F.

monitors, cordless phones, scanners, etc.

by a person responsible for their safety.

Precautions for users of implanted cardiac pacemakers

onot expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source. Batteries should not be exposed to excessive heat such as bright sunshine or fire Make sure the baby unit(s) and the adapter cord(s) are always out of reach of the baby, at least 3 feet away from the

SAVE THESE INSTRUCTIONS

Other electronic products may cause interference with your baby monitor. Try installing your baby monitor a far away from these electronic devices as possible: wireless routers, radios, cellular telephones, infercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

Cardiac pacemakers (applies only to digital cordless devices): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

THE RBRC® SEAL

Reorient or relocate the receiving antenna.

could void the user's authority to operate the equipment.



The RBRC® seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC $^{\circ}$ makes it easy for you to drop off the spent battery at local retailers in the RBRC $^{\circ}$ program or at authorized VTech product service centers. Please call

1 (800) 8 BATTERY for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources. RBRC® and 1 (800) 8 BATTERY® are registered trademarks of the Rechargeable Battery Recycling Corporation.

FCC AND IC REGULATIONS

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance

not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with he FCC criteria. Caution: This Transmitter must be installed to provide a separation distance of at least 20cm from all persons. The

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face.

FCC RF radiation exposure statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: This device may not cause interference

This device must accept any interference, including interference that may cause undesired operation of the device. The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications This product meets the applicable Innovation, Science and Economic Development Canada technical specifications

The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should

be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. Use of other

CALIFORNIA ENERGY COMMISSION BATTERY CHARGING TESTING MODE

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption. Your baby monitor this baby infinitely contained the street and the street and the parent unit is set up to comply with the energy-conserving standards right out of the box. Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging. Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is powered off and charging.

FOR CETL COMPLIANCE ONLY

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie d'électrocution et de blessures corporelles, dont ceux qui suivent :

Observez toutes les instructions et mises en garde inscrites sur l'appareil.

N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.

Adaptateur de l'unité du bébé : Sortie : 5V CC 800mA

Adaptateur de l'unité du parent : Sortie : 6V CC 500mA

Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel Ne laissez aucun objet reposer ni appuyer sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser ordon d'alimentation ou de le piétiner. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'électricité.

Ne surchargez pas les prises de courant murales ni les rallonges électriques.

Vous devriez tester la réception chaque fois que vous mettez l'appareil en fonction. Examinez les composantes afin de vérifier si celles-ci ne sont pas endommagées. Soyez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les conversations peuvent être entendues par d'autres moniteurs de bébé, des téléphones sans fil, des scanneurs, etc.

CONSERVEZ CES INSTRUCTIONS Mises en garde

Utilisez et entreposez le produit à une température entre 0 $^{\circ}$ C (32 $^{\circ}$ F) et 40 $^{\circ}$ C (104 $^{\circ}$ F)

Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article el une serviette ou une couverture. D'autres équipements électroniques peuvent produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil.

Avis aux détenteurs de stimulateurs cardiaques

Stimulateurs cardiagues implantés dans l'organisme

posor à dos points do tonsion dange

Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque. Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.


Temperature You can choose to set the maximum/minimum temperature and turn on the emperature alert tone so that the parent unit beeps whenever the room temperature detected by the baby unit falls outside of the desired temperature

VOX sensitivity
With this feature With this feature, you can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the

You can select, play, or stop a lullaby.

You can monitor your baby in PATROL mode.

Warning icons and messages

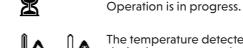

The temperature detected by the baby unit is higher/lower than the

Observez toutes les instructions et mises en garde inscrites sur l'appareil.
L'installation par un adulte est requise.

Ce produit ne remplace pas la surveillance adulte du nourrisson. La supervision du nourrisson est la responsabilité du parent ou de la personne qui s'occupe de l'enfant. Ce produit pourrait cesser de fonctionner et, par conséquent, vous ne devriez pas présumer qu'il continuera de fonctionner correctement pendant une période de temps donnée. De plus, il ne s'agit pas d'un instrument médical et ne devrait pas être utilisé comme tel. Ce produit est destiné à vous aider à superviser votre bébé. N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un soussol humide ou une douche.

MISE EN GARDE: Utilisez uniquement les piles fournies. Il existe un risque d'explosion si un autre type de batterie est utilisé pour l'unité Parents. N'utilisez que le bloc-piles rechargeable inclus ou le bloc-piles de rechange (BT1)98555/BT298555). N'incinérez pas les piles. Celles-ci risqueraient d'exploser. Jetez les piles usées selon les renseignements suivant le sceau du RBRC'.
N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque

Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuici est branché dans une prise au plafond, sous une table ou dans un meuble.

Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une processibilité de quieties à la prise de produit.

Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide pour le nettoyer.
Débranchez les cordons d'alimentation avant de remplacer le bloc-piles.

Ne placez pas cet appareil sur un chariot, meuble, trépied, support de montage ni table chancelant Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'appareil en le plaçant sur un lif, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni adessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air. N'enfoncez jamais d'objets à travers les ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits qui peuvent dégénérer en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit. Afin de réduire les risques d'électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous

Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil.

Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou me réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'in relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au fe Assurez-vous que le moniteur et le cordon de l'adaptateur sont toujours hors de portée des enfants, àau moins 1 mètre (3 pieds) de l'enfant ou du berceau, pour éviter tout risque de strangulation.

N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source

Les simulateurs cardiaques (ne s'applique qu'aux dispositifs numériques sans fil) L'organisme "Wireless Technology Research, LLC (WTR)", une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration de aliments et droques (FDA) des États-Unis, la firme WTR recommande aux médecins:

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci. Champs électromagnétiques (EMF)

LIMITED WARRANTY

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive

or (b) the time remaining on the original one-year warranty; whichever is longer What is not covered by this limited warranty?

3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna

7. Product returned without a valid proof of purchase (see item 2 below); or 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are

cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty. What must you return with the Product to get warranty service?

2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Never place the baby unit(s) inside the baby's crib or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket.

Pacemaker patients

Should keep wireless devices at least six inches from the pacemaker.